

KBL-SERIES

Peristaltic Metering Pump / Operation and Maintenance Manual







Table of Contents

1 I INTRODUCTION 1.1 - How to use this maintenance manual 1.2 - Training of the user and instructions 1.3 - Handling and Storage. 1.4 - Pump Specifications. 1.5 - Nameplate Detail 1.6 - Service Point information.	3 3 4
2 MODEL DESCRIPTION CHART. 2.1 - Model Code Explanation 2.2 - Materials Of Construction. 2.4 - Available Tube Assemblies 2.5 - Dimensions.	6 7 8
3 I OPERATING AND SAFETY PRECAUTIONS 3.1 - Safety Symbol Identification	9 9
4 I INSTALLATION 4.1 - Power Requirements 4.2 - Control Wiring 4.2.1 - I/O Board 4.3 - Best Practices. 4.3 - Pre Operation Checklist	11 11 12 13
5 GETTING STARTED 5.1 - User Interface 5.2 - Understanding the display (Home Screen) 5.2.1 - Welcome screen 5.3 - Keypad 5.4 - Icons 5.5 - Quick Start Guide	15 15 15 16 17

6 I OPERATING MODES
6.1 - Manual Mode
6.2.1 - SCADA
6.2.2 - Industrial protocols
6.2.2.1 - Modbus RTU
6.2.2.2 - Modbus TCP
6.2.3 - Batch / Dose Mode
6.2.3.1 - Dosing
6.2.3.2 - Batching
7 MAINTENANCE
7.1 - Routine Inspection
7.2 - Tube Replacement
7.4 - Spare Parts
8 TROUBLESHOOTING
8.1 - Troubleshooting Guide
8.2 - Error Codes
9 AGENCY & COMPLIANCE
10 I WARRANTY DECLARATION
10.1 - Flush & Decontamination



Thank you for purchasing an LMI KBL Peristaltic Metering Pump. Items supplied vary according to product configuration. Make sure that the items supplied and the information on the nameplate correspond to the order confirmation. Check the individual packaging and the product visually for damage caused by inappropriate handling during shipment. Contact your distributor immediately if any items are missing or damaged.

For more information please visit www.lmipumps.com

1.1 | HOW TO USE THIS MAINTENANCE MANUAL

This manual is specific to LMI PUMPS KBL series peristaltic pumps. It allows the users to install, to start and to carry out maintenance on these pumps. All persons, fitters and users must read this maintenance manual in its entirety. Documents concerning the gearbox, the electrical motors, as well as all other options (hose rupture detector, etc.) are provided in annex. Refer to the applicable section in this document to understand specific details regarding that component.

Your local LMI distributor can be contacted regarding information not contained in this manual. For a quicker reply, please provide the following information:

- » Pump Model Code
- » Pump serial number
- » Reference of order

1.2 | TRAINING OF THE USER AND INSTRUCTIONS

Every person who installs, uses or performs any operations of maintenance on the pump must be qualified and must have previously read this technical manual. Any temporary personnel must be supervised by skilled users. The order of execution of operations defined in this manual must be absolutely respected. Store this manual next to the pump so that it can be consulted at any time.

1.3 | HANDLING AND STORAGE

For best results, store this equipment with care according to these recommendations.

Pumps should not be placed in storage with tube element installed and under compression. Tube elements and accessories should be used within [two years] of date of manufacture. Store all pumps and accessories indoors in a dry environment with no exposure to UV light. Storage temperature: -40°C to 70°C (-40°F to 158°F).



1.4 | PUMP SPECIFICATIONS

 Operating Temperature.
 -10°C - 50°C (14°F - 122°F)

 Humidity.
 80% at 31°C, 50% at 40°C

 Altitude.
 Max. 2000m (6560 ft)

 Power Rating.
 KBL2 [180W], KBL3 [180W], KBL4 [300W]

 Power Required
 110-230 VAC, 50-60 hz

 Sound Level.
 <70 dB (A) at 1m</td>

 Maximum Flow Rate.
 KBL2 - 17 gph / 65 lph

 KBL3 - 34 gph / 130 lph
 KBL4 - 160 gph / 608 lph

 Maximum Pressure
 Up to 7.6 bar (110 psi)

 Speed Control.
 KBL: 200:1

 Motor Speed Range
 0-100%

 Weight
 35.6 lbs (16.1kgs)

 KBL4
 72 lbs (32.6kgs)

■ 1.5 | NAMEPLATE DETAILS

MODEL # KBL4-4-ACK1-1
SERIAL # 40124926411-02
POWER: 110-230 V 50/60 Hz 2.20 A
MAX FLOW: 56.5 GPH 210.0 LPH
MAX PRESSURE: 65 PSI 4.5 BAR
ASSEMBLED IN THE USA 201 IVYLAND RD IVYLAND PA 18974




1.6 | SERVICE POINT


Pumps are given a special QR code before shipping.

When maintenance is necessary, a plant engineer or technician uses a phone to scan the code, bringing up a list of replacement parts, service guidelines, a contact request, and other information.

You may obtain information about ordering spare parts, documentation, and manuals here.




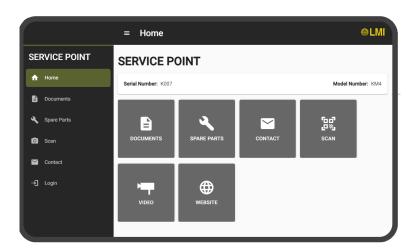

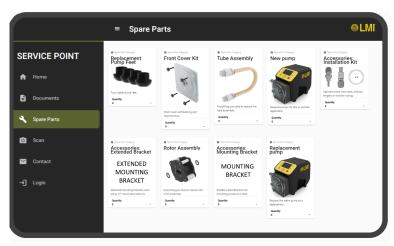




2.1 | MODEL CODE EXPLANATION

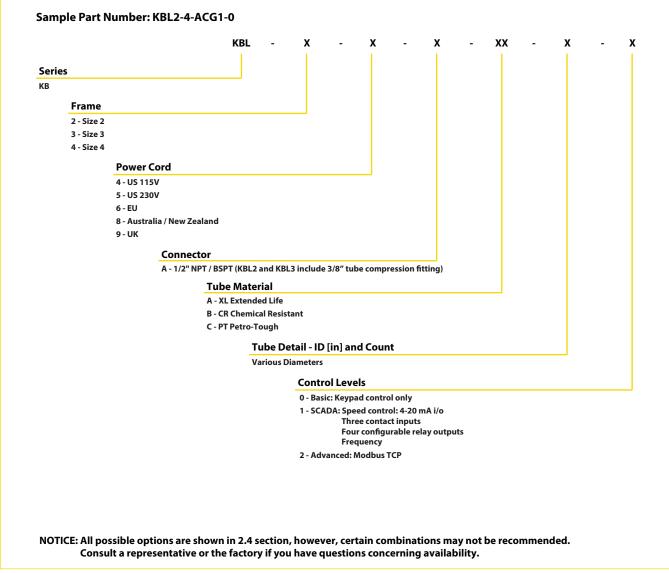

TUBE ASSEMBLY CODE EXPLANATION

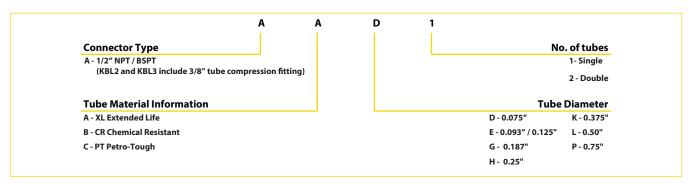



2.2 | MATERIALS OF CONSTRUCTION



MATERIAL OF CONSTRUCTION			
ENCLOSURE	POWDER COATED ALUMINUM		
PUMP HEAD	PBT THERMOPLASTIC		
COVER	PLOYCARBONATE		
ROTOR	PBT THERMOPLASTIC		
ROLLERS	NYLON		

MATERIAL OF CONSTRUCTION				
ROLLER BEARINGS	316 SS			
ROLLER SHAFT	316 SS			
MOTOR SHAFT	CHROME STEEL			
COVER SCREWS	PLASTIC / 316 SS			
TUBE CONNECTORS	PVDF			

LMI XL - Extended Life tubing has excellent acid and alkali resistance, and is compatible with numerous oxidizing agents such as sodium hypochlorite. Tygon is best for fatigue life and is the longest-lasting tube in compatible applications. Min/max temperature: 0-80°C (32-176°F).

LMI CR - Chemical Resistant is suited for handling strong acids and bases, and is virtually unaffected by most commercial sanitizers & cleaners. Min/max temperature: 0-54°C (32-130°F).

LMI PT - Petro-Tough can be used with fats and oils, lubricants, and some solvents. Min/max temperature: 0-54°C (32-130°F).



2.4 | AVAILABLE TUBE ASSEMBLIES

	MATERIAL	PART#	GPH	L/H	PSI	BAR
	XL KBL2 CR PT	AAD1	1.7	6.5	100	6.9
		AAE2	4.4	16.8	110	7.6
L/DL 0		AAG2	17.1	65.1	110	7.6
KBL2		ABH1	14.2	54	50	3.4
		ACG1	9.3	35.2	65	4.5
		ACG2	14.9	56.7	65	4.5


	MATERIAL	PART#	GPH	L/H	PSI	BAR
	AAD1	2.1	7.9	100	6.9	
		AAE2	4.7	18	100	6.9
	KBL3 CR	AAG2	18.9	72	110	7.6
		AAK1	33.2	126	100	6.9
KBL3		AAKL	33.2	126	30	2.1
		ABK1	28.4	108	50	3.4
		ACG1	10.1	38.4	65	4.5
PT	ACG2	18.2	69	65	4.5	
		ACK1	28.4	108	65	4.5

	MATERIAL	PART#	GPH	L/H	PSI	BAR
	XL	AAH1	28.4	108	100	6.9
		AAH2	53.7	204	100	6.9
		AAL1	99.5	378	50	3.4
KBL4	AAP1	158.5	600	30	2.1	
	ABK1	53.7	204	30	2.1	
	CR 	ABK2	125.5	477	30	2.1
		ACH1	39.5	150	65	4.5
PT	PT	ACK1	55.3	210	65	4.5
		ACK2	99.5	378	65	4.5

Flow rates shown are at maximum pump speed. For best tube life, select a large tube and run the pump slowly.

2.5 | DIMENSIONS

mm (Inch)

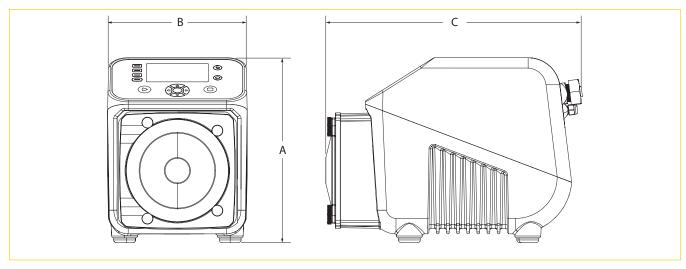

DIMENSION	KBL2	KBL3	KBL4
А	246 (10.4)	246 (10.4)	363 (14.3)
В	206 (8.125)	206 (8.125)	308 (12.125)
С	361 (14.2)	361 (14.2)	455 (17.9)
Weight kg (lb)	35.6 (16.1)	35.6 (16.1)	72 (32.6)



Operating and Safety Precautions

3.1 | SAFETY SYMBOL IDENTIFICATION







Do not scrub static spark Explosion Hazard



Crushing Hazard



Supplied With Product

3.2 | EXPLANATION OF SAFETY SIGNAL WORDS

DANGER! Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

WARNING! Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION! Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury or property damage.

NOTICE! Indicates information or a company policy that relates directly or indirectly to the safety of personnel or protection of property.

For safety purposes, this equipment should only be used by appropriately-trained personnel after they have read and understood this manual, and accounted for any and all potential hazards. If the pump is used in a manner not recommended by LMI Pump, the warranty may be voided and risk to equipment and personnel could occur.

The following precautions should be taken when working with LMI Pumps. Please read this section carefully prior to installation.

Protective Clothing: ALWAYS wear protective clothing, face shield, safety glasses and gloves when working on or near your metering pump. Additional precautions should be taken depending on the solution being pumped. Refer to Safety Data Sheets (SDS) precautions from your solution supplier.

Liquid Compatibility: Determine if the materials of construction included in the liquid handling portion of your pump are adequate for the solution (chemical) to be pumped. Always refer to the solution supplier and the LMI Pump Chemical Resistance Chart for compatibility of your specific pump. Contact your local LMI Pump distributor for further information.

Electrical Connections:

WARNING: To reduce the risk of electrical shock, the metering pump must be plugged into a properly grounded grounding-type receptacle with ratings conforming to the data on the pump control panel. The pump must be connected to a good ground. Do not use adapters! All wiring must conform to local electrical codes. If the supply cord is damaged, it must be replaced by the manufacturer, stocking distributor, or authorized repair center in order to avoid a hazard.

Flooding:

WARNING: Install this pump in a location where flooding cannot occur.

Ground Fault Circuit Interrupter:

WARNING: To reduce the risk of electric shock, install only on a circuit protected by a Ground Fault Circuit Interrupter (GFCI).

Line Depressurization: To reduce the risk of chemical splash during disassembly or maintenance, all installations should be equipped with line depressurization capability.



Over Pressure Protection: To ensure safe operation of the pump it is recommended that some type of safety / pressure relief valve be installed to protect the piping and other system components from failing due to excessive pressure.

Flow Display: The accuracy of the flow value as shown on the pump display is highly dependent on the specific application. Calibration is necessary in order to display an accurate measure of the flow.

Chemicals: Safety procedures for hazardous fluids must be put in place to protect against injury to personnel. Operation of the pump after failure of the peristaltic tube can cause buildup of chemical in the pumphead. Some pumphead parts may not be compatible with certain aggressive chemicals. This can cause damage to the pumphead components, and pump internals if chemical spills are not promptly addressed.

CAUTION: Spills of Dangerous chemicals should be cleaned up immediately.

Lifting, transportation, installation, starting-up, maintenance and repair should be performed by qualified personnel only. The unit should be electrically isolated while work is being carried out. There is a replaceable fuse on the I/O Board.



CAUTION!

3.3 | PRODUCT PARTS INFORMATION

Only allow LMI PUMP trained technicians to perform maintenance on the products. For additional information contact LMI PUMP or nearest authorized distributor. The use of other than genuine LMI PUMP replacement parts may result in safety hazards, decreased pump performance and increased maintenance and will invalidate all warranties.

The original language of this manual is English. Other languages are a translation of the original manual. Manuals can be downloaded from www.lmipumps.com

Refer all communications to the nearest LMI PUMP Office or Distributor.



4.1 | POWER REQUIREMENTS

Electric shock is a real possibility with any electrical device. Grounding conductors and grounding-type attachment plugs are included with pumps. To reduce risk of electric shock, ensure that it is connected to a properly grounded receptacle.

Use correct supply voltage. Using incorrect voltage will damage pump and may result in injury. Ensure that all electrical cable glands are placed and sealed appropriately. Never connect power and control cables together.

Equipment may start automatically. This pump has a user-selectable automatic restart capability that can either put the pump back in operation after a power outage or restart it completely. If in doubt, contact a certified electrician.

4.2 | CONTROL WIRING



Remove the pump terminal box for access to the control terminals.

Conduit holes are 3/8" and ½". Use appropriate cable glands to ensure proper sealing is achieved.

For safety, do not apply 110-230VAC to control terminals. Signals applied to terminals must be within appropriate limits. Damage from misapplied signals can destroy the pump and is not covered under warranty.



4.2.1 | I/O BOARD



INPUT:

DCI-1 – Dry Contact Input for remote stop signal

DCI-2 – Dry Contact Input pump direction

DCI-3 – Dry Contact Input for start signal

PWM - Input for Frequency (10-2000Hz) control

0-10V - Analog speed control

4-20 mA - Analog speed control

OUTPUT:

4-20 mA - Analog speed feedback signal

PWM - Frequency (10-2000Hz) speed feedback signal

RS-485: RS-485 terminal for MODBUS RTU

POWER: 110-230 VAC input

USB: USB-C interface for uploading software and downloading log files

ETHERNET: Ethernet cable port for industrial protocol communications

FUSE: Fuse compartment with replaceable 6.3A 250V AC/DC Fuse Cartridge, 5mm x 20mm

(Equivalent to Bel Fuse Inc. 5ST 6.3R)

RELAYS: 4 configurable digital form-C relays



4.3 | BEST PRACTICES

Peristaltic pumps are self-priming and do not allow backflow up to rated pressure. No valves are required in inlet or discharge line, however may be useful in some circumstances:

- » In case of a pumphead or tube failure, users can install a check valve between the pump and the discharge pipework to prevent pressurised fluid from backflowing.
- » Any valves in the process flow must be open before starting the pump. Include a pressure relief device in the discharge line prior to any valves to protect against damage caused by accidental operation against a closed valve.

Tube selection: Refer to the LMI Pump website for a chemical compatibility guide. For help with compatibility issues, contact a distributor or LMI Pump customer care.

In normal operation, the pump rotates in a counter-clockwise direction and the ports are left-facing. In this configuration, the bottom port is used for suction, and the top port is used for discharge. However, pump has no impact on performance if the pump is configured to run in either direction.

Install the pump on a stable and level horizontal surface. Pump is equipped with rubber feet, however if desired, the pump includes threaded holes on the bottom that could be used to bolt the pump in place. In order to allow the pump to dissipate heat, ventilation is crucial. Keep dirt and dust out of the pump enclosure.

Ambient temperature (surrounding temperature) should be within the recommended limits. Do not stack pumps.

Keep the pipes for suction and discharge as short and straight as possible.

Use bends with a big radius, at least four times the tube diameter.

Use of suction pipe or tube with a bore smaller than the pump tube bore should be avoided.

Connect the pump to the hard pipe using a flexible tubing portion to reduce any pulsation and make it easier to access the pumphead.

The pump can lift 10 feet or more of suction depending on which tube is installed. For maximum performance and longest tube life, a slightly flooded suction is recommended.

After changing a tube or any application or process, calibrate the pump. To keep accuracy, calibrate on a regular basis.

When pumping viscous fluids:

- » Use tubes or pipes several times larger than the pump tube for suction and discharge.
- » Run the pump slowly.
- » Maximize NPSHa



4.4 | PRE OPERATION CHECK LIST


CHECK LIST	
Pumps have been completely installed in their final location, piping has been connected, and motors are energized to allow	
running of the pumps.	
Proper electrical voltage is supplied and connected to pumps and controls	
Remote signal amperage and voltage is within pump limits.	
Pumps are freely accessible from all sides.	
Sufficient space is available to perform maintenance.	
Pumps are mounted on a clean, level platform.	
Pumps are stable.	
Pipework design is optimal for pump performance.	
Accessories are correctly installed.	
Flange covers/dust covers and caps are removed.	
Appropriate valves are open.	



5.1 | USER INTERFACE

A User interface is the Point of User -System interaction and communication on a device. This included Dispaly screen and Keypad. User interface enables users to effectively control the device they are interacting with.

- **5.2 | UNDERSTANDING THE DISPLAY**
- 5.2.1 | HOME SCREEN

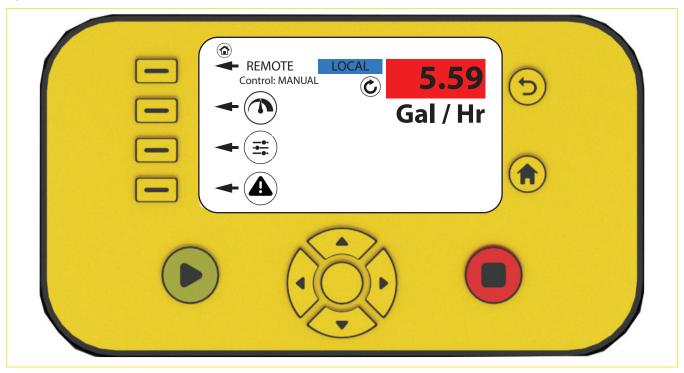


- ① Displays where control of pump is located (i.e. if pump is locally controlled, all network control is disabled. Remote control allows control from network or local).
- ② Current Pump Speed:
 - » Units displayed according to Menu options.
 - » Zero Speed is displayed as 0, Stop is displayed as 0 with Red background.
- ③ Units displayed here are what is selected in the Display Settings Screen.



5.3 | **KEYPAD**

LMI KBL-Series pumps are equipped with a 13-button keypad and color display.

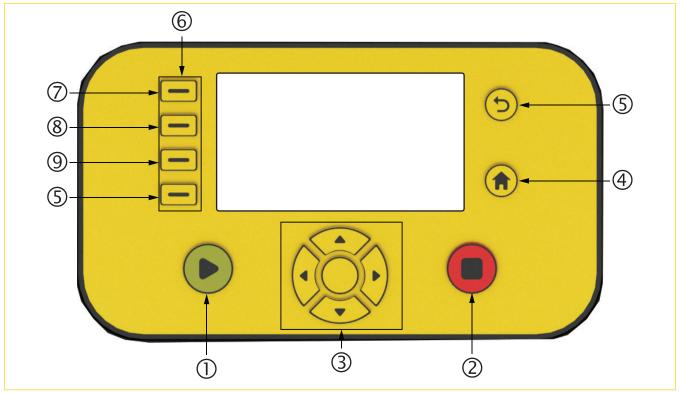

① RUN Button

- » When pump is OFF, press and hold to turn pump ON.
- » From Home screen, press to start pump. Press and hold to prime the pump.

② STOP Button:

- » Press to stop pump.
- » Press and hold to turn pump OFF.
- ③ NAVIGATION Buttons (Up and down cycle through menu items):
 - » Center button selects highlighted menu item. Also accepts value entered. In situations where user is in editing mode, pressing the center button, accepts value.
 - » When adjusting pump speed or other quantity, press of left or right to highlight the first digit. Additional presses move the cursor to adjacent digits. Up and down adjust the value, and select accepts the value.

4 HOME Button

- » Always returns to home screen. Edited data is saved.
- » From Home screen, press to start pump. Press and hold to prime the pump.

⑤ RETURN / ESCAPE Button:

- » Always returns to previous screen/previous mode (i.e. exiting editing mode)
- » Only accepted values are stored (through center button press). If center button was not pressed prior, previous value is valid.

© SOFT Buttons:

- » Use to select the menu item to the right that currently being displayed.
- ② LOC/REM toggles between local and remote control from home screen.
- Adjust pump speed from home screen
- Go to Settings screen from home screen
- More options (offers batch/dose mode and lock) from home screen



5.4 | ICONS

ICON	NAME	FUNCTION
	Pump Speed	Adjust pump speed in manual mode
•••	Settings	Settings menu contains access to system menu, tube settings, calibration, communications, and log files
	System	Adjust display settings, languages, display units, password and security, auto restart, and about information
	Tube Settings	Tube settings options
	Calibration	Enter calibration mode
	I/O Settings	Select remote control modes, i.e., SCADA, Pulse, and industrial protocols
i	About	View serial number and upgrade software
	Log	View and download pump operating history



ICON	NAME	FUNCTION
	Lock	Enables passcode security
3	Rotation direction CCW	Direction setting is counterclockwise
C	Rotation direction CW	Direction setting is clockwise




- **5.5 | QUICK START GUIDE**
- **5.5.1 | SETTINGS SCREEN**



5.5.1.1 | SYSTEM SCREEN




Selecting the System menu offers the following options:

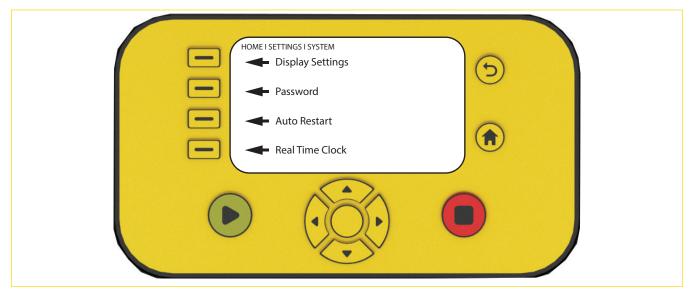






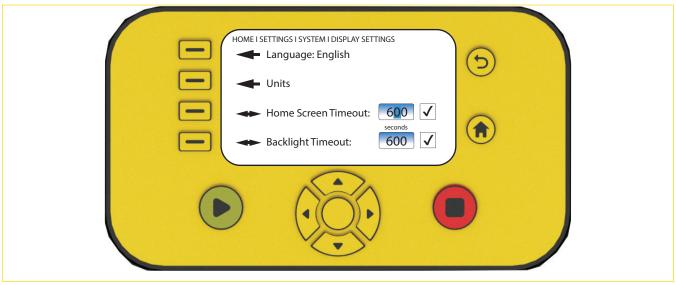


SYSTEM - DISPLAY SETTINGS - LANUGAGE:

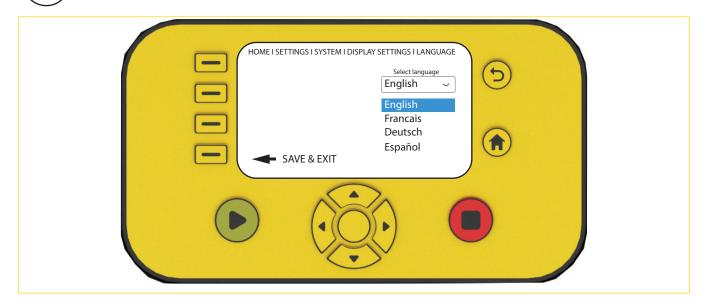






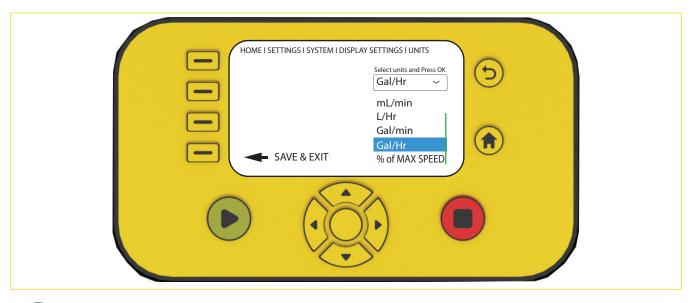




SYSTEM - DISPLAY SETTINGS - HOME SCREEN TIMEOUT AND BACKLIGHT:

Use soft buttons to select Home Screen or Backlight Timeout. Use navigation buttons to adjust values. Press SELECT to save.

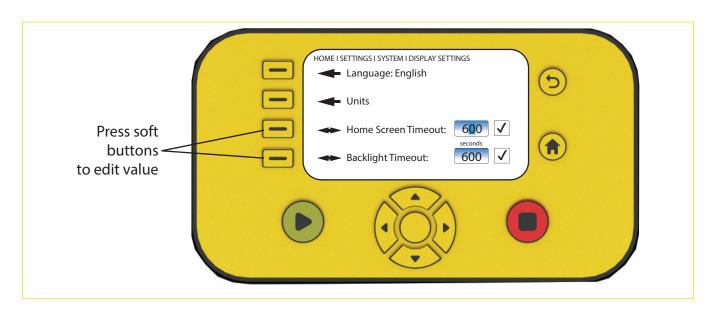






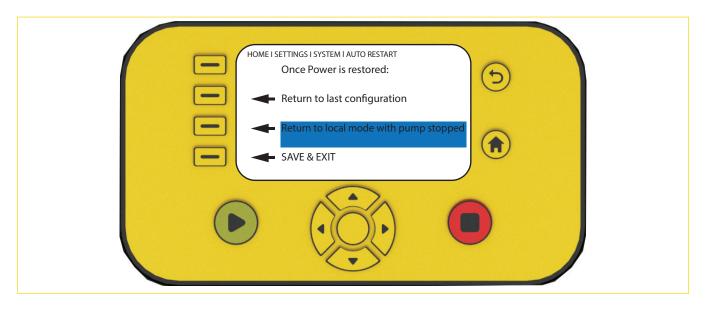

5.5.2 | TUBE CHANGE SCREEN

Tube change screen under settings menu gives users two options: install new tube element or view and edit maintenance interval settings.

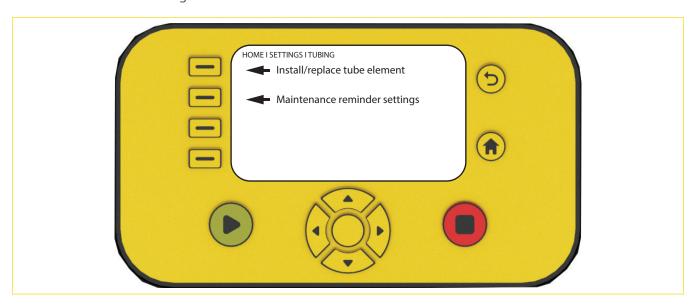

Press the soft button for Install new tube element to enter maintenance mode.






TUBE CHANGE – INSTALL NEW TUBE ELEMENT

The pump will display brief instructions for the tube change procedure. For complete instructions including safety protocols see Section 7.0 Maintenance, follow the on-screen prompts, or scan the pump QR code to access a tube change maintenance video online.



Press NEXT to continue

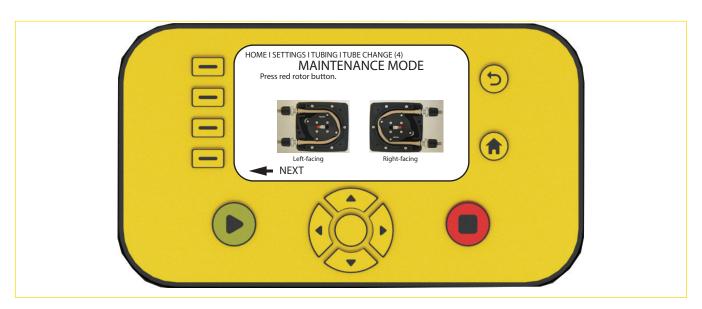


Press NEXT to continue





TUBE CHANGE – INSTALL NEW TUBE ELEMENT


The tube change is now complete. It is recommended to calibrate the pump after a new tube is installed, and reset the maintenance interval counter if desired.

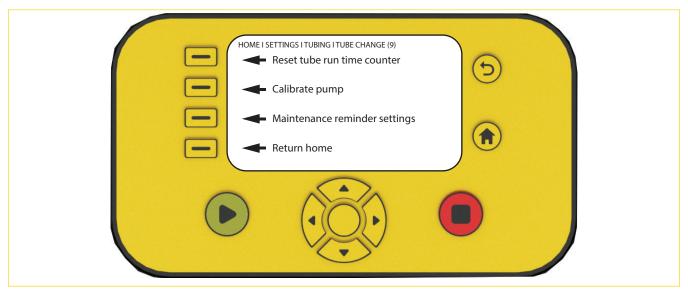



TUBE CHANGE – MAINTENANCE INTERVAL SETTINGS

The Maintenance Interval function enables the pump to generate a warning on the Home screen to alert the user that a pre-programmed number of run hours is approaching. This reminder will help avoid unplanned maintenance.

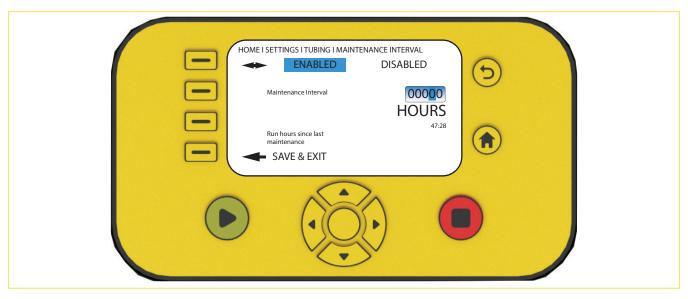





SETTINGS – TUBE CHANGE – MAINTENANCE INTERVAL SETTINGS

Once 90% of the maintenance interval has passed, the pump will display a notice on the home screen:






5.5.3 | CALIBRATION SCREEN



CALIBRATION SCREEN - CALIBRATION PROCEDURE

- » Enter Calibration Mode
- » Press start button. Pump will run for 30 seconds.
- » Pump will ask user to input volume pumped in mL
- » Input volume and press [save] **NOTE**: Resetting Factory Calibration will reset pump flow rate to initial tubeset default provided with pump.

TIP: Pump calibration will run at the current speed setup in manual mode. For best results, calibrate the pump at a speed where the pump would typically operate. Pump will not calibrate at zero speed.

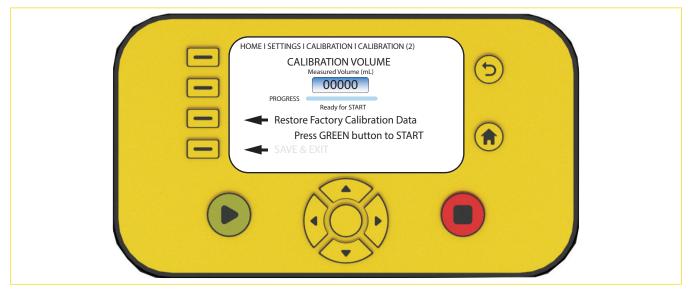








Select an option to modify parameters. Active I/O method is highlighted.

NOTE: The highlighted option is what the pump will automatically switch to when the LOCAL/REMOTE button is pressed from the home screen.

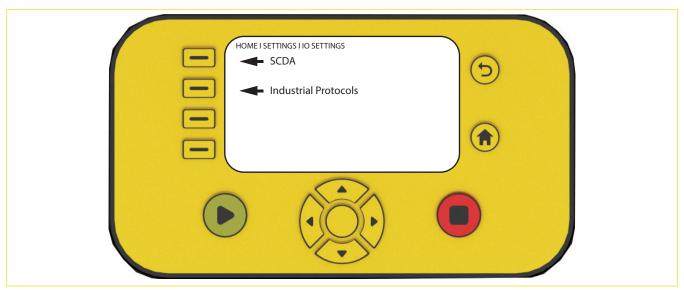

SCADA includes analog speed control, input contacts and speed feedback outputs.

Industrial Protocols includes Modbus RTU and Modbus TCP/IP.


Section 6.0 contains setup instructions for each I/O protocol.








Use this screen to export logged events to USB.

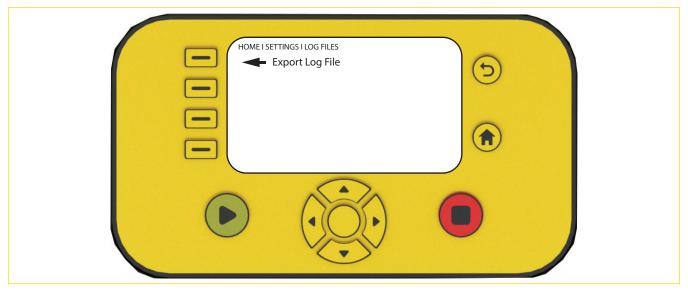

View alarms, warnings, and logged events on-screen by selecting the information icon from the home screen.

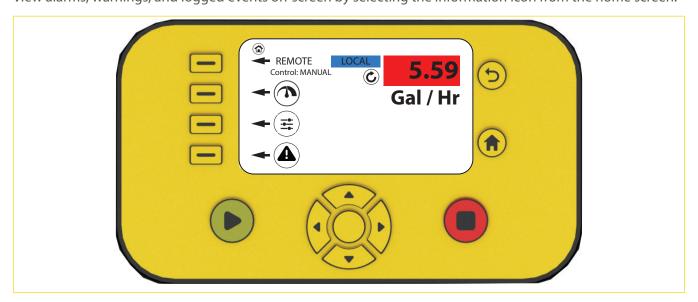








Use this screen to display pump serial number. This screen is also used for firmware updates and communications upgrades.

Contact your distributor or www.lmipumps.com for questions regarding firmwware updates and communication upgrades...

For communication upgrades, once provided an upgrade code, use navigation buttons to input code and press Select.

For firmware updates insert USB with provided update file and press Select. Pump will automatically reboot after installation

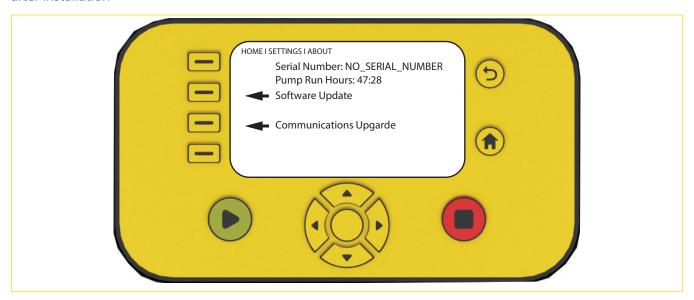




6.1 | MANUAL MODE

In manual mode, also called local mode, the pump is looking for speed, direction, and start/stop command at the keypad only. The pump will not accept any remote inputs other than remote stop (E-stop) while in Manual mode.


Press 'Pump Speed' soft button then use navigation buttons to adjust speed. Press center navigation button to save.

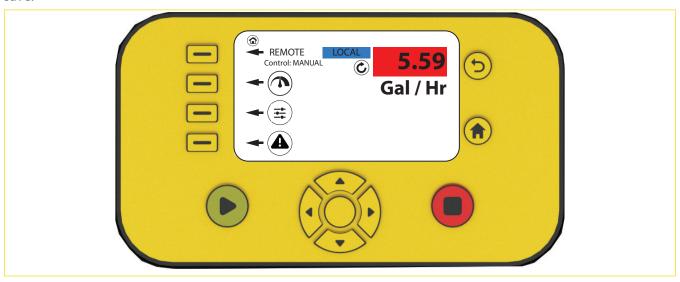


- 6.2 | REMOTE MODE
- 🛑 6.2.1 | SCADA

4-20 mA, 0-10VDC or Frequency (PWM)

Select SCADA from I/O Settings Screen shown in 5.5.4.

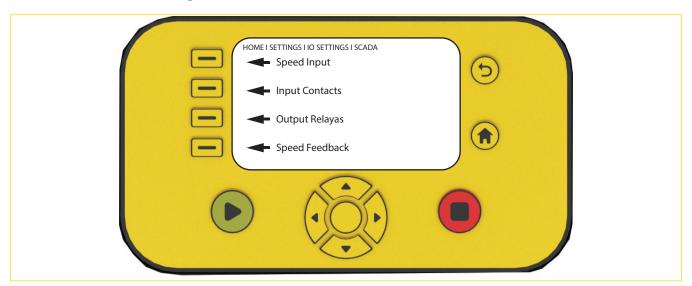


The pump can be configured to accept an analog signal for speed control. The pump can also scale the signal as needed. Speed input displays the scaled value for pump operation according to the the incoming signal value.

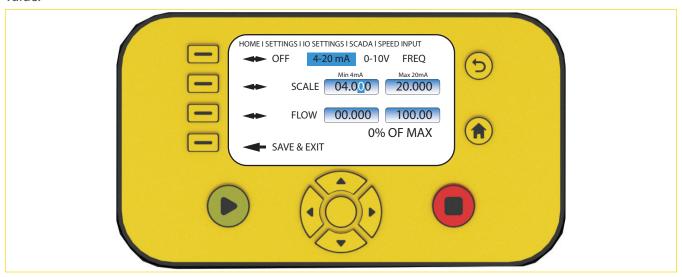

Digital inputs (dry contact):


- » Start/stop (NOTE: Using SCADA mode requies the use of the Start/Stop Contact. If none will be implemented, selecting NC (Normally Closed) will keep the contact always in a 'Start' mode)
- » Direction
- » Remote stop Allows pump to be stopped by an appurtenance such as a pressure switch, level switch, or an emergency stop button.

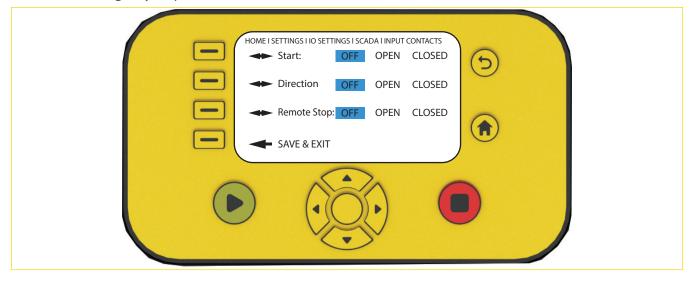




Four Configurable Relay outputs:

- » Disabled
- » General Alarm
- » In Auto
- » Door Open
- » Leak Detected
- » Pump Off
- » Remote Stop Alarm
- » Remotely Controlled

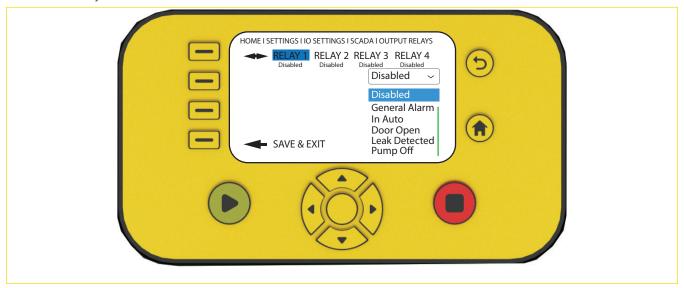

● 6.2.2 | INDUSTRIAL PROTOCOLS


Select Industrial Protocols from I/O Settings Screen shown in 5.5.4"

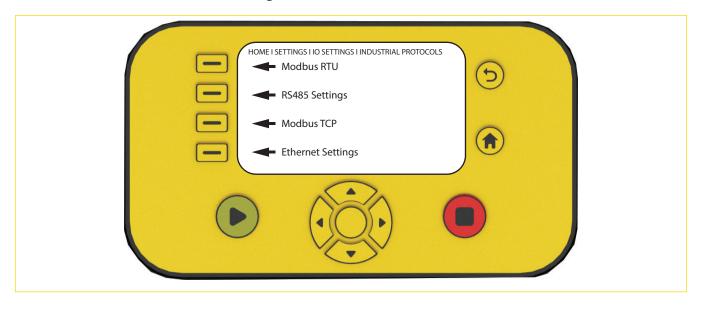




● 6.2.2.1 | MODBUS RTU

Configure device address to connect MODBUS RTU"

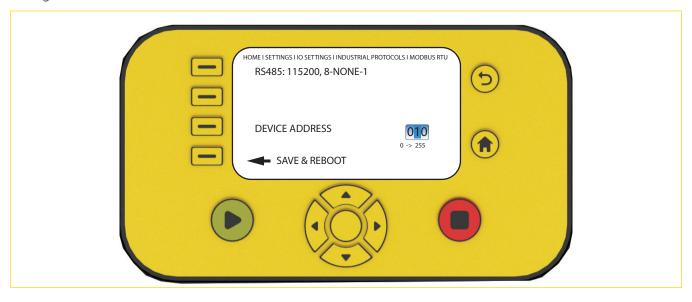

6.2.2.2 | MODBUS TCP


Configure TCP port to connect MODBUS TCP"

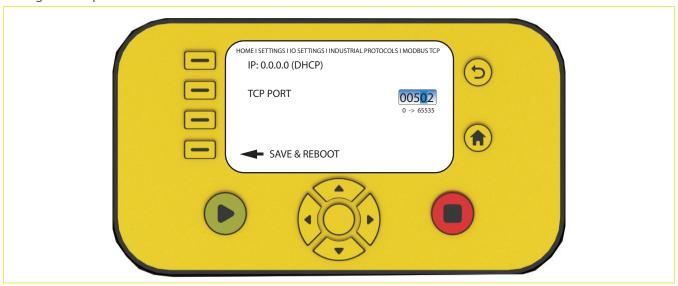




6.2.2.3 | RS 485

Configure RS485 BAUD, Parity and Stop parameters

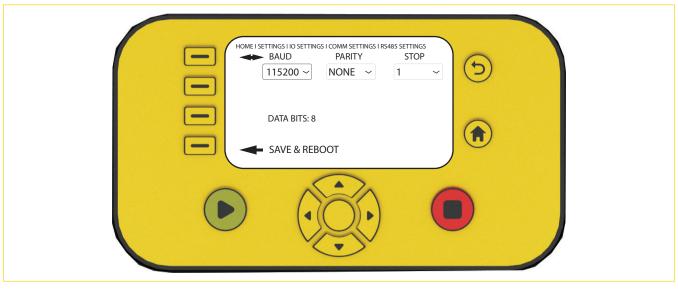

6.2.3 | BATCH / DOSE MODE

Navigate to dose settings by selecting the pump speed icon on the home screen.

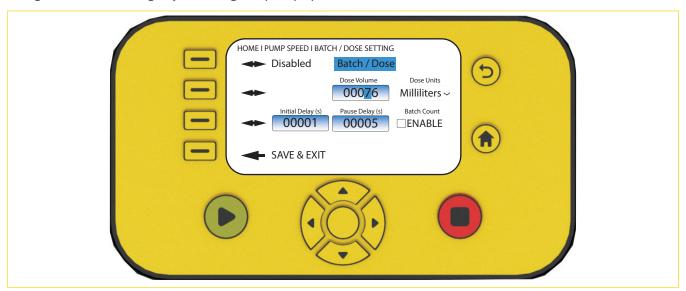

6.2.3.1 | DOSING

Fixed number of multiple doses with a programmable start delay and intra-dose time interval.

Batch size can be user specified & pump counts down until completion.




6.2.3.2 | **BATCHING**

In Dose mode, the doses will continue until the pump is manually stopped.


Minimum dose size will be limited to the volume of one revolution of the rotor. This is automatically calculated by the factory or calibrated values.

Dose speed will default to the manual set speed speed. However, for small doses, the pump will automatically slow down the pump if required to maintain accuracy.

Display in Batch Mode

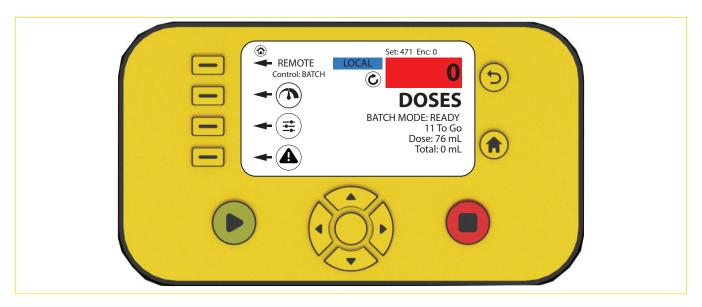

Display in Dose Mode

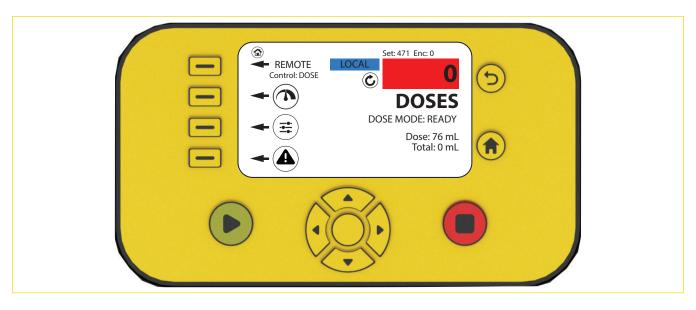



7.1 | ROUTINE INSPECTION

Pump and accessories should be inspected weekly.

Inspect all components for signs of leaking or chemical attack.

Replace damaged or worn components immediately.

Cracking, crazing, discoloration and the like during first week of operation are signs of chemical attack.

Inspect check valve and pressure relief valves periodically to ensure performance.

KBL pump motor and gearbox does not require maintenance.

Inspect optical sensor for obstructions or fluid

7.2 | TUBE REPLACEMENT

- » Isolate pump from the system, depressurize and drain suction and discharge lines.
- » In Maintenance Mode, jog the pump to index the rotor assembly such that the red button is between the tube connections.
- » Remove the front cover taking proper precautions:
 - * If the tube has failed, chemical or residue may be present in the pumphead and/or tube.
 - * If the tube has not failed, product is contained within the tube and will drain as the tube is removed.
- » Press the red button on the rotor to disengage the rotor assembly from the tube.





- » Remove the tube.
- » Inspect the pump head chamber, rotor assembly, and pump head cover. Wipe away any dirt and debris.
- » Install the new tube. Ensure the tube fittings are properly aligned and secure within the pumphead.
- » Jog pump to reengage rotor assembly.
- » Replace front cover.
- » Connect suction and discharge lines and open valves as appropriate.



7.3 | Rotor Assembly Replacement

- » Remove the tube assembly according to O&M Instructions.
- » The rotor assembly can be removed by hand.
- » Inspect and wipe down the pump head and shaft.
- » Inspect and wipe down the optical sensor
- » Install the new rotor assembly with new spacers as shown.





7.4 | SPARE PARTS

Contact your distributor or www.lmipumps.com for ordering information, or access LMI Service Point via the QR code on your pump.



♦ LMI KBL - SERIES Maintenance

KBL2 SPARE PARTS

Item	Description	Max	Flow		ax sure	Part Number
		gph	L/h	psi	bar	Hamber
1	Rotor Assembly for AD1 tubes, includes spacer bushings	31-11	-,	Į		K2-R-A
2	Tube Assembly, 1/2" NPT/BSPT and 3/8" tube compression, XL, 0.075" ID	1.7	6.5	125	8.6	K2-AAD1
1	Rotor Assembly for BH1 tubes, includes spacer bushings					K2-R-B
2	Tube Assembly, 1/2" NPT/BSPT and 3/8" tube compression, CR, 0.25" ID	14.2	54	50	3.4	K2-ABH1
1	Rotor Assembly for CG1 and CG2 tubes, includes spacer bushings					K2-R-C
2	Tube Assembly, 1/2" NPT/BSPT and 3/8" tube compression, PT, 0.187" ID	9.3	35.2	65	4.5	K2-ACG1
2	Tube Assembly, 1/2" NPT/BSPT and 3/8" tube compression, PT, 0.187 ID twin	14.9	56.7	65	4.5	K2-ACG2
1	Rotor Assembly for AE2 and AG2 tubes, includes spacer bushings					K2-R-D
2	Tube Assembly, 1/2" NPT/BSPT and 3/8" tube compression, XL, 0.125 ID twin	4.4	16.8	110	7.6	K2-AAE2
2	Tube Assembly, 1/2" NPT/BSPT and 3/8" tube compression, XL, 0.187 ID twin	17.1	65.1	110	7.6	K2-AAG2
3	Pump Head Cover with Bearing and Thumbscrews					K2-COVER
not shown	mounting bracket with fasteners					K2-STDB
not shown	extended mounting bracket with fasteners					K2-EXTB
not shown	rubber feet					K2-FEET
not shown	installation kit: suction and discharge tubing with foot valve and check valve					K2-INSKIT



KBL3 SPARE PARTS

Item	Description	Max Flow		Max Pressure		Part Number
		gph	L/h	psi	bar	
1	Rotor Assembly for AD1 tubes, includes spacer bushings					K3-R-A
2	Tube Assembly, 1/2" NPT/BSPT and 3/8" tube compression, XL, 0.075" ID	2.1	7.9	125	8.6	K3-AAD1
1	Rotor Assembly for KL tubes, includes spacer bushings					K3-R-B
2	Tube Assembly, 1/2" NPT/BSPT and 3/8" tube compression, XL, 0.375" ID	33.2	126	30	2.1	K3-AAKL
1	Rotor Assembly for CG1, CG2, and CK1 tubes, includes spacer bushings					K3-R-C
2	Tube Assembly, 1/2" NPT/BSPT and 3/8" tube compression, PT, 0.187" ID	10.1	28.4	65	4.5	K3-ACG1
2	Tube Assembly, 1/2" NPT/BSPT and 3/8" tube compression, PT, 0.187 ID twin	18.2	69	65	4.5	K3-ACG2
2	Tube Assembly, 1/2" NPT/BSPT and 3/8" tube compression, PT, 0.375" ID	28.4	108	65	4.5	K3-ACK1
1	Rotor Assembly for AE2, AG2, AK1, and BK1 tubes, includes spacer bushings					K3-R-D
2	Tube Assembly, 1/2" NPT/BSPT and 3/8" tube compression, XL, 0.125 ID twin	4.7	18	125	8.6	K3-AAE2
2	Tube Assembly, 1/2" NPT/BSPT and 3/8" tube compression, XL, 0.187 ID twin	18.9	72	110	7.6	K3-AAG2
2	Tube Assembly, 1/2" NPT/BSPT and 3/8" tube compression, XL, 0.375" ID	33.2	126	125	8.6	K3-AAK1
2	Tube Assembly, 1/2" NPT/BSPT and 3/8" tube compression, CR, 0.375" ID	28.4	108	50	3.4	K3-ABK1
3	Pump Head Cover with Bearing and Thumbscrews					K3-COVER
not shown	mounting bracket with fasteners					K3-STDB
not shown	extended mounting bracket with fasteners					K3-EXTB
not shown	rubber feet					K3-FEET
not shown	installation kit: suction and discharge tubing with foot valve and check valve					K3-INSKIT

KBL4 SPARE PARTS

Item	Description		Max Flow		ax sure	Part Number
		gph	L/h	psi	bar	
1	Rotor Assembly for AH1 and AH2 tubes, includes spacer bushings					K4-R-A
2	Tube Assembly, 1/2" NPT/BSPT, XL, 0.25" ID	28.4	108	125	8.6	K4-AAH1
2	Tube Assembly, 1/2" NPT/BSPT, XL, 0.25 ID twin	53.7	204	100	6.9	K4-AAH2
1	Rotor Assembly for BK1 and BK2 tubes, includes spacer bushings					K4-R-B
2	Tube Assembly, 1/2" NPT/BSPT, CR, 0.375 ID	53.7	204	30	2.1	K4-ABK1
2	Tube Assembly, 1/2" NPT/BSPT, CR, 0.375 ID twin	125.5	477	30	2.1	K4-ABK2
1	Rotor Assembly for CH1, CK1, and CK2 tubes, includes spacer bushings					K4-R-C
2	Tube Assembly, 1/2" NPT/BSPT, PT, 0.25" ID	39.5	150	65	4.5	K4-ACH1
2	Tube Assembly, 1/2" NPT/BSPT, PT, 0.375" ID	55.3	210	65	4.5	K4-ACK1
2	Tube Assembly, 1/2" NPT/BSPT, PT, 0.375 ID twin	99.5	378	65	4.5	K4-ACK2
1	Rotor Assembly for AL1 and AP1 tubes, includes spacer bushings					K4-R-D
2	Tube Assembly, 1/2" NPT/BSPT, XL, 0.5" ID	99.5	378	50	3.4	K4-AAL1
2	Tube Assembly, 1/2" NPT/BSPT, XL, 0.75" ID	157.9	600	30	2.1	K4-AAP1
3	Pump Head Cover with Bearing and Thumbscrews					K4-COVER
not shown	mounting bracket with fasteners					K4-STDB
not shown	extended mounting bracket with fasteners					K4-EXTB
not shown	rubber feet					K4-FEET



8.1 | TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE REASON	RESOLUTION			
		Run pump slower to allow more time for tube to restitute.			
	Viscosity too high.	Select larger tube and run slower.			
		Improve suction pressure.			
	Poor suction conditions.	Run pump slower to allow more time for tube to restitute.			
		Ensure fittings and connections are tight so that no air may enter suction line.			
		Clean suction strainer (if used).			
		Increase tank level and/or tank height.			
Low Flow Low Discharge Pressure		Apply best hydraulic practices - use large pipework, minimize pipe length, reduce obstructions, and use a suction accumulator.			
		Check suction line for obstructions.			
	Tube dimensions do not match the specifications of the rotor assembly.	Install matched roller assembly and tube.			
	Discharge pressure too high, causing	Reduce discharge pressure.			
	excessive backflow.	Decrease friction losses in discharge pipework.			
	Using third-party tubing.	Use only LMI tube assemblies.			
	Tube obstruction.	Check tube for obstructions.			
	Pump not properly calibrated.	Perform calibration under application conditions per O&M.			



8.1 | TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE REASON	RESOLUTION
	Tube not installed correctly.	Check installation of tube.
	Fluid temperature too high.	Reduce fluid temperature.
	Mechanical damage to tube from solids.	Use suction strainer to prevent solids from entering pump.
Tube Fails Prematurely.	Possible chemical attack.	Check compatibility of tube material with product being pumped.
	Operating pressure too high.	Reduce discharge pressure.
	Tube dimensions do not match the specifications of the rotor assembly.	Install matched roller assembly and tube.
	Tube dimensions do not match the specifications of the rotor assembly.	Install matched roller assembly and tube.
Excessive Noise and/or Vibration.	Loose fittings and/or pipework.	Ensure fittings are tight and pipework is properly secured and supported.
	Pulsation - wide swing in discharge pressure during operation.	Apply best hydraulic practices - use large pipework, minimize pipe length, reduce obstructions, and use a pulsation dampener.
Tube Leak Not Detected.	Optical sensor is dirty.	Clean contamination from the surface of the optical sensor.
	Rotor assembly is worn.	Check that all rollers are free to spin and that there is no inter- ference or binding of the rotor assembly within the pumphead or front cover.
	Fluid temperature too high.	Reduce fluid temperature.
High Pump Temperature	High discharge pressure or poor suction conditions.	Reduce discharge pressure and/or improve suction conditions.
		Operate within recommended limits.
	Ambient temperature too high.	Locate pump out of direct sunlight.
		Locate pump away from other equipment which may be hot.

















10.1 | FLUSH & DECONTAMINATION

Any returns of pumps or parts for repair or warranty inspection must be pre-approved by customer service. Also, the Flush and Decontamination document on the following pages must be completed and submitted to customer service for approval.

RETURN MATERIAL INFORMATION PAGE 1 OF 2

Select location where Flush & Decon was performed:

	C Ship To	
Company:Address:	Company:Address:	
Performed By: Email: Phone:	Performed By: Email: Phone:	
ump Model / Part #:	Quantity: Serial #:	
Company Name: Attn: City:Star	te:Zip Code:	
Flush & Decon must be submitted PRIOF	OVAL REQUIRED PROCESS: R to receiving RMA # with return shipping instructions the guarantine of equipment along with CHARGE BA	
Flush & Decon must be submitted PRIOF Failure to provide completed form will result in		



FLUSHING & DECONTAMINATION CERTIFICATION PAGE 2 OF 2

Process Liquid:	
Decontamination Liquid:	
Flushing Liquid:	
internally & externally.Completed form along with SDS must be sub instructions.	rained, flushed & decontaminated of all process fluids omitted PRIOR to receiving RMA # & return shipping ill result in quarantine of equipment along with CHARGE sterial.
	econtaminated and check valves are sent along with the cedures. All information contained herein is accurate.
Name (Print):	Title:
Signed:	
Date:	
	CHARGE BACK FEE – handling unknown material:
Return Address: Milton Roy Americas 201 Ivyland Road Ivyland, PA 18974 USA	PARTS\$1,500.00 PUMPS\$2,000.00
IMPORTANT Please return pump base if suctions needed to test and ship unit.	on check valve is lower than the bottom of the pump. This
INTERI To be completed by Milton Roy internal EHS.	NAL USE ONLY
RMA#: Approved for return: Received Date:	Yes No Approval Date:
L	J



About Ingersoll Rand Inc.

Ingersoll Rand Inc. (NYSE:IR), driven by an entrepreneurial spirit and ownership mindset, is dedicated to helping make life better for our employees, customers and communities. Customers lean on us for our technology-driven excellence in mission-critical flow creation and industrial solutions across 40+ respected brands where our products and services excel in the most complex and harsh conditions. Our employees develop customers for life through their daily commitment to expertise, productivity and efficiency. For more information, visit www.IRCO.com.