


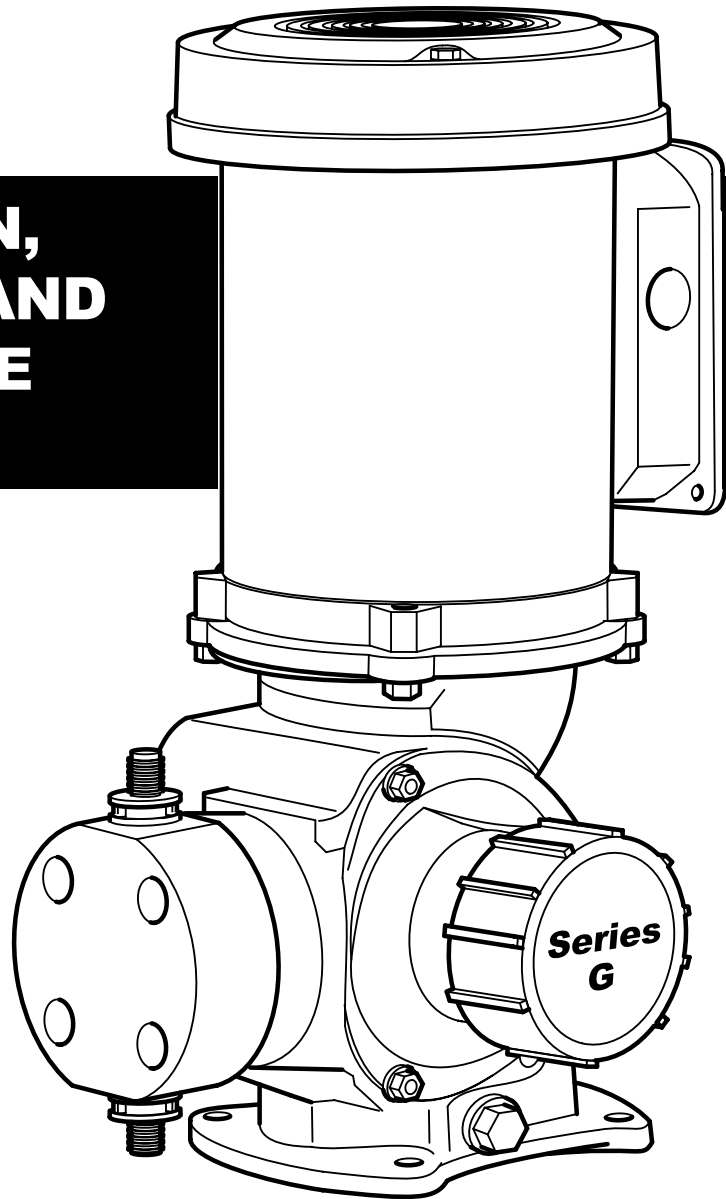

Series G Model D

METERING PUMP

INSTALLATION, OPERATION, AND MAINTENANCE MANUAL



Please record the following data for file reference

Tag Number(s): _____

Model Number: _____

Serial Number: _____

Installation Date: _____

Installation Location: _____

339-0080-000

ISSUED JULY 2011

Precautions Amendment to Pump Manual
For Pumps with PVC & 316SS Liquid Ends

WHEN USED IN SWIMMING POOLS OR SPAS/HOT TUBS
(ANSI/NSF 50)

1. Caution on Chemical Concentration:

There is a potential for elevated chemical concentration during periods of no flow, for example, during backwash in the system. Steps, such as turning the pump off, should be taken during operation or installation to prevent this. Contact your sales representative or distributor about other external control options to help mitigate this risk.

2. Flow Indicating Device:

To ensure operation of the pump it is recommended that some type of Flow Indicating Device be installed to measure water flow rates and be appropriate for the output of the pump. Contact your distributor or sales representative for further information.

3. Head Loss / Over Pressure Protection / Back Pressure-Anti-Siphon Valve:

3.1 Milton Roy metering pumps are positive displacement. Head loss is not applicable to the pump.

3.2 To ensure safe operation of the pump it is recommended that some type of safety/pressure-relief valve be installed to protect the piping and other system components from failing due to excessive pressure.

3.3 If you are pumping downhill or into low or no system pressure, a back pressure/anti-siphon device should be installed to prevent over pumping or siphoning. Contact your distributor or sales representative for further information.

4. Additional Operation and Installation Instructions for 316SS or PVC Liquid Ends:

4.1 Application of this pump to swimming pool/spas only evaluated to NSF/ANSI 50.

4.2 There is a potential for elevated chemical concentration during periods of no flow, for example, during backwash in the system. Steps, such as turning the pump off, should be taken during operation or installation to prevent this. See your sales representative or distributor about other external control options to help mitigate this risk.

4.3 Liquid Compatibility CAUTION: Determine if the materials of construction included in the liquid handling portion of your pump are adequate for the solution (chemical) to be pumped. ALWAYS wear protective clothing, face shield, safety glasses and gloves when working on or near your metering pump. Additional precautions should be taken depending on the solution being pumped. Refer to MSDS precautions from your solution supplier. Reference a Milton Roy *Material Selection Chart* for aid in selecting appropriate material of construction for fluids of your specific metering pump. Contact your sales representative or distributor for further information.

PLACE THIS AMENDMENT TO THE MACROY SD MANUAL (339-0080-000) BEHIND THE COVER SHEET (APRIL 2008)

TABLE OF CONTENTS


| SECTION DESCRIPTION | PAGE |
|--|-----------|
| Series G Model D Pump Model Number and Options | iii |
| 1.0 DESCRIPTION | 1 |
| 1.1 General Information | 1 |
| 1.2 Principles of Operation | 2 |
| 1.3 General Specifications | 3 |
| 2.0 INSTALLATION | 5 |
| 2.1 Unpacking | 5 |
| 2.2 Storage | 5 |
| 2.3 Safety Precautions | 5 |
| 2.4 Mounting | 6 |
| 2.5 Drip Collection | 6 |
| 2.6 Installation | 6 |
| 2.6.1 NPSH Considerations | 8 |
| 2.6.2 General Piping Considerations | 8 |
| 2.6.3 Suction Piping Considerations | 8 |
| 2.6.4 Discharge Piping Considerations | 9 |
| 2.7 Valves | 9 |
| 2.8 Electrical Connections | 10 |
| 3.0 OPERATION | 11 |
| 3.1 Start-Up Procedures and Checks | 11 |
| 3.2 Checking the Electrical Connection of the Motor | 11 |
| 3.3 Start-Up | 11 |
| 3.4 Capacity Calibration | 11 |
| 4.0 MAINTENANCE | 13 |
| 4.1 Preventative Maintenance | 13 |
| 4.2 Returning Pumps to the Factory for Repair | 13 |
| 4.3 Routine Maintenance | 13 |
| 4.4 Spare Parts | 14 |
| 4.4.1 Size SD2 and SD4 Liquid Ends - PVC, PVDF, Polymer, and H ₂ SO ₄ | 14 |
| 4.4.2 Size SD4 Liquid Ends - PVC, PVDF, Polymer, H ₂ SO ₄ , and Slurry | 15 |
| 4.4.3 Size SD2 and SD4 Liquid Ends - Stainless Steel | 15 |
| 4.4.4 Size SD7 and SD8 - Liquid Ends - PVC, PVDF, H ₂ SO ₄ , Polymer, and Slurry | 15 |
| 4.4.5 Size SD7 and SD8 - Liquid Ends - Stainless Steel | 16 |

| SECTION DESCRIPTION | PAGE |
|---|------|
| 4.5 Corrective Maintenance | 16 |
| 4.5.1 Check Valve Assemblies Replacement: Liquid Ends SD2 and SD4 - PVC, PVDF, and H ₂ SO ₄ | 16 |
| 4.5.2 Check Valve Replacement: Liquid End Sizes SD2 and SD4 - Polymer | 17 |
| 4.5.3 Check Valve Replacement: Liquid End Sizes SD2 and SD4 - Metallic | 17 |
| 4.5.4 Check Valve Replacement: Liquid End Sizes SD4 - Slurry | 18 |
| 4.5.5 Replacement of Ball, Seat, and Seal: Liquid End SD7 and SD8 - PVC and PVDF | 18 |
| 4.5.6 Check Valve Replacement: Liquid End Size SD7 and SD8 - Polymer | 19 |
| 4.5.7 Check Valve Replacement: Liquid End Size SD7 and SD8 - Slurry | 19 |
| 4.5.8 Check Valve Replacement: Liquid End Size SD7 and SD8 - Stainless Steel | 19 |
| 4.6 Diaphragm and Oil Seal Bellows Replacement | 20 |
| 4.6.1 Diaphragm Replacement: Liquid End Size SD2 | 20 |
| 4.6.2 Diaphragm Replacement: Liquid End Size SD4, SD7, and SD8 | 20 |
| 4.7 Oil Seal Bellows Replacement | 21 |
| 4.8 Restarting the Pump | 22 |
| 5.0 PARTS LIST | 23 |
| 5.1 Parts List for Drive | 25 |
| 5.2 Parts List for D2 Plastic Liquid End PVC, PVDF, H ₂ SO ₄ , and Polymer-NPT / PVC, PVDF - Tubing | 27 |
| 5.3 Parts List for SD2 Metallic Liquid End Stainless Steel-NPT | 28 |
| 5.4 Parts List for SD4 Metallic Liquid End Stainless Steel-NPT | 29 |
| 5.5 Parts List for SD4 Plastic Liquid End PVC, PVDF, H ₂ SO ₄ , Slurry, and Polymer-NPT / PVC, PVDF, and H ₂ SO ₄ - Tubing | 31 |
| 5.6 Parts List for SD7 and SD8 Plastic Liquid End PVC-NPT / Tubing, PVDF-NPT, Polymer-NPT, Slurry-NPT, & H ₂ SO ₄ -NPT | 35 |
| 5.7 Parts List for SD7 and SD8 316SS-NPT Liquid End | 38 |
| 6.0 TROUBLESHOOTING | 39 |

Change Bars

The areas in this manual which are different from previous editions are marked with change bars (as shown to the right of this paragraph) to indicate the addition of new or revised information.

MACROY D PUMP MODEL NUMBER AND OPTIONS

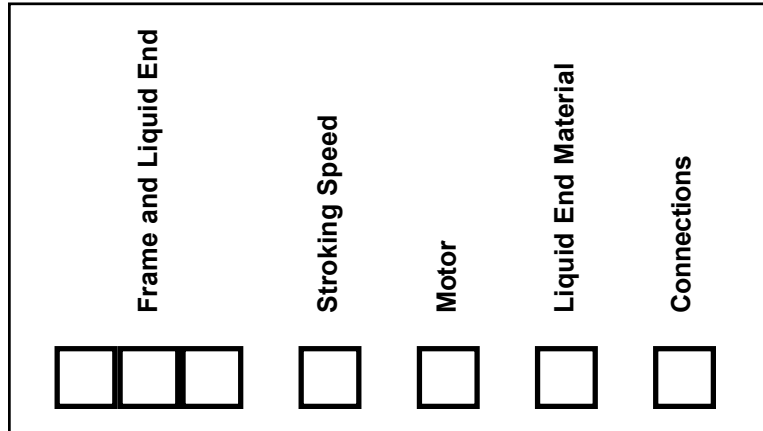

Frame and Liquid End (D Frame)

| <u>Code</u> | <u>Description</u> |
|-------------|-----------------------|
| SD2 | Max 0.7 GPH / 175 PSI |
| SD4 | Max 12.0 GPH |
| SD7 | Max 50 GPH |
| SD8 | Max 115 GPH |

Stroking Speed

| <u>Code</u> | <u>Description</u> |
|-------------|--------------------|
| 1 | 43 SPM |
| 2 | 86 SPM |
| 6 | 120 SPM |
| 3 | 173 SPM |

Motor

| <u>Code</u> | <u>Description</u> |
|-------------|------------------------------------|
| X | NEMA 56C Flange Less Motor |
| 8 | 115/230 VAC, 60 Hz, 1 PH, 1800 RPM |
| 9 | 115/230 VAC, 50 Hz, 1 PH, 1500 RPM |
| J | 230/460 VAC, 60 Hz, 3 PH, 1800 RPM |
| L | 220/380 VAC, 50 Hz, 3 PH, 1500 RPM |
| P | DC Variable Speed Drive |

Liquid End Material

| <u>Code</u> | <u>Description</u> |
|-------------|---|
| 2 | PVDF |
| 7 | 316ss |
| 8 | PVC |
| P | Polymer Service |
| L | Slurry Applications |
| N | H ₂ SO ₄ Applications |

Connections

| <u>Code</u> | <u>Description</u> |
|-------------|---|
| P | NPT |
| T | Tubing |
| B | Outgassing Liquid Applications (NPT) |
| C | Outgassing Liquid Applications (Tubing) |

THIS PAGE INTENTIONALLY BLANK

SECTION 1 DESCRIPTION

1.1 GENERAL INFORMATION

The Series G Model D is a reciprocating, chemical dosing pump capable of producing flows up to 115 gallons per hour (430 liters per hour) at pressures up to 175 psi (12 Bar). These pumps feature a mechanically actuated diaphragm liquid end, which eliminates the need for flow-restricting contour plates, and a stroke adjustment mechanism based on the variable eccentric principle instead of the traditional lost-motion design. It is designed for industrial service and offers an accuracy of $\pm 2\%$ of full rated flow between 10% and 100% of its flow range.


The basic pump components as illustrated in Figure 1 are:

- a drive device comprising a motor (1)
- a mechanical assembly (2)
- a liquid end (3).

An elastomeric bellows provides a leak-tight seal between the mechanical assembly and the liquid end.


Capacity adjustment is manually controlled by a stroke adjustment knob (4).

**Figure 1:
Pump Assembly**

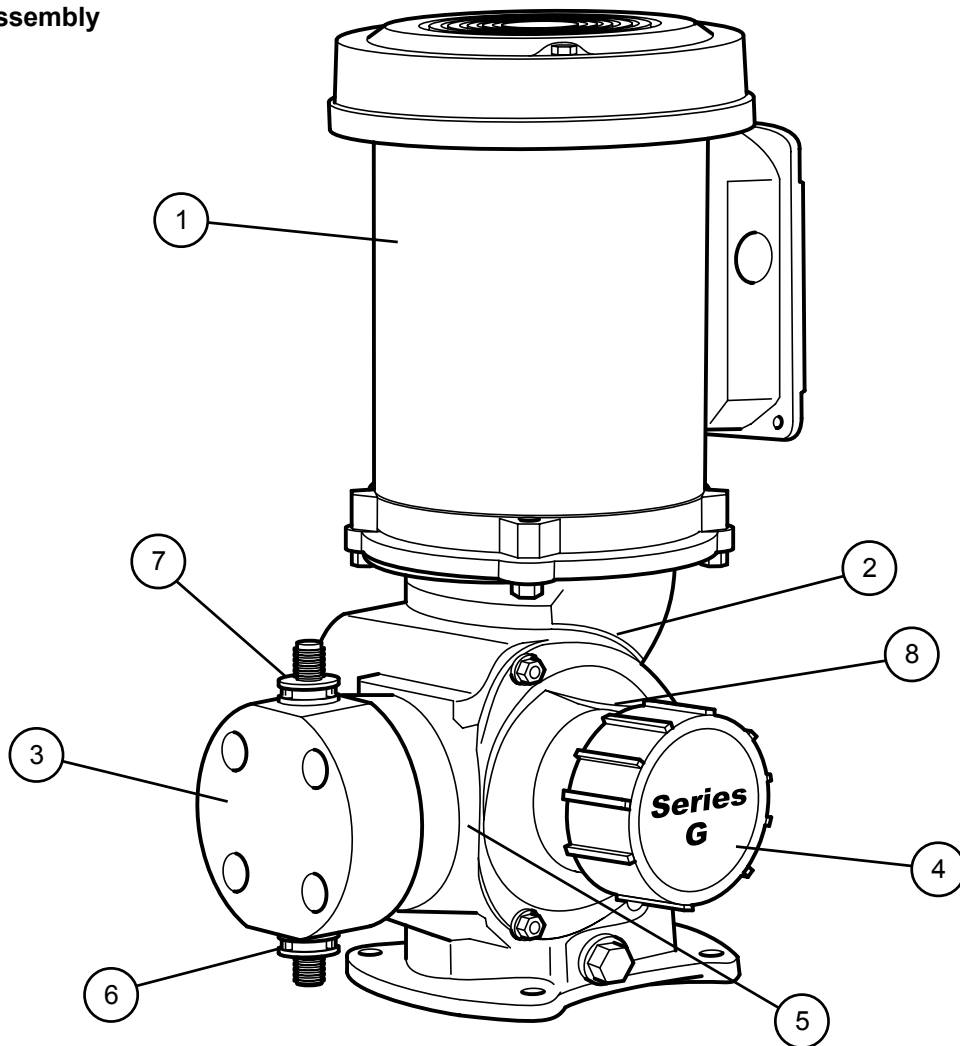

| | | | |
|---|------------------------|---|----------------------------------|
| 1 | Motor | 5 | Liquid End Mounting Assembly |
| 2 | Mechanical Assembly | 6 | Check Valve Assembly (Suction) |
| 3 | Liquid End | 7 | Check Valve Assembly (Discharge) |
| 4 | Stroke Adjustment Knob | 8 | Stroke Lock Knob |

**Figure 2:
Stroke Control Operating
Principle**

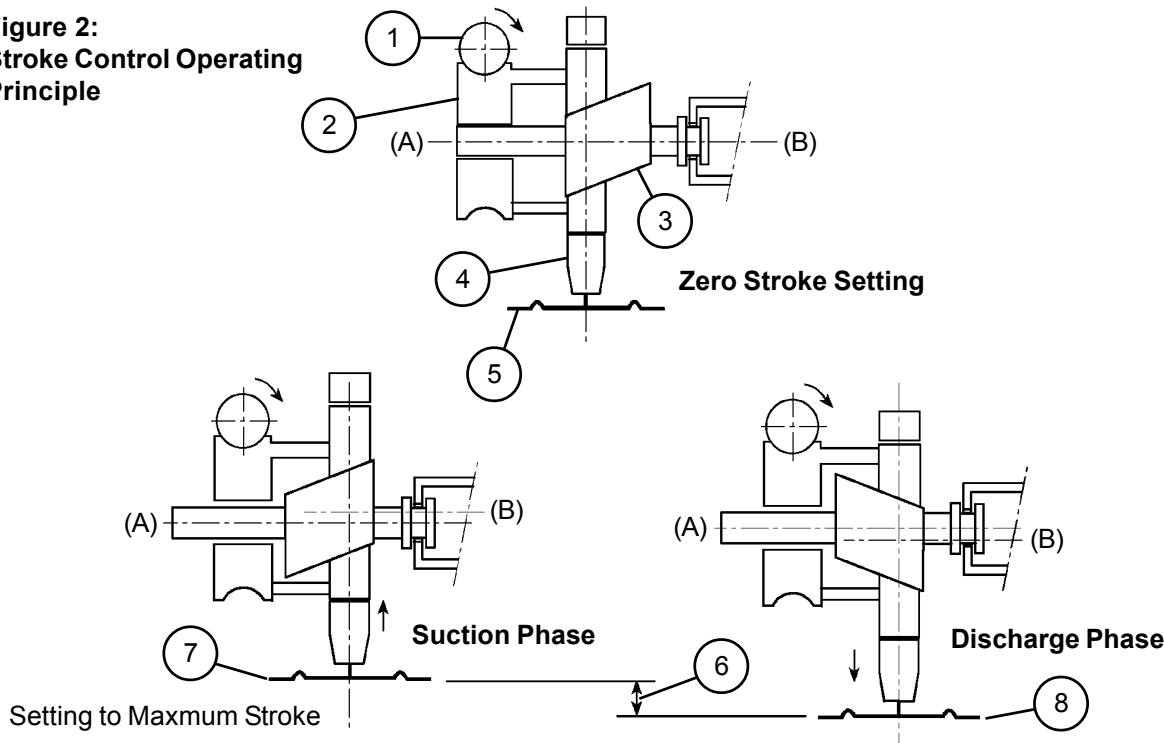

| | | | |
|---|----------------|---|--|
| 1 | Worm | 5 | Diaphragm |
| 2 | Worm Gear | 6 | Stroke: two times the distance between (A) and (B) |
| 3 | Eccentric | 7 | Position at rear neutral point |
| 4 | Connecting Rod | 8 | Position at forward neutral point |

1.2 PRINCIPLES OF OPERATION

Drive Assembly (See Figure 2)

The pump consists of two major assemblies; the drive and the liquid end. Pump delivery is a function of the drive's stroke rate, liquid end size and stroke length. Stroke length can be increased while the pump is running by counterclockwise turning of the stroke adjustment knob. The drive assembly works on the principle of a variable eccentric. The rotational motion of the motor is transmitted by the worm (1) to the worm gear (2) which is linked to an eccentric system (3). The eccentric system then converts the rotary gear motion into linear reciprocating motion of the connecting rod (4). At 0% capacity setting, the connecting rod axis (B) is aligned with the gear axis (A) and no movement of the connecting rod takes place. At 100% capacity setting, an eccentricity exists between the connecting rod axis (B) and the gear axis (A) which results in linear movement of the connecting rod and resulting pumpage.

Drive parts (See Fig. 8 for limited drive parts available) are no longer sold by Milton Roy. When drive parts are found to be bad a complete new painted pump body with all gears, stroke controls, etc. can be purchased from Milton Roy. The customer will only need to mount the liquid end/motor from the existing pump.

Mechanically Actuated Diaphragm Liquid End (See Figure 2)

The diaphragm assembly (5) is mechanically linked to the connecting rod (4) and has the same reciprocating motion. As the diaphragm starts back on the suction stroke, the pressure immediately drops inside the liquid end. When the pressure in the liquid end drops below the suction line pressure, the suction ball check is "pushed" upward and the process fluid in the suction line flows into the liquid end chamber (diaphragm head). When the suction stroke ends, the diaphragm movement momentarily stops and the pressure in the liquid end equalizes with the pressure in the suction line causing the suction ball check to reseal.

NOTE: It is important that the pressure in the liquid end remain above the vapor pressure of the process fluid during the suction stroke. If the fluid pressure drops below the vapor pressure, cavitation will occur which will have a negative impact on the performance of the pump. If you suspect the possibility of cavitation, contact your dealer for assistance.

As the diaphragm starts forward on the discharge stroke the pressure immediately rises inside the liquid end. When the liquid end pressure rises above the discharge line pressure, the discharge ball check is “pushed” upward and the process fluid in the liquid end flows into the discharge line. When the discharge stroke ends, the diaphragm momentarily stops again. The pressure in the liquid end equalizes with the discharge line pressure and the discharge ball check reseats. The cycle then starts again.

PAINT:

Power Coating

SUCTION LIFT:

6.6 Ft (2 meters) of water column maximum

11.5 psia minimum internal pressure (3.2 psi maximum vacuum)

1.3 GENERAL SPECIFICATIONS

WEIGHT:

38 lb (17.2 kg)

FLOW RATE:

Up to 115 GPH (430 L/H)

PRESSURE:

Up to 175 PSIG (12 BAR)

LIQUID END TYPE:

Mechanically Actuated Diaphragm

DRIVE TYPE:

Variable Eccentric

STEADY STATE ACCURACY:

±2% of pump full rated capacity between 10% and 100% of rated capacity.

CAPACITY ADJUSTMENT:

Lockable stroke adjustment knob is adjustable from 0% to 100% while pump is running.

LUBRICATION:

Drive is lubricated in an oil bath (Mobil SHC 629, 1 Quart).

TEMPERATURE:

Ambient and Liquid:

122 °F (50 °C) Maximum

14 °F (-10 °C) Minimum

THIS PAGE INTENTIONALLY BLANK

SECTION 2 INSTALLATION

2.1 UNPACKING

Pumps are shipped f.o.b. factory or representative warehouse and the title passes to the customer when the carrier signs for receipt of the pump. In the event that damages occur during shipment, it is the responsibility of the customer to notify the carrier immediately and to file a damage claim. Carefully examine the shipping crate upon receipt from the carrier to be sure there is no obvious damage to the contents. Open the crate carefully so accessory items fastened to the inside of the crate will not be damaged or lost. Examine all material inside the crate and check against packing list to be sure that all items are accounted for and intact.

2.2 STORAGE

Short Term Storage (Less than 6 Months)

It is preferable to store the material under a shelter in its original package to protect it from adverse weather conditions. In condensing atmospheres, follow the long term storage procedure.

Long Term Storage (Longer than 6 Months)

The primary consideration in storage of pump equipment is to prevent corrosion of external and internal components. This corrosion is caused by natural circulation of air as temperature of the surroundings change from day to night, day to day, and from season to season. It is not practical to prevent this circulation which carries water vapor and other corrosive gasses, so it is necessary to protect internal and external surfaces from their effects to the greatest extent possible.

When the instructions given in this section are completed, the equipment is to be stored in a shelter; protected from direct exposure to weather. The prepared equipment should be covered with a plastic sheet or a tarpaulin, but in a manner which will allow air circulation and prevent capture of moisture. Equipment should be stored 12 inches or more above the ground.

If equipment is to be shipped directly from the factory into long term storage, contact the factory to arrange for factory preparation.

Pump Drive

1. Remove motor and flood the gearbox compartment (Item 2 in Figure 1) with a high grade lubricating oil/rust preventative such as Mobile Oil Corporation product Mobilarma 524. Fill the compartment completely to minimize air space and water vapor condensation. After storage, drain this material and refill the equipment with the recommended lubricant for equipment commissioning.
2. Brush all unpainted metal surfaces with multipurpose grease (NLGI grade 2 or 3). Store these unattached.

Electrical Equipment

1. Motors should be prepared in the manner prescribed by their manufacturer. If information is not available, dismount and store motors as indicated in step 3 below.
2. Dismount electrical equipment (including motors) from the pump.
3. For all electrical equipment, place packets of Vapor Phase Corrosion Inhibitor (VPCI) inside of the enclosure, then place the entire enclosure, with additional packets, inside a plastic bag. Seal the bag tightly.

2.3 SAFETY PRECAUTIONS

WARNING

WHEN INSTALLING, OPERATING, AND MAINTAINING THIS SERIES G PUMP, KEEP SAFETY CONSIDERATIONS FOREMOST. USE PROPER TOOLS, PROTECTIVE CLOTHING, AND EYE PROTECTION WHEN WORKING ON THE EQUIPMENT AND INSTALL THE EQUIPMENT WITH A VIEW TOWARD ENSURING SAFE OPERATION. FOLLOW THE INSTRUCTIONS IN THIS MANUAL AND TAKE ADDITIONAL SAFETY MEASURES APPROPRIATE TO THE LIQUID BEING PUMPED. BE EXTREMELY CAREFUL IN THE PRESENCE OF HAZARDOUS SUBSTANCES (E.G., CORROSIVES, TOXINS, SOLVENTS, ACIDS, CAUSTICS, FLAMMABLES, ETC.).

CAUTION

THE PERSONNEL RESPONSIBLE FOR INSTALLATION, OPERATION AND MAINTENANCE OF THIS EQUIPMENT MUST BECOME FULLY ACQUAINTED WITH THE CONTENTS OF THIS MANUAL.

ANY SERVICING OF THIS EQUIPMENT MUST BE CARRIED OUT WHEN THE UNIT IS STOPPED AND ALL PRESSURE HAS BEEN BLED FROM THE LIQUID END. SHUT-OFF VALVES IN SUCTION AND DISCHARGE SIDES OF THE LIQUID END SHOULD BE CLOSED WHILE THE UNIT IS BEING SERVICED. ACTIONS SHOULD BE TAKEN TO ELIMINATE THE POSSIBILITY OF ACCIDENTAL START-UP WHILE SERVICING IS TAK-

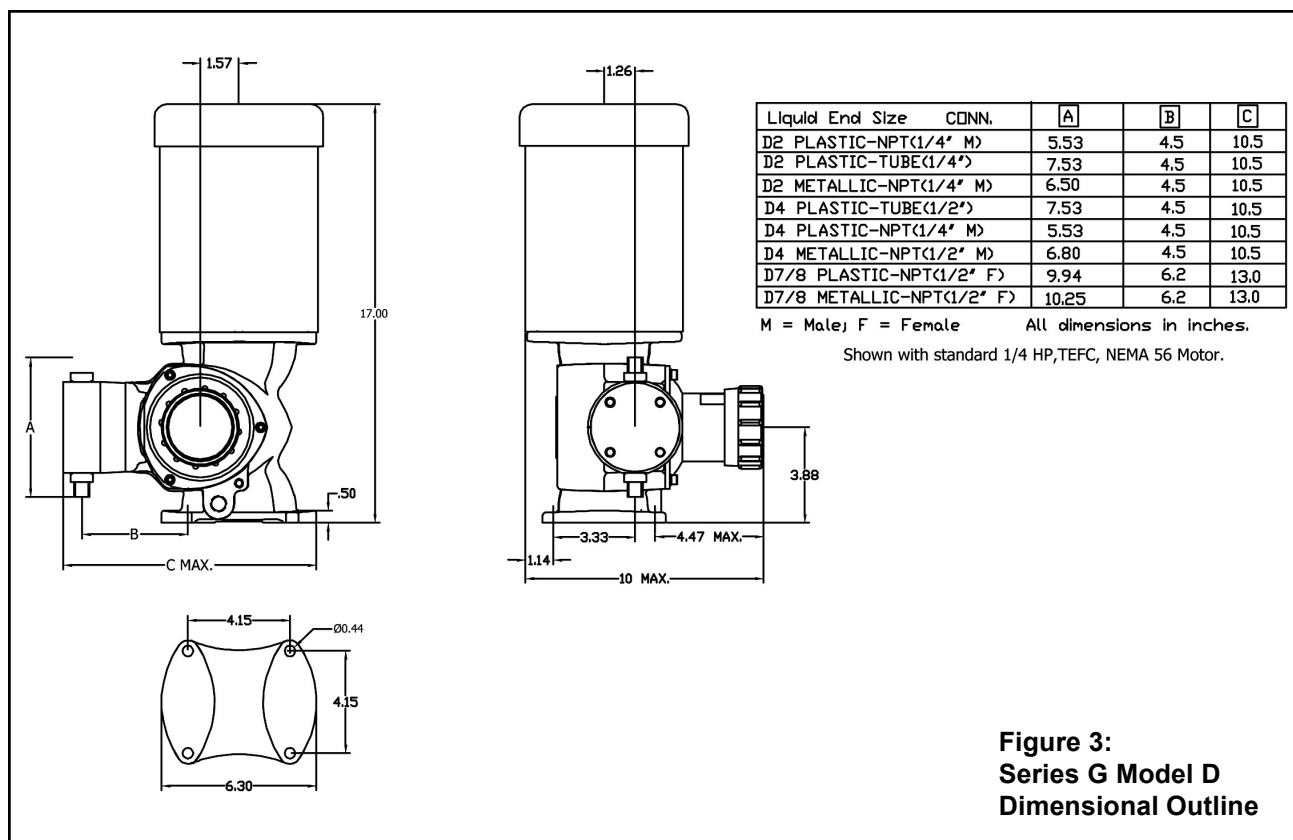


Figure 3:
Series G Model D
Dimensional Outline

ING PLACE. A NOTICE SHOULD BE POSTED BY THE POWER SWITCH TO WARN THAT SERVICING IS BEING CARRIED OUT ON THE EQUIPMENT. SWITCH OFF THE POWER SUPPLY AS SOON AS ANY FAULT IS DETECTED DURING OPERATION (EXAMPLES: ABNORMALLY HIGH DRIVE TEMPERATURE, UNUSUAL NOISE, DIAPHRAGM FAILURE).

2.4 MOUNTING

Support the pump firmly in a level position on a solid, vibration-free foundation. The pump should preferably be positioned with the base above floor level to protect the pump from wash downs and to provide easier access for service. Be sure to allow enough space around the pump for easy access during maintenance operations and pump adjustments.

The pumps are provided with mounting holes to accommodate anchor bolts. Refer to Figure 3 for mounting hole dimensions.

Pumps installed outdoors should be protected by a shelter.

2.5 DRIP COLLECTION

In the event of a failure of the diaphragm or oil seal bellows, provisions need to be made to contain the process fluid or pump oil. This is particularly important when handling fluids which may be harmful to plant personnel.


To collect fluid in the event of a diaphragm or oil seal rupture, (See Figure 1) position a tray under the plain hole located at the bottom of the liquid end mounting assembly (5). For SD7 or SD8 pumps, position tray under tube fitting located at bottom of liquid end mounting assembly. Alternatively, a tube may be installed onto this tube fitting to drain any leakage to a suitable container.

2.6 INSTALLATION

Figure 4 displays typical installations (both correct and incorrect). Figure 5 illustrates the recommended piping and accessories in a metering pump installation.


As illustrated in the upper right portion of Figure 4, there must be no swan-necks or stagnant volumes in the suction line. In this illustration, the loop at the top of the tank forms an air trap. Eventually, air or gases will bubble out of solution and accumulate in the trap leading to a loss of prime condition.

Figure 4:
Typical Installation

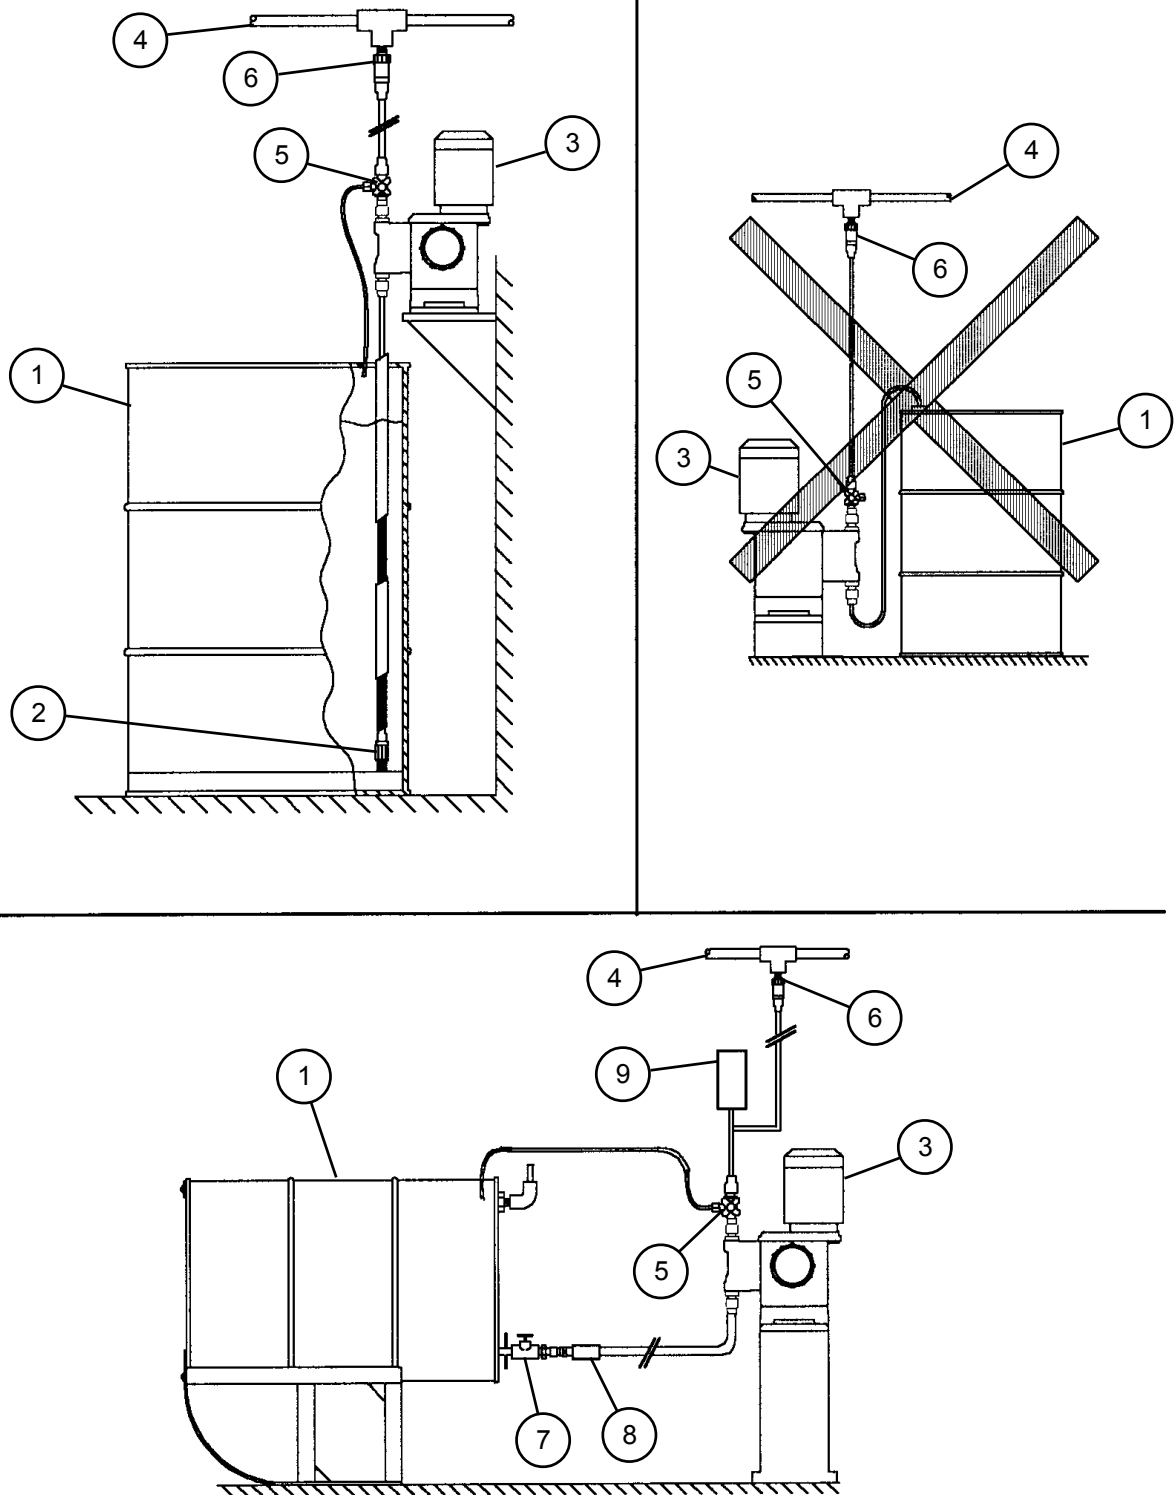

| | | | |
|---|--------------------------|---|------------------|
| 1 | Tank | 6 | Injection Nozzle |
| 2 | Foot Valve (with Filter) | 7 | Shut-off Valve |
| 3 | Metering Pump | 8 | Filter |
| 4 | Process Piping | 9 | Pulsation Damper |
| 5 | Bleed Valve | - | - |

**Figure 5:
General Piping**

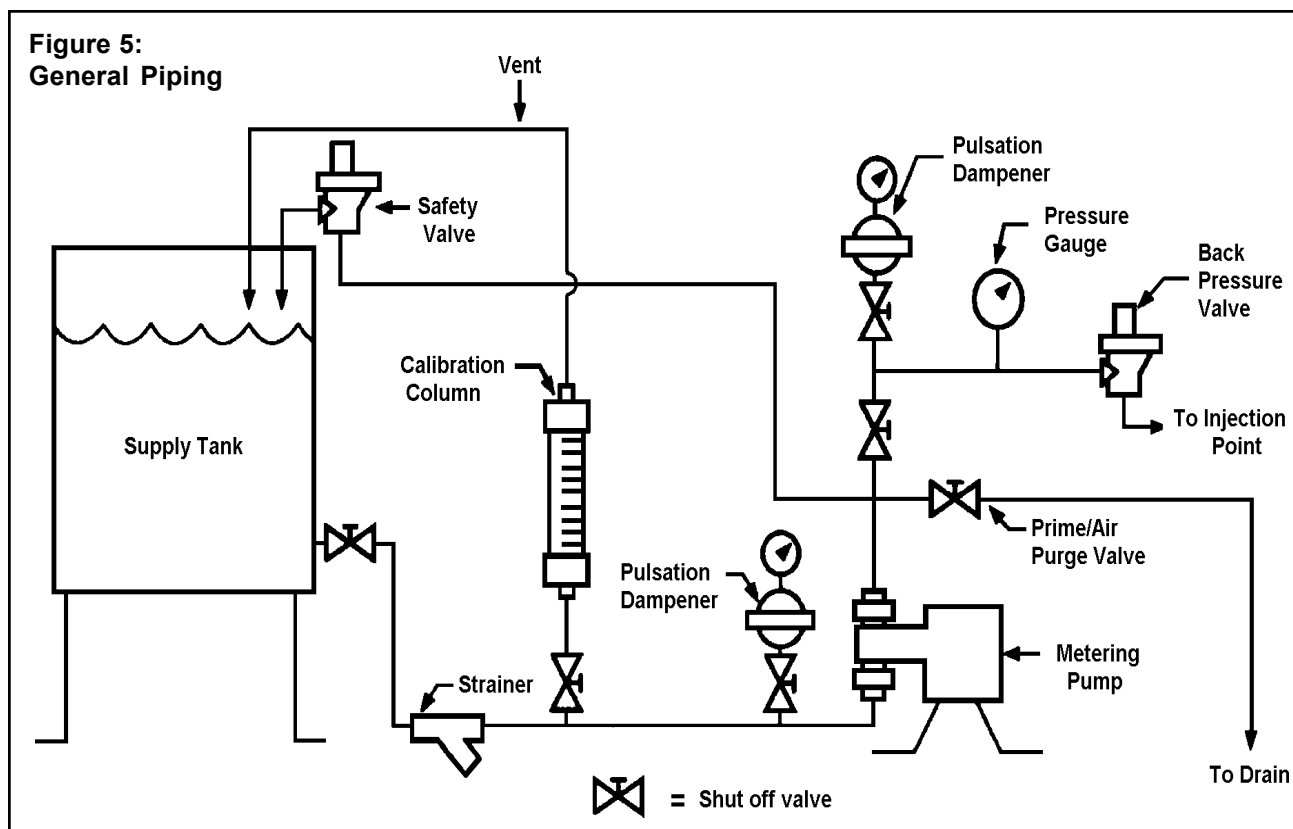

2.6.1 NPSH CONSIDERATIONS

Size piping to accommodate peak instantaneous flow. Because of the reciprocating motion of the pump diaphragm, peak instantaneous flow is approximately equal to 5 times the average flow. For example, a pump rated for 16 gallons per hour (61 L/hr.) requires piping sufficient for 5 x 16 gph, or 80 gph (303 L/hr.).

To minimize viscous flow losses when handling viscous liquids, it may be necessary to use suction piping up to four times larger than the size of the suction connection on the pump. If in doubt, contact your dealer to determine the necessary pipe size.

2.6.2 GENERAL PIPING CONSIDERATIONS

Use extreme care in piping to plastic liquid end pumps with rigid pipe such as PVC. If excessive pipe stress or vibration is unavoidable, flexible connections are recommended.

Use piping materials that will resist corrosion by the liquid being pumped. Use care in selecting materials to avoid galvanic corrosion at pump liquid end connections.

Use piping heavy enough to withstand maximum pressures. Remove burrs, sharp edges, and debris from inside piping. Blow out all pipelines before making final connections to pump.

Because vapor in the liquid end will cause inaccurate pump delivery, piping should be sloped up from pump suction check to the supply tank to prevent formation of vapor pockets.

When pumping suspended solids (such as slurries), install plugged crosses at all 90° line turns to permit line cleaning without dismantling piping.

See Figure 5 for a typical recommended pump installation scheme.

2.6.3 SUCTION PIPING CONSIDERATIONS

It is preferable to have the suction of the pump flooded by locating the liquid end below the lowest level of the liquid in the supply tank.

To minimize the chances of a loss-of-prime condition, the pump should be installed as close as possible to the supply vessel.

Avoid negative suction pressure conditions (suction lift), as such conditions adversely affect metering accuracy. A lift of 6.6 feet (2 meters) of water column is the maximum permissible suction lift.

Series G pumps are designed to operate with process liquid supplied at or above atmospheric pressure. Although these pumps can move liquids supplied at less than atmospheric pressure (suction lift), in these nega-

tive pressure applications it is important that all connections be absolutely drip free and vacuum tight, and that a foot valve be installed at the bottom of the suction line (see upper left illustration of Figure 4).

When pumping a liquid near its boiling point, provide enough suction head to prevent the liquid from “flashing” into vapor when it enters the pump liquid end on the suction stroke.

If possible, use metal or plastic tubing for the suction line because tubing has a smooth inner surface and can be formed into long, sweeping bends to minimize frictional flow losses.

A strainer should be used in the suction line to prevent foreign particles from entering the liquid end. This and any other measures which prevent debris from entering and fouling the liquid end check valves will give increased maintenance-free service. Check strainer frequently to prevent blockage which could lead to cavitation. Keep suction piping as short and straight as possible.

Piping size should be larger than the liquid end suction fitting to prevent pump starvation.

If long suction lines are unavoidable, install a stand pipe near the pump in the suction line.

Suction piping must be absolutely airtight to ensure accurate pumping. After installation, test suction piping for leaks with air and soap solution.

2.6.4 DISCHARGE PIPING CONSIDERATIONS

Install pipe large enough to prevent excessive pressure losses on the discharge stroke of the pump. Maximum pressure at the discharge fitting on the liquid end must be kept at or below the rated pressure (shown on the pump nameplate).

The pump will not deliver a controlled flow unless the discharge line pressure is 10 psi greater than the suction line pressure. One way to create an artificial pressure is the installation of a back pressure valve. (Please contact your dealer for recommendations to increase back pressure in slurry applications).

When pumping water treatment chemicals directly into boiler drums, use one liquid end assembly for each boiler drum. Discharging into a manifold having the slightest pressure difference between its several discharge connections can diminish metering accuracy as the outlet with the lowest pressure will receive more liquid than the other outlets.

2.7 VALVES

Back Pressure Valves

All metering pumps are prone to overpumping (excessive output) at low discharge pressures. To prevent this condition from occurring, it is necessary to maintain approximately 10 psi (0.7 bar) back pressure against the pump. This can be accomplished through the installation of a back pressure valve in the discharge line. Typically, the valve should be located near the pump. However, back pressure valves for large pumps with long and extremely small discharge lines may have to be installed near the point of discharge into the process (to minimize siphoning tendencies).

Pulsation Dampeners

An accumulator, surge chamber, surge suppressor, or pulsation dampener should be used with the back pressure valve in the discharge line to absorb the flow peaks between the pump and the back pressure valve. Without the pulsation dampener the valve mechanism will snap open and close with the surge from each pump stroke. The pulsation dampener will allow the back pressure valve to oscillate about a partly-closed position, thus minimizing wear on the valve. Discharge line pulsation dampeners offer the further advantage of limiting the flow and pressure variations characteristic of this kind of pump. Installing a properly sized pulsation dampener will improve pump performance and may reduce system costs dramatically by permitting the substitution of smaller piping. Please contact your dealer for further information on pulsation dampeners.

Safety Valves and Priming Valves

Motor-driven positive displacement pumps can develop excessive discharge pressures long before thermal overload devices interrupt the motor electrical circuit. To prevent a blocked discharge line from causing damage to the pump, piping, or process equipment, install a safety valve in the pump discharge line. This valve is designed and sized to handle system flow rates and pressures safely while resisting corrosion by the process liquid.

To aid in pump start-up, it is advisable to install a priming valve on the discharge side of the liquid end.

Shut-off Valves

Provide shut-off valves in both suction and discharge lines next to the pump. Locate discharge line shut-off valve downstream from the inlet connection of the safety valve. Figure 5 shows recommended valve locations.

2.8 ELECTRICAL CONNECTIONS

CAUTION

OPERATION WITH THE WRONG MOTOR ROTATION MAY DAMAGE THE PUMP AND MOTOR AND VOID THE WARRANTY.

DO NOT FORGET TO CONNECT THE EARTH TERMINAL ON THE MOTOR TO THE EQUIPMENT EARTH CONDUCTOR.

Ensure that the electrical supply matches the pump motor nameplate characteristics. Connect the motor in accordance with the instructions and connection diagrams on the motor (or in the motor terminal box).

Note: *Before operating the pump, check the direction of rotation of the motor to be sure it matches the direction of the arrow on the motor fan cover (rotation should be clockwise when viewed from the top of the motor).*

The electrical protection installed for the motor (fuse or thermal protection) must be suitable for the motor's rated current.

SECTION 3 OPERATION

3.1 START-UP PROCEDURES AND CHECKS

Check that the pump is secured to its support.

If oil was previously removed for any reason, make sure pump drive has the correct volume (1 quart) of oil (Mobil SHC 629).

Make sure all isolation valves installed on the suction and discharge lines are open. If the discharge line is equipped with an injection nozzle or a back-pressure valve, open the priming valve for discharge (if there is no priming valve, disconnect the discharge pipe). This allows for verification that liquid is present in the liquid end when the pump is installed in flooded suction condition. If the pump is installed in a suction lift condition, this allows for priming of the pump during start-up.

Make sure that pump is set at 0% capacity.

3.2 CHECKING THE ELECTRICAL CONNECTION OF THE MOTOR

Start up the pump to check the motor's direction of rotation. It must comply with that indicated by the arrow marked on the motor fan cover (clockwise as viewed from the top of the motor). If the rotation is incorrect, refer to Section 2.8 Electrical Connections.

3.3 START-UP

WARNING

FAILURE TO CHECK TORQUE ON NON-METALLIC HEAD BOLTS PRIOR TO STARTUP AND AFTER ONE WEEK OF OPERATION MAY EXPOSE OPERATING PERSONNEL TO HAZARDOUS LIQUIDS.

Check the torque on all non-metallic head bolts prior to startup. Recheck torque on all non-metallic head bolts after pump has been operating for one week. Torque the head assembly screws in a crosswise pattern as follows:

- a) Liquid End Size D2 and D4 to 45 inch pounds.
- b) Liquid End Size D7 and D8 to 90 inch pounds

Once all the checks and procedures described above have been carried out, start the pump.

Conduct a visual and audio check of the pump (in particular, listen for the presence of any "suspicious" noises).

Make sure that the stroke adjustment knob is unlocked.

Gradually increase the capacity until liquid can be seen

flowing from the priming valve. If no priming valve is in place, when the liquid end is primed, the discharge check valves can be heard to be operating (should hear a clicking noise caused by movement of check valve balls). When liquid end is primed, stop the pump and close the priming valve.

Adjust the pump to the desired capacity. Lock the stroke adjustment knob (Item 8 in Figure 1).

3.4 CAPACITY CALIBRATION

After the first 12 hours of operation, the pump may be tested and calibrated to find the exact pump capacity under specific operating conditions. Usually, calibrating the pump at only 100, 50, and 10 percent capacity settings is enough to indicate pump performance throughout the adjustment range.

The pump can be calibrated by measuring the decrease in liquid level pumped from a calibrated vessel. This method is recommended for hazardous liquids because it eliminates operator contact with the liquid. Calibration columns are available for convenient and accurate calibration of the pump. Contact your dealer for more information.


WARNING

THIS METHOD IS GENERALLY NOT RECOMMENDED AS IT MAY EXPOSE OPERATING PERSONNEL TO HAZARDOUS LIQUIDS. FURTHERMORE, IF NO BACK PRESSURE IS PRESENT ON THE DISCHARGE SIDE, THE PUMP MAY OVERPUMP DRAMATICALLY IN WHICH CASE THE POSITION OF THE CAPACITY ADJUSTMENT KNOB MAY HAVE LITTLE EFFECT ON ACTUAL FLOW RATE.

WARNING

FOR SAFETY REASONS, A CHECK VALVE IS RECOMMENDED FOR USE IN THE DISCHARGE LINE NEAR THE POINT WHERE THE LINE ENTERS A HIGH-PRESSURE PROCESS VESSEL.

The pump can also be calibrated by collecting and measuring pumped liquid at the pump discharge port. It may be necessary to create backpressure at the collection point to allow for proper pump operation (see Section 2.7 Back Pressure Valves for recommendations).

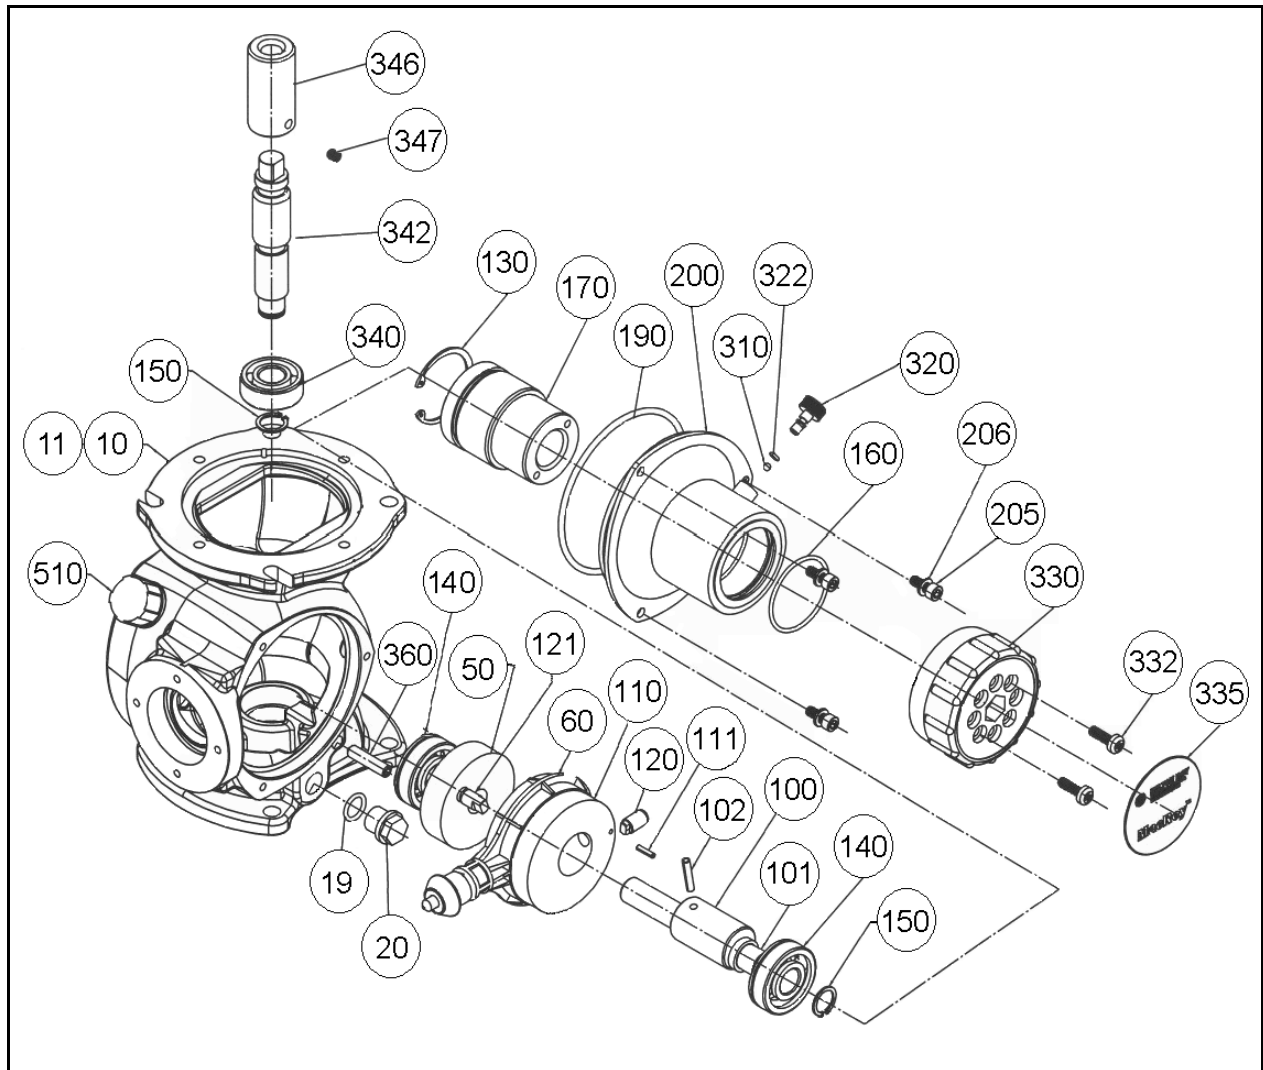

| ITEM NO. | NOMENCLATURE | ITEM NO. | NOMENCLATURE | ITEM NO. | NOMENCLATURE | ITEM NO. | NOMENCLATURE |
|----------|----------------|----------|-------------------|----------|-------------------|----------|----------------|
| 10 | Housing | 110 | Female Eccentric | 190 | O-Ring | 335 | Sticker |
| 11 | Gasket | 111 | Spring Pin | 200 | Side Cover | 340 | Bearing |
| 19 | O-Ring | 120 | Stroke Adjust Key | 205 | Screw | 342 | Worm |
| 20 | Oil Drain Plug | 121 | Gear Key | 206 | Washer | 346 | Motor Coupling |
| 50 | Gear | 130 | Retaining Ring | 310 | Stroke Lock Ball | 347 | Screw |
| 60 | Connecting Rod | 140 | Bearing | 320 | Stroke Lock Screw | 360 | Set Screw |
| 100 | Male Eccentric | 150 | Retaining Ring | 322 | O-Ring | 510 | Breather Plug |
| 101 | Drive Shaft | Seal | Seal | 330 | Stroke Adj. Knob | | |
| 102 | Spring Pin | 170 | Stroke Adj. Screw | 332 | Screw | | |

Figure 6. Drive Assembly

SECTION 4 MAINTENANCE

4.1 PREVENTATIVE MAINTENANCE

Drive

Initially, change the oil in the pump drive assembly after the first 1000 hours of operation. Thereafter, change drive oil on an annual basis or after every 5000 hours of operation.

The drive should be refilled with 1 quart of Mobil SHC 629:

Viscosity @ 100 °F = 726 SSU

Viscosity Index = 149

ISO Grade = 150

Diaphragm Assembly

The Series G Model D diaphragm should be replaced annually or every 5000 hours of operation to avoid the possibility of failure. Refer to the instructions in Section 4.6 Diaphragm and Oil Seal Bellows Replacement.

Oil Seal Bellows

The Series G Model D oil seal bellows should also be replaced annually. Oil seal bellows replacement requires the removal of the diaphragm assembly, so it is recommended that the oil seal and diaphragm assembly be replaced at the same time. Refer to the instructions in Section 4.6 Diaphragm and Oil Seal Bellows Replacement.

Check Valves

As in the case of the diaphragm, LMI/Milton Roy Company recommends that check valve balls, seats, gaskets, and O-rings be replaced on an annual basis or every 5000 hours of operation. If highly corrosive material (acids, slurries, etc.) is being pumped, more frequent replacement may be required. Complete instructions for replacement of worn check valves are given in Section 4.5 Corrective Maintenance.

4.2 RETURNING PUMPS TO THE FACTORY FOR REPAIR

Pumps can not be accepted for repair without a Return Material Authorization. Pumps should be clearly labeled to indicate the liquid being pumped. Process liquid should be flushed from the pump liquid end and oil should be drained from the pump housing before the pump is shipped.

Note: *United States of America Federal law prohibits handling of equipment that is not accompanied by an OSHA Material Safety Data Sheet (MSDS). A completed MSDS must be*

packed in the shipping crate with any pump shipped for repair. These safety precautions will aid the troubleshooting and repair procedure and preclude serious injury to repair personnel from hazardous residue in pump liquid end. A Materials Safety Data Sheet must accompany all returns.

All inquiries or parts orders should be addressed to your local representative or distributor.

4.3 ROUTINE MAINTENANCE

LMI/Milton Roy Series G pumps are carefully designed, manufactured, assembled, and quality tested to give reliable service with minimal maintenance. However, a weekly maintenance check is recommended to confirm proper operation of the pump.

Visual Check of Seal Integrity of Mechanical Assembly, Figure 6.

Check for leaks in the following components. If leaks exist, contact the factory for assistance.

1. Motor flange: If leaking, replace motor flange sealing gasket (Item 11 in Figure 6).
2. Stroke adjustment knob: If leaking, replace stroke adjustment seal (Item 160 in Figure 6).

Checking the Pump Capacity

Assuming the pump has been calibrated as described in Section 3, the capacity can be checked by shutting the valve from the supply vessel and opening the valve from the calibration column to the suction side of the liquid end. Measure the volume of pumped liquid for a given period of time at the various settings.


If a calibration column is not installed in the suction piping, place the foot valve (or suction line) in a calibrating chamber (graduated reservoir). Measure the volume of pumped liquid for a given period of time at the various settings.

Occurrence of Leak From Detection Ports


Determine whether the product collected at the detection port in the liquid end mounting assembly is lubricating oil or the pumped fluid.

If the product is pumped fluid, the diaphragm has failed. If the product is lubricating oil, the oil seal bellows has failed. Proceed with its replacement (see Section 4.6 Diaphragm and Oil Seal Bellows Replacement).


**Figure 7:
Diaphragm Assemblies
By Liquid End Size and Material**

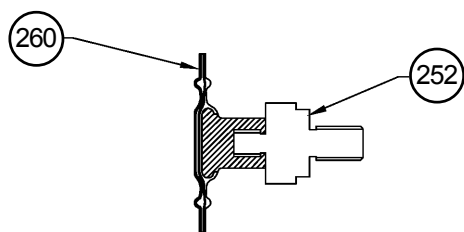


SD2

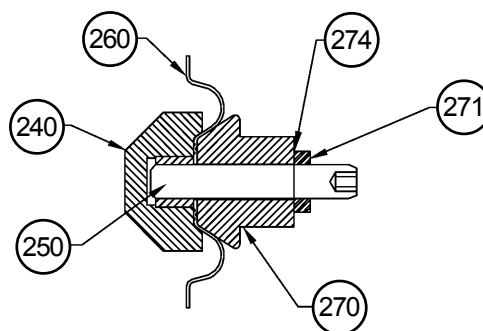

SD4 (Plastic)

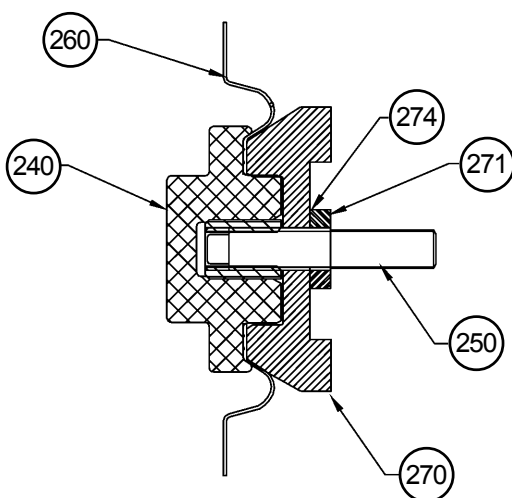

SD7 and SD8

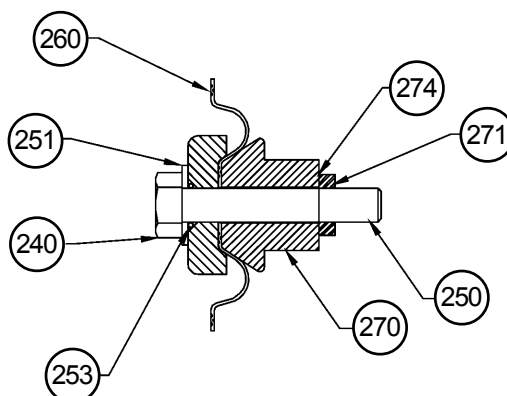

SD4 (316SS)

4.4 SPARE PARTS

The following spare parts should be stocked for each pump to prevent serious delays in repairs. (Refer to Figures 7 thru 14).

Parts orders must include the following:

1. Quantity required
2. Part number
3. Part description
4. Pump serial number (found on nameplate)
5. Pump product code (found on nameplate)

Note: Always include the serial number and product code in all correspondence regarding the unit.

4.4.1 SIZE D2 LIQUID ENDS - PVC, PVDF, POLYMER, AND H_2SO_4 .

Liquid End Kit for D2 PVC/PVDF

RPM 099, Includes:

- 1 each, Diaphragm: Item 260 in Figure 9.
- 1 each, Oil Seal Bellows: Item 70 in Figure 9.
- 2 each, O-Ring: Item 419, Seat: Item 420, Ball: Item 422, Cartridge: Item 426 and Washer: Item 427 in Figure 9.

Liquid End Kit for D2 Polymer

RPM 196, Includes:

- 1 each, Diaphragm: Item 260 in Figure 9.
- 1 each, Oil Seal Bellows: Item 70 in Figure 9.

2 each, O-Ring: Item 419, Seat: Item 420, Ball: Item 422, Cartridge: Item 426, Washer: Item 427 and Spring: Item 428 (Discharge Only) in Figure 9.

Liquid End Kit for D2 H₂SO₄

Includes:

1 each, Diaphragm: Item 260 in Figure 9.

1 each, Oil Seal Bellows: Item 70 in Figure 9.

2 each, O-Ring: Item 419, Seat: Item 420, Ball: Item 422, Cartridge: Item 426, and Washer: Item 427 Figure 9.

4.4.2 SIZE D4 LIQUID ENDS - PVC, PVDF, POLYMER, H₂SO₄, AND SLURRY.

Liquid End Kit for D4 PVC/PVDF/Polypropylene

RPM 102, Includes:

1 each, Diaphragm: Item 260 in Figure 12.

1 each, Oil Seal Bellows: Item 70 in Figure 12.

1 each, PTFE Washer: Item 274 in Figure 12.

2 each, Cartridge Assy.: (P/N 36306) Included in Kit.

Liquid End Kit for D4 Polymer

RPM 196, Includes:

1 each, Diaphragm: Item 260 in Figure 12.

1 each, Oil Seal Bellows: Item 70 in Figure 12.

1 each, PTFE Washer: Item 274 in Figure 12.

2 each, O-Ring: Item 419, Seat: Item 420, Ball: Item 422, Fitting: Item 424, Cartridge: Item 426, Washer: Item 427 and Spring: Item 428 in Figure 12.

Liquid End Kit for D4 H₂SO₄ NPT

RPM 173, Includes:

1 each, Diaphragm: Item 260 in Figure 12.

1 each, Oil Seal Bellows: Item 70 in Figure 12.

1 each, PTFE Washer: Item 274 in Figure 12.

2 each, Cartridge Assy.: (P/N 39461) Included in Kit.

Liquid End Kit for D4 H₂SO₄ Tubing

RPM 174, Includes:

1 each, Diaphragm: Item 260 in Figure 12.

1 each, Oil Seal Bellows: Item 70 in Figure 12.

1 each, PTFE Washer: Item 274 in Figure 12.

2 each, Cartridge Assy.: (P/N 39461) Included in Kit and Coupling Nut: Item 428 in Figure 12.

Liquid End Kit for D4 Slurry

RPM 212, Includes:

1 each, Diaphragm: Item 260 in Figure 12.

1 each, Oil Seal Bellows: Item 70 in Figure 12.

2 each, Check Valve Assembly: Item 425 in Figure 12.

Note: Liquid end sizes D2 and D4 metallic check valves (except Slurry) are precision assembled at the factory. Do not attempt to disassemble these cartridges.

4.4.3 SIZE D2 AND D4 LIQUID ENDS - STAINLESS STEEL

Liquid End Kit for D2/D4 316SS

RPM 101/RPM 104, Includes:

1 each, Diaphragm: Item 260 in Figure 10/11.

1 each, O-Ring: Item 253 in Figure 11 (D4 only).

1 each, PTFE Washer: Item 274 in Figure 11 (D4 only).

1 each, Oil Seal Bellows: Item 70 in Figure 10/11.

2 each, Check Valve Assembly: Item 425 in Figures 10 & 11.

Note: The check valves for the size D7 and D8-PVC, PVDF, and Polypropylene liquid ends contain a removable seat, which permits the replacement of the seat, O-ring, and ball into a reusable valve body. The liquid end size D7 and D8-Stainless Steel check valve has an integral ball seat, which necessitates replacement of the entire check valve assembly.

4.4.4 SIZE D7 AND D8 - PVC, PVDF, H₂SO₄, POLYMER, AND SLURRY LIQUID ENDS

Liquid End Kit for D7/D8 PVC/PVDF/H₂SO₄

RPM 135/105(PVC)

RPM 136/106(PVDF)

RPM 175/183(H₂SO₄), Includes:

1 each, Diaphragm: Item 260 in Figure 13.

1 each, Oil Seal Bellows: Item 70 in Figure 13.

1 each, PTFE Seal Ring: Item 210 in Figure 13.

2 each, Seat: Item 420, Ball: Item 422 in Figure 13.

4 each, O-Ring: Item 419 in Figure 13.

Liquid End Kit for D7/D8 Polymer

RPM 211/210, Includes:

1 each, Diaphragm: Item 260 in Figure 13.

1 each, Oil Seal Bellows: Item 70 in Figure 13.

1 each, PTFE Seal Ring: Item 210 in Figure 13.

4.4.5 SIZE SD7 AND SD8 - STAINLESS STEEL LIQUID ENDS

1 each, Diaphragm: Item 260 in Figure 6

1 each, Oil Seal Bellows: Item 70 in Figure 7

2 each, Check Valve Assembly: Item 425 in Figure 14.

Note: The check valves for the size SD7 and SD8-PVC and PVDF liquid ends contain a removable seat, which permits the replacement of the seat, O-ring, and ball into a reusable valve body. The liquid end size SD7 and SD8-Stainless Steel check valve has an integral ball seat, which necessitates replacement of the entire check valve assembly.

4.5 CORRECTIVE MAINTENANCE

WARNING

BEFORE CARRYING OUT ANY SERVICING OPERATION ON THE PUMP OR PIPING, DISCONNECT ELECTRICAL POWER FROM THE PUMP, AND TAKE THE NECESSARY STEPS TO ENSURE THAT ANY HARMFUL LIQUID CANNOT COME INTO CONTACT WITH PERSONNEL. SUITABLE PROTECTIVE EQUIPMENT MUST BE PROVIDED. BE SURE THAT THERE IS NO FLUID PRESSURE IN THE PUMP LIQUID END AND PIPING.

Cleaning Fouled Check Valves

Check valve assemblies are designed to be self-cleaning and should seldom need servicing. Fouled check valves can usually be cleaned by pumping a solution of mild detergent and warm water (if compatible with liquid being pumped) for 15 minutes, followed by flushing with water.

Check Valve Replacement

General

Before beginning work on the valve assemblies, make sure the suction and discharge shut-off valves are closed and that pressure has been bled from the pump liquid end. When replacing the valves, be sure to replace the valve O-rings. Pay close attention to the proper assembly and orientation of the check valves as shown in each Liquid End figure. In the case of plastic check valves for liquid end size SD7 and SD8, be certain that the ball is placed on the sharp edge of the valve seat.

CAUTION

BE SURE TO FOLLOW INSTRUCTIONS CAREFULLY AND REFER TO THE APPROPRIATE FIGURE WHEN REASSEMBLING CHECK VALVES. IF CHECK VALVE CARTRIDGES ARE INSTALLED INCORRECTLY, ONE OF THE FOLLOWING WILL OCCUR:

- (A) IMMEDIATE AND SEVERE DAMAGE TO PUMP MECHANISM.
- (B) NO PUMPING OF FLUIDS.
- (C) REVERSE PUMPING ACTION (FROM DISCHARGE LINE INTO SUCTION LINE).

Preliminary Operations

1. Set the pump capacity knob to 0%. If stroke locking screw (Item 320 in Figure 8) was previously tightened, slightly loosen the locking screw.
2. Disconnect power to pump motor. Check that the equipment cannot be accidentally started. Place a notice at the location of the power switch indicating that the pump is being serviced.
3. Disconnect the pump hydraulically by removing pipe or tubing connections to suction and discharge check valves.

4.5.1 CHECK VALVE ASSEMBLIES REPLACEMENT: LIQUID ENDS SD2 AND SD4 - PVC, PVDF, AND H₂SO₄ (SEE FIGURE 9 OR 12)

CAUTION

IMPROPER BALL AND SEAT INSTALLATION CAN CAUSE DAMAGE TO THE PUMP. SEE FIGURE 9 OR 11 FOR PROPER BALL AND SEAT ORIENTATION FOR BOTH THE SUCTION AND DISCHARGE VALVES

CAUTION

DO NOT APPLY PTFE TAPE TO THE THREADS OF CHECK VALVE BODY THAT SCREWS INTO THE HEAD (280), AS THIS MAY PREVENT ADEQUATE SQUEEZE FROM BEING APPLIED TO THE VALVE O-RING WHICH COULD RESULT IN LEAKAGE.

1. Unscrew the valve body (424) from the pump head (280).
2. Remove the cartridge valve assembly: cartridge includes ball (422), seat (420), ball guide (426), O-ring (419), and washer (427).
3. Clean the valve body (424) and threaded port in the head (280).
4. Press a new washer (427) into valve body (424).
5. Install new check valve assembly in orientation shown.

On discharge side, drop cartridge assembly (425) into threaded port in head. The O-ring should be stretched around outside of cartridge on same end as ball seat. Screw valve body into discharge side of diaphragm head until valve is hand tight. **DO NOT OVERTIGHTEN.**

On suction side, drop the cartridge assembly into check valve body. The O-ring should be stretched around outside of cartridge on opposite end of ball seat. Screw the suction valve body with cartridge valve into suction side of head. **DO NOT OVERTIGHTEN.**

4.5.2 CHECK VALVE REPLACEMENT: LIQUID ENDS D2 AND D4 - POLYMER (SEE FIGURE 9 OR 12)

CAUTION

NOTE THAT THE SEAT ORIENTATION IS DIFFERENT INSIDE THE SUCTION AND DISCHARGE CHECK VALVES, BUT THE SEAT MUST ALWAYS BE BELOW THE BALL WHEN INSTALLED.

CAUTION

DO NOT APPLY PTFE TAPE TO THE THREADS OF CHECK VALVE BODY THAT SCREWS INTO THE HEAD (280), AS THIS MAY PREVENT ADEQUATE SQUEEZE FROM BEING APPLIED TO THE VALVE O-RING WHICH COULD RESULT IN LEAKAGE.

Suction

1. Unscrew the valve body (424) from the pump head (280).
2. Remove the valve assembly: assembly includes ball (422), seat (420), Cartridge (426), O-ring (419), and washer (427).
3. Clean the valve body (424) and threaded port in the head (280).
4. Place a new washer (427) into valve body (424). Place new seat (420) and new ball (422) inside new cartridge (426) and place into valve body.
5. Add O-ring (419) and install new check valve assembly in orientation shown.

On suction side, drop the cartridge assembly into check valve body. The O-ring should be stretched around outside of cartridge on opposite end of ball seat. Screw the suction valve body with cartridge valve into suction side of head hand tight. **DO NOT OVERTIGHTEN.**

Discharge

1. Unscrew the valve body (424) from the pump head (280).
2. Remove the valve assembly: assembly includes O-ring (419), seat (420), ball (422), spring (428), cartridge (426), and washer (427).
3. Clean the valve body (424) and threaded port in the head (280).
4. Place a new washer (427) into valve body (424). Place new spring (428), new ball (422), and new seat (420) inside new cartridge (426) and place into valve body.
5. Add O-ring (419) and install new check valve assembly in orientation shown.

On discharge side, drop cartridge assembly into threaded port in head. The O-ring should be stretched around outside of cartridge on same end as ball seat. Screw valve body into discharge side of diaphragm head until valve is hand tight. **DO NOT OVERTIGHTEN.**

4.5.3 CHECK VALVE REPLACEMENT: LIQUID END SIZES D2 AND D4 - METALLIC (SEE FIG. 10 OR 11)

The metallic check valves used on liquid end sizes D2 and D4 (except slurry) are precision assembled at the factory. Do not attempt to disassemble these cartridges. If they become inoperative, flush them with solvent, wash them with warm detergent and blow them out with compressed air to remove any foreign matter. If this treatment does not eliminate the trouble, the cartridge assembly should be replaced.

Disassembly

Remove the check valves by unscrewing them from the pump head.

Reassembly

Apply a small amount of thread sealing compound and PTFE pipe tape to check valve threads and install check valves by screwing them into the pump head with the

flow arrows pointing up. **DO NOT OVERTIGHTEN CHECK VALVES.**

4.5.4 CHECK VALVE REPLACEMENT: LIQUID END SIZE D4 - SLURRY (SEE FIGURE 11)

1. Unscrew the valve body (424) from the pump head (280).
2. Remove the valve assembly: assembly includes ball (422), check valve body (424), and retainer sleeve (428).
3. Clean the valve body (424) and threaded port in the head (280).
5. Install new check valve assembly in orientation shown.

On discharge side, drop cartridge assembly into threaded port in head. Screw valve body into discharge side of diaphragm head until valve is hand tight. **DO NOT OVERTIGHTEN.**

On suction side, drop the cartridge assembly into check valve body. Screw the suction valve body with cartridge valve into suction side of head hand tight. **DO NOT OVERTIGHTEN.**

CAUTION

THE CHECK VALVES WILL NOT OPERATE IF THEY ARE INSTALLED UPSIDE DOWN. INSTALL CHECK VALVES WITH THE FLOW ARROW POINTING IN THE DIRECTION OF PROCESS FLOW (UP). TURN CHECK VALVE ASSEMBLIES INTO LIQUID END BY HAND AND TIGHTEN. DO NOT OVERTIGHTEN, DAMAGE TO THE CHECK VALVES MAY OCCUR.

4.5.5 REPLACEMENT OF BALL, SEAT, & SEAL: LIQUID END SD7 AND SD8 - PVC, PVDF, AND H₂SO₄ (SEE FIGURE 13)

Disassembly

1. Unscrew the union nut (435). The union end (445) is held in place by the union nut and will separate easily from the other liquid end parts.

2. Unscrew the check valve assembly (425) from the pump head (280).

3. Screw the union nut part way (one or two turns) onto the end of the ball guide (424) that has the seat in it. Be sure the union nut is on loosely. This will allow a gap for the seat (420) to fall into as it is removed from the ball guide.

4. Set the ball guide/union nut on a flat surface with the union nut down. Looking into the top of the ball guide, you will see four large holes surrounding one small hole. Insert a thin, blunt instrument such as a hex head screwdriver into the small center hole until it rests on the top of the ball (422).

5. Tap screwdriver gently with a hammer until the ball and seat are released from the ball guide.

CAUTION

IF THE UNIT IS DISASSEMBLED FOR INSPECTION ONLY, BE SURE TO USE A BLUNT INSTRUMENT AND TAP GENTLY TO AVOID DAMAGING THE BALL. IF THE BALL AND/OR SEAT ARE DAMAGED DURING DISASSEMBLY, THEY WILL HAVE TO BE REPLACED. IF AVAILABLE, TO AVOID DAMAGE, IT IS ADVISABLE TO USE GENTLE AIR PRESSURE (APPLIED AT END OPPOSITE THE SEAT (420) FOR BALL AND SEAT REMOVAL.

6. Carefully remove the two O-rings (419) from the ball guide and seat.

7. Carefully clean any parts to be reused. If any chemicals are used in the cleaning process, ensure that they are compatible with the process liquid.

Reassembly

CAUTION

THE ORDER OF ASSEMBLY AND ORIENTATION OF THE SUCTION AND DISCHARGE CHECK VALVES IS DIFFERENT. REFER TO FIGURE 13 FOR PROPER ASSEMBLY ORDER AND ORIENTATION. IF CHECK VALVE CARTRIDGES ARE INSTALLED INCORRECTLY, ONE OF THE FOLLOWING WILL OCCUR:

- (A) IMMEDIATE SEVERE DAMAGE TO PUMP MECHANISM
- (B) NO PUMPING

(C) REVERSE PUMPING ACTION (FROM DISCHARGE LINE INTO SUCTION LINE)

1. Drop the ball (422) into the curved inner chamber end of the body (424).

2. Set the body on a flat surface so that the end with the ball faces upward. Position seat (420) on the body, with the beveled edge of the seat facing outward. When the seat is pressed into the body, the ball should be sitting on the side with sharp corners as shown in Figure 13. The bevel **should not** face the inside of the check valve. Use a flat surface such as a board to press the seat into the body with firm, even pressure.

If the seat is improperly positioned, the ball will not create a tight seal and poor pumping performance will result.

3. Fit new O-rings (419) into position on the body (424) and seat (420).

CAUTION

DO NOT APPLY PTFE TAPE TO THREADS OF CHECK VALVE BODY (424) AS THIS MAY PREVENT ADEQUATE SQUEEZE FROM BEING APPLIED TO THE VALVE O-RING WHICH WOULD RESULT IN LEAKAGE.

Note: To assure a tight, leak free seal, new O-rings should be used each time the check valves are disassembled.

4. Position the union end (445) onto the correct end of the body. Refer to Figure 12, as the correct end is determined by whether the valve is intended for the suction or discharge port of the liquid end. Slip the union nut (435) over the union end and screw tightly (hand tight only) onto the body.

5. Screw the valve assembly into the pump head (hand tight only). **DO NOT OVERTIGHTEN.**

4.5.6 CHECK VALVE REPLACEMENT: LIQUID END SIZES D7 AND D8 - POLYMER (SEE FIGURE 13)

Suction

Follow the instruction for replacement of ball, seat, & seal: liquid end D7 and D8 - PVC, PVDF, H₂SO₄ and polypropylene paragraph 4.5.5. **The procedures are the same.**

Discharge

1. Unscrew the valve body (424) from the pump head (280).

2. Remove the valve assembly: assembly includes two O-rings (419), seat (420), ball (422), poppet (426), spring (423) and check valve body (424).

3. Replace O-rings (419), seat (420), ball (422), poppet (426), and spring (423).

4. Clean the valve body (424) and threaded port in the head (280).

5. Install new check valve assembly in orientation shown.

On discharge side, drop cartridge assembly into threaded port in head. Screw valve body into discharge side of diaphragm head until valve is hand tight. **DO NOT OVERTIGHTEN.**

4.5.7 CHECK VALVE REPLACEMENT: LIQUID END SIZES D7 AND D8 - SLURRY (SEE FIGURE 13)

1. Unscrew the valve body (424) from the pump head (280).

2. Remove the valve assembly: assembly includes two O-rings (419), slurry seal ring (420), ball (422), check valve body (424), and dowel pin.

3. Clean the valve body (424) and threaded port in the head (280).

5. Install new check valve assembly in orientation shown.

On discharge side, drop cartridge assembly into threaded port in head. Screw valve body into discharge side of diaphragm head until valve is hand tight. **DO NOT OVERTIGHTEN.**

On suction side, drop the cartridge assembly into check valve body. Screw the suction valve body with cartridge valve into suction side of head hand tight. **DO NOT OVERTIGHTEN.**

4.5.8 CHECK VALVE REPLACEMENT: LIQUID END SIZE SD7 AND SD8 - STAINLESS STEEL (SEE FIGURE 14)

Disassembly

Stainless steel check valves differ from the plastic versions in that the ball seat is integral to the ball guide. The seats cannot easily be inspected for damage or wear. If you suspect that the check valve may be damaged or worn, replace the entire check valve assembly as per the instructions below.

1. Unscrew the coupling (445).

2. Unscrew the check valve assembly (425) from the liquid end.

Reassembly

CAUTION

THE ORDER OF ASSEMBLY AND ORIENTATION OF THE SUCTION AND DISCHARGE CHECK VALVES IS DIFFERENT. REFER TO FIGURE 14 FOR PROPER ASSEMBLY ORDER AND ORIENTATION. IF CHECK VALVE CARTRIDGES ARE INSTALLED INCORRECTLY, ONE OF THE FOLLOWING WILL OCCUR:

- (A) IMMEDIATE SEVERE DAMAGE TO PUMP MECHANISM**
- (B) NO PUMPING**
- (C) REVERSE PUMPING ACTION (FROM DISCHARGE LINE INTO SUCTION LINE)**

1. Screw the correct end of the check valve assembly into the pump head, trapping a new O-ring between the pump head and the check valve assembly.

CAUTION

DO NOT APPLY PTFE TAPE TO THREADS OF CHECK VALVE BODY AS THIS MAY PREVENT ADEQUATE SQUEEZE FROM BEING APPLIED TO THE VALVE O-RING WHICH WOULD RESULT IN LEAKAGE.

***Note:** To assure a tight, leak free seal, new O-rings should be used each time the check valves are disassembled.*

2. Screw the coupling (445) onto the check valve assembly, trapping a new O-ring (419) between the coupling and the check valve assembly.

4.6 DIAPHRAGM AND OIL SEAL BELLOWS REPLACEMENT

CAUTION

BEFORE BEGINNING DIAPHRAGM REPLACEMENT, MAKE SURE THAT ALL SHUT-OFF VALVES ARE CLOSED AND ALL PRESSURE IS BLED FROM THE LIQUID END.

If failure of the oil seal bellows has occurred, it is recommended that the diaphragm assembly and oil seal bellows be replaced at the same time.

4.6.1 DIAPHRAGM REPLACEMENT: LIQUID END SIZE SD2 (SEE FIGURES 6, 9, AND 10)

1. Loosen the head screws (Item 290 in Figure 9) and remove the diaphragm head (Item 280 in Figure 9). Mark the suction and discharge ports on the diaphragm head prior to removal.

2. Remove the motor fan cover and turn the motor by hand while adjusting the capacity control knob to 100%. With the capacity set at 100%, turn the motor fan until the diaphragm (Item 260 in Figure 9) is in the full forward position (top dead center).

3. Hold the outer edge of the diaphragm and turn it counterclockwise to unscrew it from the pump drive.

4. Discard and replace with new diaphragm. Make sure that adaptor (Item 252 in Figure 9) is screwed in tightly to connecting rod (Item 60 in Figure 7). Make sure that seat ring (Item 230 in Figure 9) is in place. Apply a thin layer of silicone grease to back (rubber side) of diaphragm before installation. Holding the edges of the diaphragm, screw the diaphragm assembly onto the male thread of the adaptor piece (Item 252 in Figure 9) until it reaches its mechanical stop.

5. With the capacity still set at 100% turn the motor fan until the new diaphragm is in the farthest rearward position (bottom dead center).

6. Reattach the diaphragm head with the suction and discharge ports in the correct positions. Tighten the screws in a crosswise pattern to a torque of 45 in-lb.

7. While turning the motor fan, set the stroke adjustment knob to the 0% position.

8. Reinstall motor fan cover.

4.6.2 DIAPHRAGM REPLACEMENT: LIQUID END SIZE SD4, SD7, AND SD8 (SEE FIGURES 6, 11 - 14)

1. Mark the suction and discharge ports on the diaphragm head prior to removal. Loosen the head screws (290) and remove the diaphragm head (280).

2. Remove the motor fan cover and turn the motor by hand while adjusting the capacity control knob to 100%. With the capacity set at 100%, turn the motor fan until the diaphragm cap (240) is in the full forward position (top dead center).

3. Hold the outer edge of the diaphragm (260) and turn it counterclockwise to unscrew it from the pump drive.

4. While clamping on the hex on the diaphragm cap (240), disassemble diaphragm assembly by removing the hex nut (271) on the back of the diaphragm support nut (270).

5. Make sure that stainless steel support nut (270) is clean and free of corrosion. When cleaning the support nut, take care not to scratch the smooth angled surface of the support nut. If corrosion cannot be removed without damaging the support nut, replace with a new one.

6. Install new diaphragm (260) onto diaphragm cap (240) with the convolution in correct orientation. As shown in Figure 6, the convolution in the Teflon diaphragm should be facing down away from diaphragm cap (240) and against (or pointing towards) the stainless steel support nut (270)

7. For Size SD4-stainless steel liquid ends, slide bolt (250), washer (251), and O-ring (253) through the diaphragm cap and diaphragm as shown in Figure 6. For all other liquid ends, install set screw (Item 250 in Figure 6) into diaphragm cap (240), with hex hole in screw facing outward, until it is bottomed out (hand tight only) in the diaphragm cap.

8. Slide support nut (270) onto set screw in correct orientation shown in Figure 6.

9. Install hex nut onto back of support nut and tighten to the following torque values dependent on liquid end size and material. Torque diaphragm assembly as follows:

- a) Liquid End Size SD7 and SD8 to 20 foot pounds.
- b) Liquid End Size SD4-Plastic to 45 inch pounds.
- c) Liquid End Size SD4-Stainless Steel tighten until washer (Item 251 in Figure 6) is contacting diaphragm cap (Item 240 in Figure 6).

10. Make sure that support ring (230) is in place and then reinstall diaphragm assembly.

11. Apply thin layer of O-ring type grease to back of hex nut (271) and reinstall thin PTFE washer (274) to back of support nut.

12. Make sure that oil seal clamp ring (Item 210 in Figure 12) is in place. Screw diaphragm assembly into connecting rod (Item 60 in Figure 7) until it reaches its mechanical stop.

Note: Steps 11 and 12 are applicable to Liquid End Size SD4 (See Figure 6).

13. Apply a thin layer of grease to the back of hex nut (271).

14. Make sure that spring (Item 272 in Figure 13) is in place and connecting rod is in full-forward position (at 100% capacity setting). Screw diaphragm assembly into connecting rod cross piece (Item 61 in Figure 13) until it reaches its mechanical stop.

Note: Steps 13 and 14 are applicable to Liquid End Size SD7 and SD8 (See Figure 6).

15. With the capacity still set at 100% turn the motor fan until the diaphragm is pulled back to the rearward position (bottom dead center).

16. Reattach the diaphragm head with the suction and discharge ports in the correct positions. Torque the head assembly screws in a crosswise pattern as follows:

- a) Liquid End Size SD2 and SD4 to 45 inch pounds.
- b) Liquid End Size SD7 and SD8 to 90 inch pounds.

17. While turning the motor fan, set the stroke adjustment knob to the 0% position.

18. Reinstall motor fan cover.

4.7 OIL SEAL BELLOWS REPLACEMENT (ITEM 70 IN FIGURE 7)

CAUTION

BEFORE BEGINNING OIL SEAL REPLACEMENT, MAKE SURE ALL SHUT-OFF VALVES ARE CLOSED AND ALL PRESSURE HAS BEEN BLED FROM THE LIQUID END (PUMP HEAD). WHEN REPLACING THE OIL SEAL, THE DIAPHRAGM ASSEMBLY MUST BE REMOVED FIRST. FOR EASE OF SERVICE, IT IS RECOMMENDED THAT THE OIL SEAL BE REPLACED IN CONJUNCTION WITH THE DIAPHRAGM ASSEMBLY.

1. Disconnect connections to the pump motor terminal box. Be sure to note the wiring layout before disconnecting from box.

2. Set the stroke adjusting knob to 100%.

3. Disconnect the suction and discharge connections to the pump head check valves.

4. Mark the suction and discharge ports on the diaphragm head prior to removal. Loosen the head screws (Item 290 in Figure 12) and remove the diaphragm head (Item 280 in Figure 12).

5. Remove the motor fan cover and turn the motor by hand while adjusting the capacity control knob to 100%. With the capacity set at 100%, turn the motor fan until the diaphragm assembly (Figure 6) is in the full forward position (top dead center).

6. Hold the outer edge of the diaphragm assembly (Item 260 in Figure 6) and turn it counterclockwise to unscrew it from the pump drive.

7. Remove the diaphragm support ring (Item 230 in Figure 12) from the spacer (225).

8. Drain the oil out of the pump drive by removing the drain plug from the pump housing (Item 20 in Figure 8).

9. Remove oil seal bellows clamping components as follows:

- a) On Liquid End Size SD2 models (Figures 9 & 10), remove adaptor piece (252), clamp ring (210), mounting screws (227), and spacer (225).
- b) On Liquid End Size SD4 models (Figures 11 & 12), remove oil seal clamp ring (210), mounting screws (227), and spacer (225).
- c) On Liquid End Size SD7 and SD8 models (Figure 13 & 14), remove spring (272), unscrew adapter (61), seal ring (210) mounting screws (227 & 228), and spacer (225).

10. Pull the oil seal (70) off the connecting rod (60).

11. Install a new oil seal onto connecting rod.

12. Apply a thin layer of O-ring type grease to top of oil seal (part adjacent to connecting rod).

13. Reinstall parts removed in step 9. For Liquid ends SD2, SD7, and SD8, install adaptor piece (252) or cross piece (61) before mounting spacer.

14. Remove the motor and refill pump drive with oil (1 quart of Mobil SHC 629).

15. Reinstall motor.

16. Reinstall liquid end components in accordance with the procedures found in the following:

- a) For Liquid End Size SD2 models, refer to paragraph 4.6.1, steps 4 thru 7.
- b) For Liquid End Sizes SD4, SD7, and SD8 models, refer to paragraph 4.6.2, steps 10 thru 17.

17. Connect the motor in compliance with the directions marked during the prior disconnection (see also Section 2: ELECTRICAL CONNECTIONS).

4.8 RESTARTING THE PUMP

1. Reconnect the pump to the piping system.

2. Check that capacity is set to 0%.

3. Open system suction and discharge shut-off valves and restart pump.

4. Set the pump to 100% to obtain faster priming of liquid end.

5. After priming, set the pump to the desired capacity. Retighten locking screw (320).

SECTION 5 PARTS LIST

GENERAL

1. This section gives information regarding replaceable components.

ILLUSTRATED PARTS LIST


1. Figure and Item Number Column
 - (a) The item numbers shown in the detailed parts list correspond to the item numbers appearing on the exploded view illustration. To find an unknown part number, locate the part on the illustration and note the item number. Look for the item number on the detailed parts list. The part number is on the same line. A dash (-) precedes non-illustrated item numbers.
2. Description Column
 - (a) The name of the item is in the description column.
3. Additional Information
 - (a) When "Consists of" is indented under a part, that part consists of the corresponding parts referenced by part number.
4. Part Number Column
 - (a) The supplier's part number is listed in the part number column.
5. Quantity Column
 - (a) The numbers appearing in the quantity column are the total quantity of the listed part required in its immediate assembly.
6. Reference Code Column
 - (a) This column is used to denote assembly and detail part variations among similar components (models) covered by this publication. When the symbol "A", "B", etc. is entered in this column, the part is used only in the model at which the symbol appears. If the column is blank, the part is used in all models.

5.1 PARTS LIST FOR DRIVE

| FIGURE NUMBER | ITEM NUMBER | DESCRIPTION | PART NUMBER | QUANTITY PUMP |
|---------------|-------------|--|-----------------|---------------|
| 8 | 10 | Drive Housing Assembly, D2, 43 SPM, (NE56C) | SD-40-01-NE56C | 1 |
| | | Drive Housing Assembly, D2, 43 SPM, (IEC71) | SD-40-01-IEC71 | 1 |
| | | Drive Housing Assembly, D2, 86 SPM, (NE56C) | SD-20-01-NE56C | 1 |
| | | Drive Housing Assembly, D2, 86 SPM, (IEC71) | SD-20-01-IEC71 | 1 |
| | | Drive Housing Assembly, D2, 173 SPM, (NE56C) | SD-10-01-NE56C | 1 |
| | | Drive Housing Assembly, D2, 173 SPM, (IEC71) | SD-10-01-IEC71 | 1 |
| | | Drive Housing Assembly, D2, 120 SPM, (NE56C) | SD-15-01-NE56C | 1 |
| | | Drive Housing Assembly, D2, 120 SPM, (IEC71) | SD-15-01-IEC71 | 1 |
| | | Drive Housing Assembly, D4/7, 43 SPM, (NE56C) | SD-40-06-NE56C | 1 |
| | | Drive Housing Assembly, D4/7, 43 SPM, (IEC71) | SD-40-06-IEC71 | 1 |
| | | Drive Housing Assembly, D4/7, 86 SPM, (NE56C) | SD-20-06-NE56C | 1 |
| | | Drive Housing Assembly, D4/7, 86 SPM, (IEC71) | SD-20-06-IEC71 | 1 |
| | | Drive Housing Assembly, D4/7, 173 SPM, (NE56C) | SD-10-06-NE56C | 1 |
| | | Drive Housing Assembly, D4/7, 173 SPM, (IEC71) | SD-10-06-IEC71 | 1 |
| | | Drive Housing Assembly, D4/7, 120 SPM, (NE56C) | SD-15-06-NE56C | 1 |
| | | Drive Housing Assembly, D4/7, 120 SPM, (IEC71) | SD-15-06-IEC71 | 1 |
| | | Drive Housing Assembly, D8, 43 SPM, (NE56C) | SD-40-10-NE56C | 1 |
| | | Drive Housing Assembly, D8, 43 SPM, (IEC71) | SD-40-10-IEC71 | 1 |
| | | Drive Housing Assembly, D8, 86 SPM, (NE56C) | SD-20-10-NE56C | 1 |
| | | Drive Housing Assembly, D8, 86 SPM, (IEC71) | SD-20-10-IEC-71 | 1 |
| | | Drive Housing Assembly, D8, 173 SPM, (NE56C) | SD-10-10-NE56C | 1 |
| | | Drive Housing Assembly, D8, 173 SPM, (IEC71) | SD-10-10-IEC71 | 1 |
| | | Drive Housing Assembly, D8, 120 SPM, (NE56C) | SD-15-10-NE56C | 1 |
| | | Drive Housing Assembly, D8, 120 SPM, (IEC71) | SD-15-10-IEC71 | 1 |
| | 11 | Gasket Motor (NEMA 56C Flanged Motor) | 2250115099 | 1 |
| | 11 | Gasket Motor (IEC71, V1 Flanged Motor) | 2250121099 | 1 |
| | 19 | O-Ring | 4080068031 | 1 |
| | 20 | Oil Drain Plug | 60086 | 1 |
| | 130 | Retaining Ring | 60064 | 1 |
| | 140 | Bearing | 4099994000 | 2 |
| | 150 | Retaining Ring | 4040107231 | 2 |
| | 160 | Seal, Side Cover | 2502110067N | 1 |
| | 170 | Stroke Adjust Screw | 61331 | 1 |
| | 205 | Socket Head Screw, M6 X 16, 304SS | 4350003375N | 3 |
| | 206 | Washer M6 304SS | 4340009065N | 3 |
| | 330 | Stroke Adjust Knob | 70066 | 1 |
| | 332 | Pan Head Screw, M6 X 20 | 70054 | 2 |
| | 335 | Knob, Sticker MacRoy | 60996 | 1 |
| | 340 | Bearing | 61116 | 1 |
| | - | Spring Pin (for IEC Motors Only) | 4010003031 | 3 |
| | - | Motor Mounting Bolt (IEC Motors: M8 X 25) | 4350038522 | 4 |
| | - | Motor Mounting Bolt (NEMA 56C Motors: 3/8-16 X 1) | 4050018119 | 4 |
| | - | Motor Mount Washer (IEC Motors: Spring Lockwasher 8mm) | 4340009002 | 4 |
| | - | Motor Mount Washer (NEMA 56C Motors: 3/8 SAE) | 40476 | 4 |
| | - | Base (Optional) | 61266 | 1 |
| | - | HEX HD, Screw, 3/8-16X1 GR5 | 4050018119 | 4 |
| | - | Washer, 3/8 | 40476 | 4 |
| | - | HEX Nut, 3/8-16NC Z PL | 4050066016 | 4 |
| | - | Gear Oil - 1 quart | 4070324030 | 1 |
| | 510 | Breather Plug/Oil Fill Cap, P/O Item 10 | 41065 | 1 |

- Items not shown.

Figure 9:
D2 Plastic Liquid End

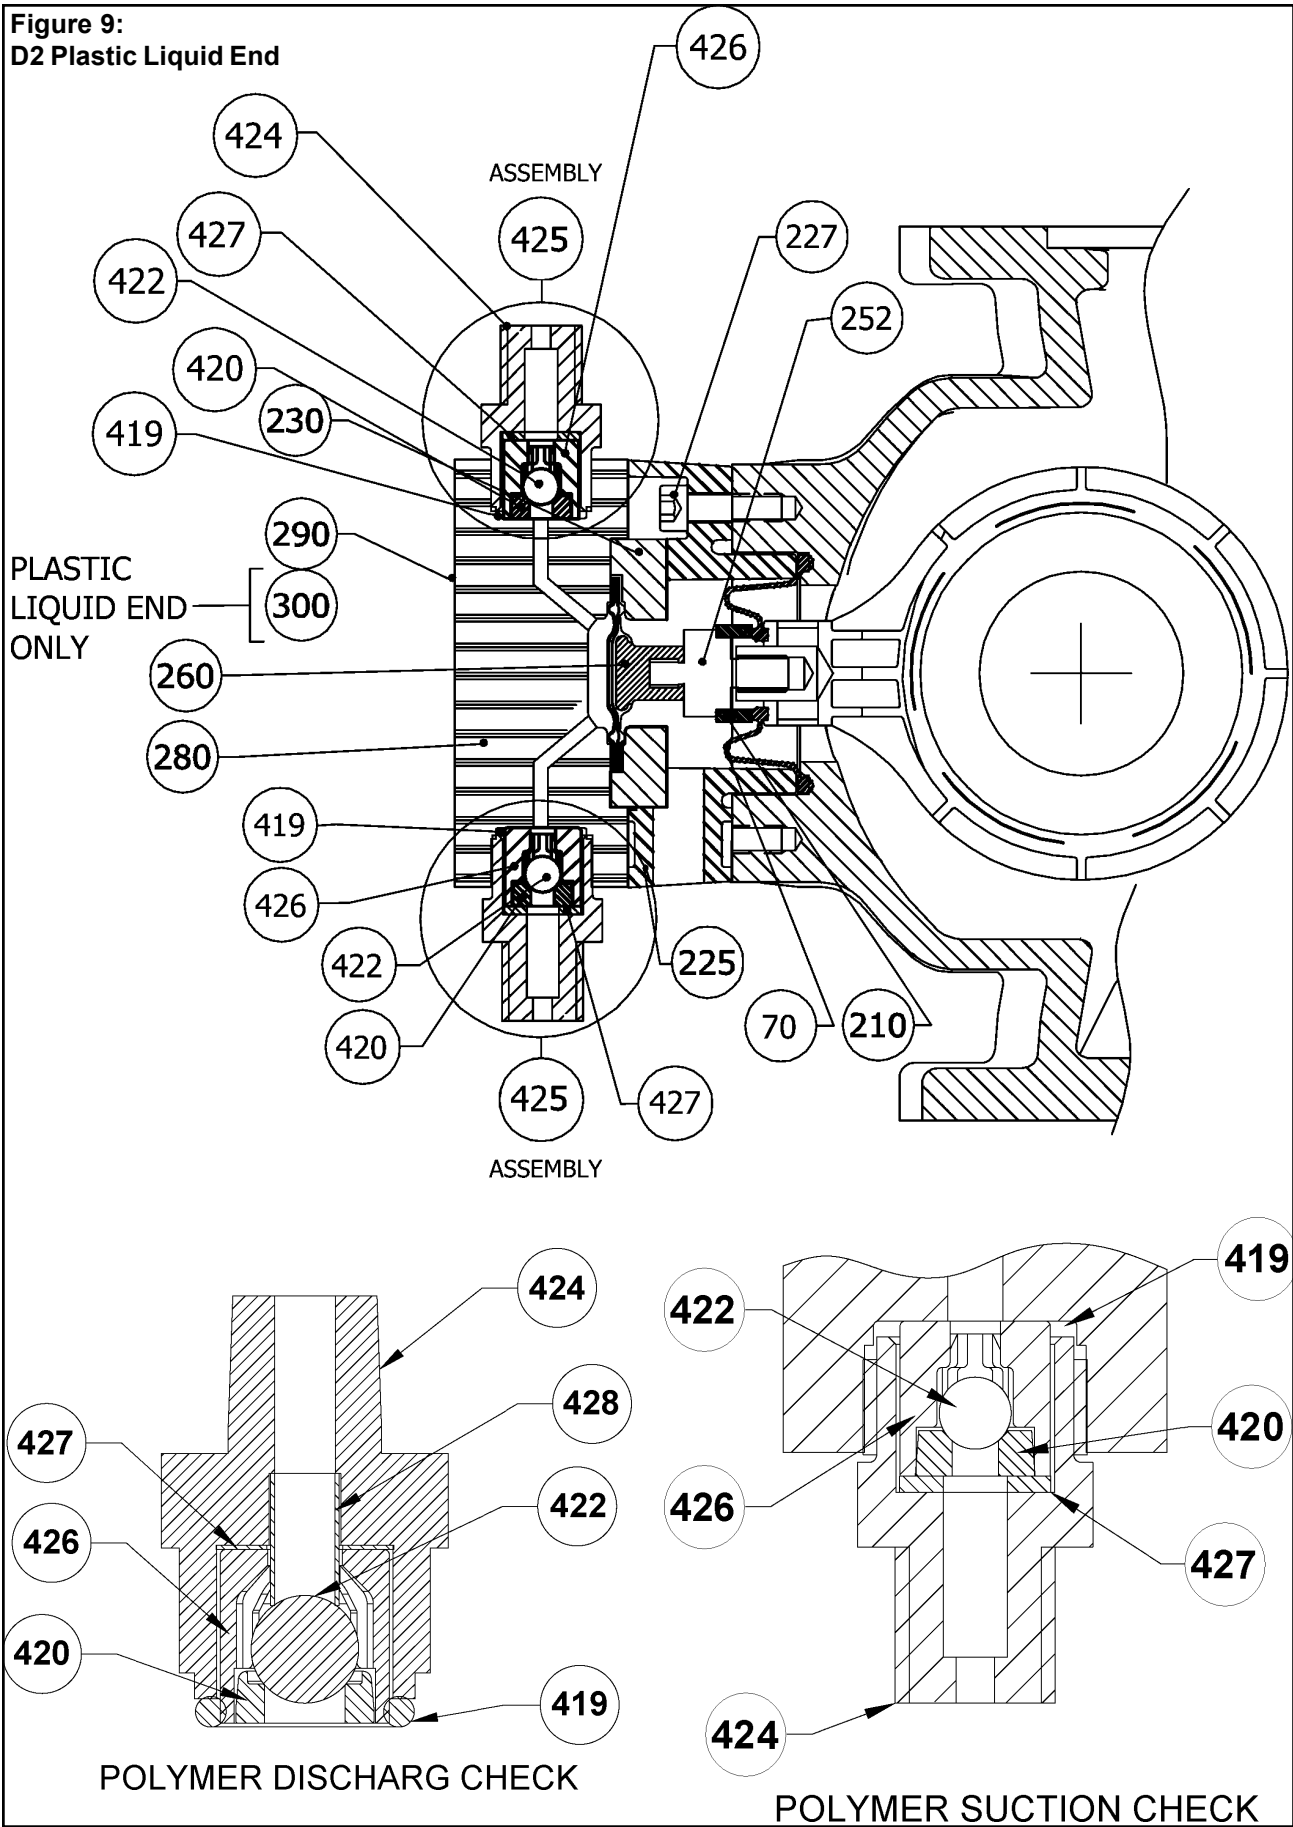


5.2 PARTS LIST FOR D2 PLASTIC LIQUID END PVC, PVDF, H₂SO₄, AND POLYMER-NPT / PVC, PVDF - TUBING.

| | | | |
|---------------|------------------------|---------------|--|
| Model: | Reference Code: | Model: | Reference Code: |
| D2__ 8P ____ | A (PVC NPT) | D2__ NP ____ | E (H ₂ SO ₄ NPT) |
| D2__ 8T ____ | B (PVC TUBE) | D2__ PP ____ | F (POLYMER NPT) |
| D2__ 2P ____ | C (PVDF NPT) | | |
| D2__ 2T ____ | D (PVDF TUBE) | | |

| FIGURE NUMBER | ITEM NUMBER | DESCRIPTION | PART NUMBER | QUANTITY | REF. CODE |
|---------------|-------------|---|-------------|----------|---------------|
| 9 | 70 | Diaphragm/Oil Seal Bellows | 60048 | 1 | |
| | 210 | Oil Seal Clamp Ring | 60043 | 1 | |
| | 225 | Spacer | 61035 | 1 | |
| | 227 | Pan Head Screw, M6 X 20 | 70054 | 4 | |
| | 230 | Diaphragm Seat Ring | 61088 | 1 | |
| | 252 | Adapter | 61083 | 1 | |
| | 260 | Diaphragm, PTFE | 30916 | 1 | |
| | 280 | Diaphragm Head, PVC | 61089 | 1 | A, B, E |
| | 280 | Diaphragm Head, PVDF | 61090 | 1 | C, D |
| | 280 | Diaphragm Head, POLYMER | 69001 | 1 | F |
| | -281 | Decal | 60534 | 1 | |
| | 290 | Pan Head Screw, #10-24 X 3/4 | 61059 | 1 | |
| | 300 | Flat Washer, 1/4 18.8SS | 4040005012 | 4 | A, E |
| | 300 | Flat Washer, #10 18.8SS | 4040002053 | 4 | B, C, D |
| | 419 | O-Ring, 0.549 ID X 103W(AFLAS) | 36103 | 4 | |
| | 419 | O-Ring, 2-113 Viton | 40905 | 2 | F |
| | 420 | Ball Seat, 9/32 Ball, C-22 | 61107 | 2 | A, B, C, D |
| | 420 | Ball Seat, CA20 | 61439 | 2 | E |
| | 420 | Ball Seat, 3/8 Ball, 316SS | 61270 | 2 | F |
| | 422 | Ball 9/32 Ceramic | 35751 | 2 | A, B, C, D, |
| | 422 | Ball 9/32, CA20 | 41655 | 2 | E |
| | 422 | Ball 3/8, 316SS | 4070014112 | 2 | F |
| | 424 | Valve Body 1/4" NPT | 36106 | 2 | A, C, E, F |
| | 424 | Fitting, 1/4 PVDF | 36081 | 2 | B, D |
| | 425 | Check Valve Assembly, PVC/PVDF - NPT | 61141 | 2 | A, C |
| | 425 | Check Valve Assembly, PVC/PVDF - TUBE | 61142 | 2 | B, D |
| | 426 | Ball Cartridge | 36113 | 2 | A, B, C, E |
| | 426 | Ball Cartridge | 36116 | 2 | F |
| | 427 | Molded Washer, Cartridge Valve | 36107 | 2 | |
| | 428 | Spring, HAST-C | 61275 | 2 | F |
| | -435 | Coupling Nut, PP 3/8 | 10299 | 2 | B, D |
| | -445 | Ferrule, 1/4" OD | 28663 | 2 | B, D |
| | - | Liquid End Kit, PVC/PVDF/H ₂ SO ₄ | RPM 099 | 2 | A, B, C, D, E |
| | - | Liquid End Kit, POLYMER | RPM 196 | 1 | F |

- Items not shown.

Figure 10:
SD2 Metallic Liquid End

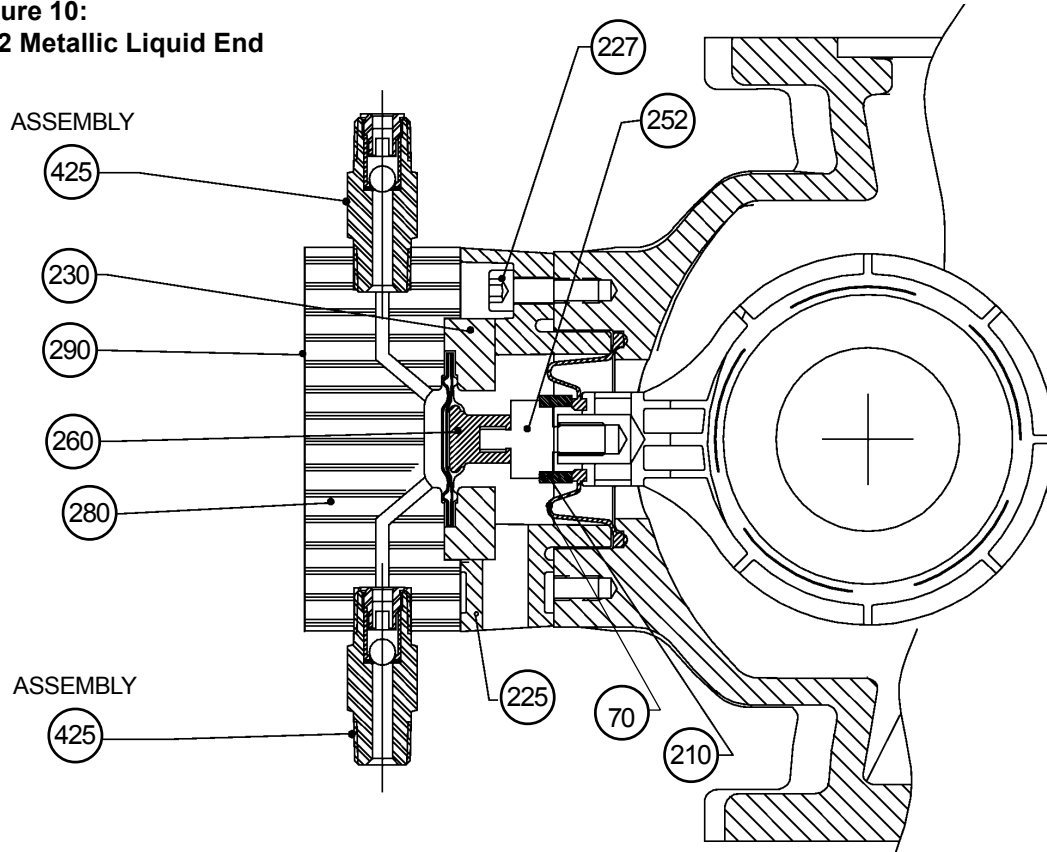


5.3 PARTS LIST FOR SD2 METALLIC LIQUID END STAINLESS STEEL-NPT

Model: SD2 __ 7P

| FIGURE NUMBER | ITEM NUMBER | DESCRIPTION | PART NUMBER | QUANTITY PUMP | REFERENCE CODE |
|---------------|-------------|------------------------------|-------------|---------------|----------------|
| 10 | 70 | Diaphragm/Oil Seal Bellows | 60048 | 1 | |
| | 210 | Oil Seal Clamp Ring | 60043 | 1 | |
| | 225 | Spacer | 61035 | 1 | |
| | 227 | Pan Head Screw, M6 X 20 | 70054 | 4 | |
| | 230 | Diaphragm Seat Ring | 61088 | 1 | |
| | 252 | Adapter | 61083 | 1 | |
| | 260 | Diaphragm | 30916 | 1 | |
| | 280 | Diaphragm Head | 61106 | 1 | |
| | 290 | Pan Head Screw, #10-24 X 3/4 | 61059 | 4 | |
| | 425 | Check Valve Assembly - NPT | 21082 | 2 | |
| | - | Liquid End Kit, 316 SS | RPM 101 | 1 | |

- Items not shown.

Figure 11:
SD4 Metallic Liquid End

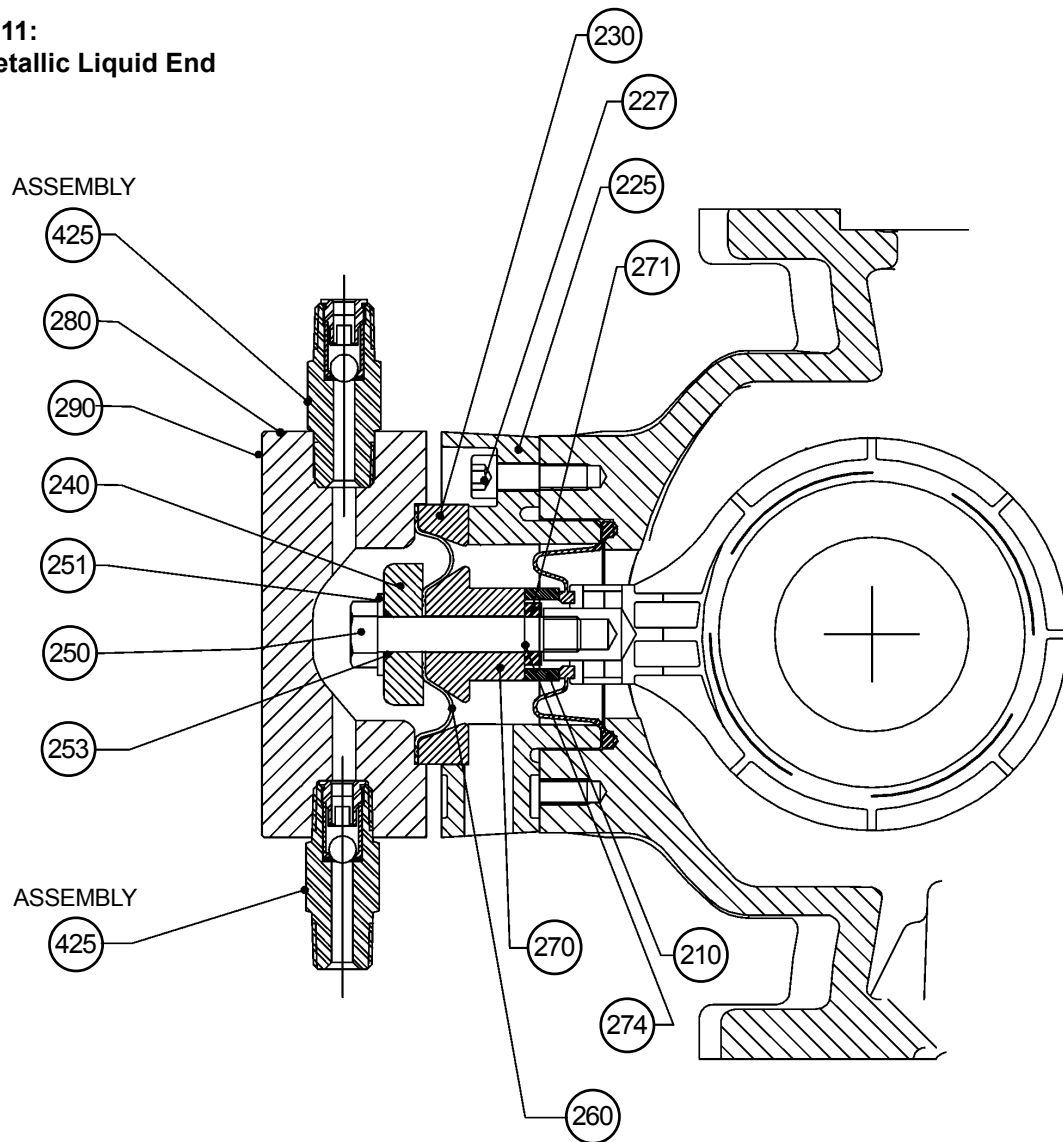

5.4 PARTS LIST FOR SD4 METALLIC LIQUID END STAINLESS STEEL-NPT

Model: SD4 __ 7P

| FIGURE NUMBER | ITEM NUMBER | DESCRIPTION | PART NUMBER | QUANTITY PUMP | REFERENCE CODE |
|------------------|----------------|--------------------------------|----------------|------------------|-------------------|
| 11 | 210 | Oil Seal Clamp Ring | 60043 | 1 | |
| | 225 | Spacer | 61035 | 1 | |
| | 227 | Pan Head Screw, M6 X 20 | 70054 | 4 | |
| | 230 | Supporting Ring | 61075 | 1 | |
| | 240 | Diaphragm Cap, 316SS | 61074 | 1 | |
| | 250 | Hex Head Screw, M8 X 50, 316SS | 61071 | 1 | |
| | 251 | Washer, 8M, 316SS | 61072 | 1 | |
| | 253 | O-Ring, Viton | 61073 | 1 | |
| | 260 | Diaphragm | 60995 | 1 | |
| | 270 | Support Nut, 316SS | 61051 | 1 | |
| | 271 | Hex Nut, M8 Thin | 61054 | 1 | |
| | 274 | PTFE Washer | 61055 | 1 | |
| | 280 | Diaphragm Head, 316SS | 61070 | 1 | |


- Items not shown.

5.4 PARTS LIST FOR D4 METALLIC LIQUID END STAINLESS STEEL-NPT

Model: D4 __ 7P ____ A (316SS)

| FIGURE NUMBER | ITEM NUMBER | DESCRIPTION | PART NUMBER | QUANTITY PUMP | REFERENCE CODE |
|---------------|-------------|------------------------------|-------------|---------------|----------------|
| 11 | 290 | Pan Head Screw, #10-24 X 3/4 | 61059 | 4 | |
| | 425 | Check Valve Assembly | CV202294 | 2 | |
| | - | Liquid End Kit, 316SS | RPM 104 | 1 | |

- Items not shown.

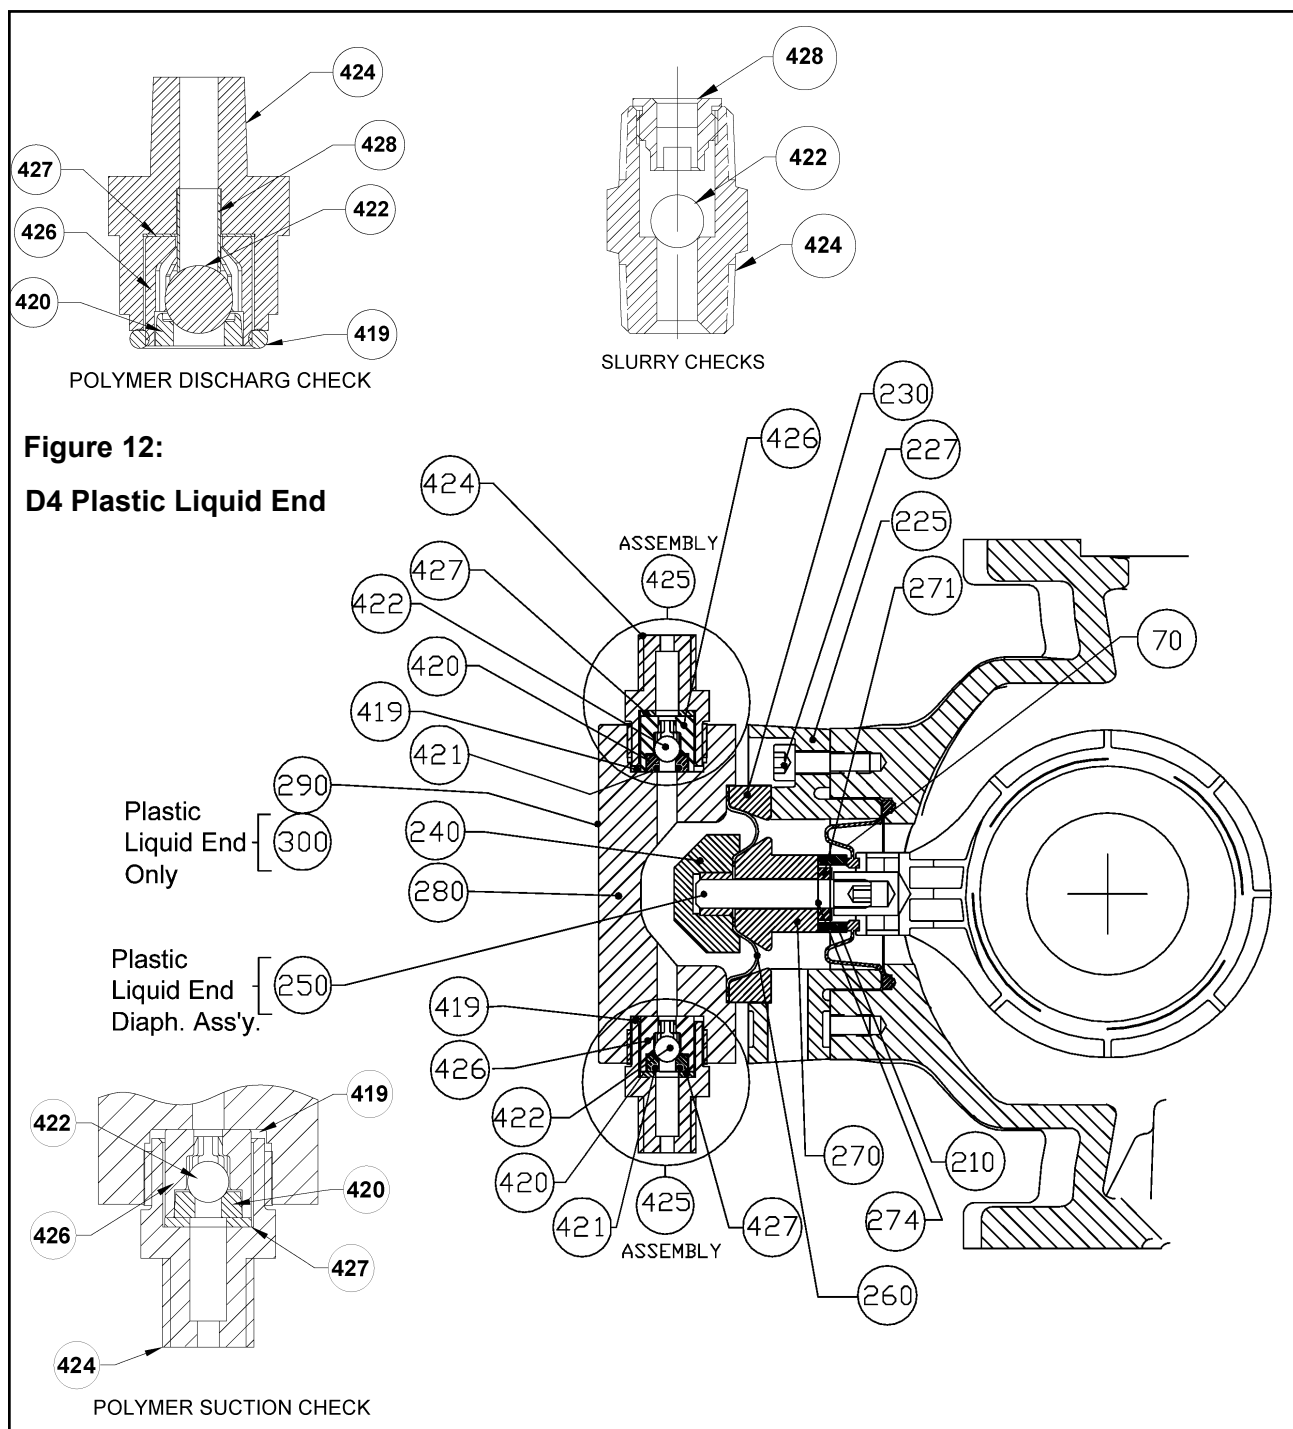

5.5 PARTS LIST FOR D4 PLASTIC LIQUID END PVC, PVDF, H₂SO₄, SLURRY, AND POLYMER-NPT / PVC, PVDF, AND , H₂SO₄-TUBING.

| Model: | Reference Code: | Model: | Reference Code: |
|---------------|------------------------|---------------|---|
| D4__ 8P _____ | A (PVC NPT) | D4__ NP _____ | E (H ₂ SO ₄ NPT) |
| D4__ 8T _____ | B (PVC TUBE) | D4__ NT _____ | F (H ₂ SO ₄ TUBE) |
| D4__ 2P _____ | C (PVDF NPT) | D4__ PP _____ | G (POLYMER) |
| D4__ 2T _____ | D (PVDF TUBE) | D4__ LP _____ | H (SLURRY) |

| FIGURE NUMBER | ITEM NUMBER | DESCRIPTION | PART NUMBER | QUANTITY PUMP | REFERENCE CODE |
|---------------|-------------|---|-------------|---------------|----------------------------|
| 12 | 70 | Diaphragm/Oil Seal Bellows | 60048 | 1 | |
| | 210 | Oil Seal Clamp Ring | 60043 | 1 | |
| | 225 | Spacer | 61035 | 1 | |
| | 227 | Pan Head Screw, M6 X 20 | 70054 | 4 | A, B, E, F, G, H |
| | 230 | Diaphragm Support Ring | 61075 | 1 | |
| | 240 | Diaphragm Cap - PVC | 61052 | 1 | |
| | 240 | Diaphragm Cap - 316SS | 61074 | | C, D |
| | 240 | Diaphragm Cap - PVDF | 61053 | 1 | |
| | 250 | Socket Set Screw, M8 X 50 | 61058 | 1 | |
| | 250 | Socket Set Screw, M8 X 50, 316SS | 61071 | 1 | H |
| | 253 | O-Ring, 8MM ID, T=2MM, Viton | 61073 | 1 | |
| | 260 | Diaphragm, PTFE | 60995 | 1 | |
| | 270 | Support Nut, 316SS | 61051 | 1 | A, B, E, F, G |
| | 271 | Hex Nut, M8 X 50 | 61054 | 1 | |
| | 274 | Washer, PTFE | 61055 | 1 | |
| | 280 | Diaphragm Head - PVC | 61056 | 1 | C, D H |
| | 280 | Diaphragm Head - PVDF | 61057 | 1 | |
| | 280 | Diaphragm Head - 316SS (SLURRY) | 61070 | 1 | |
| | - | Decal | 60534 | 1 | |
| | - | Decal, EAC Logo | 2530118099 | 1 | |
| | 290 | Pan Head Screw, #10-24 X 3/4 | 61059 | 4 | |
| | 300 | Flat Washer, #10 18.8SS | 404000205 | 4 | E, F G, H A, B, C, D |
| | 419 | O-Ring, AFLAS | 36103 | 2 | |
| | 419 | O-Ring, Viton | 40905 | 2 | |
| | 420 | Ball Seat, 0.375, PTFE | 39425 | 2 | E, F I A, B, C, D |
| | 420 | Ball Seat, 3/8" Ball, CA-20 | 61316 | 2 | |
| | 420 | Ball Seat, 3/8" Ball, 316SS | 61270 | 2 | |
| | 421 | O-Ring, AFLAS | 39413 | 2 | A, B, C, D G E, F |
| | 422 | Ball, 3/8" CERAMIC, +/- .001 | 10338 | 2 | |
| | 422 | Ball, 3/8" 316SS, Grade 50 | 4070014112 | 2 | |
| | 422 | Ball, 3/8" CA-20, Grade 50 | 4070014113 | 2 | H E, G F |
| | 422 | Ball, 7/16" 316SS, P/O 22312, Item 425 | CV102313 | 2 | |
| | 424 | Fitting, 1/4 PVDF - TUBE | 36081 | 2 | |
| | 424 | Fitting, 1/2 PVDF - TUBE | 36138 | 2 | H A, C B, D |
| | 424 | Check Valve Body, P/O 22312, Item 425 | 22313 | 2 | |
| | 425* | Check Valve Assembly - NPT, 1/4" | 36366 | 2 | |
| | 425* | Check Valve Assembly - TUBE, 1/2" | 36360 | 2 | E, F |
| | 425 | Check Valve Assembly - H ₂ SO ₄ | 39461 | 2 | |

- Items not shown.

* Item 425 includes items 419, 420, 422, 424, 426, and 427.


5.5 PARTS LIST FOR D4 PLASTIC LIQUID END PVC, PVDF, H₂SO₄, SLURRY, AND POLYMER-NPT / PVC, PVDF, AND , H₂SO₄-TUBING.

| | | | |
|----------------------|-------------------------------|----------------------|---|
| <u>Model:</u> | <u>Reference Code:</u> | <u>Model:</u> | <u>Reference Code:</u> |
| D4__ 8P ____ | A (PVC NPT) | D4__ NP ____ | E (H ₂ SO ₄ NPT) |
| D4__ 8T ____ | B (PVC TUBE) | D4__ NT ____ | F (H ₂ SO ₄ TUBE) |
| D4__ 2P ____ | C (PVDF NPT) | D4__ PP ____ | G (POLYMER) |
| D4__ 2T ____ | D (PVDF TUBE) | D4__ LP ____ | H (SLURRY) |

| FIGURE NUMBER | ITEM NUMBER | DESCRIPTION | PART NUMBER | QUANTITY PUMP | REF. CODE |
|------------------|----------------|---|----------------|------------------|--------------|
| 12 | 425 | Check Valve Assembly - SLURRY | 22312 | 2 | H |
| | 426 | Cartridge, 0.375 PVDF | 36116 | 2 | G, H, I |
| | 427 | Washer | 36107 | 2 | G, H, I |
| | - | Coupling Nut, 1/2" | 10411 | 2 | H |
| | 428 | Spring, Lee LC-016C-8-HAST-C, (Suction Only) | 61275 | 1 | I |
| | 428 | Retainer Sleeve | 61071 | 1 | J |
| | - | Liquid End Kit, PVC, PVDF NPT/TUBE | RPM 102 | 1 | A,B,C,D |
| | - | Liquid End Kit, H ₂ SO ₄ NPT | RPM 173 | 1 | G |
| | - | Liquid End Kit, H ₂ SO ₄ TUBE | RPM 174 | 1 | H |
| | - | Liquid End Kit, POLYMER | RPM 196 | 1 | I |
| | - | Liquid End Kit, SLURRY | RPM 212 | 1 | J |

THIS PAGE INTENTIONALLY BLANK

Figure 13: D7 & D8 Plastic Liquid End

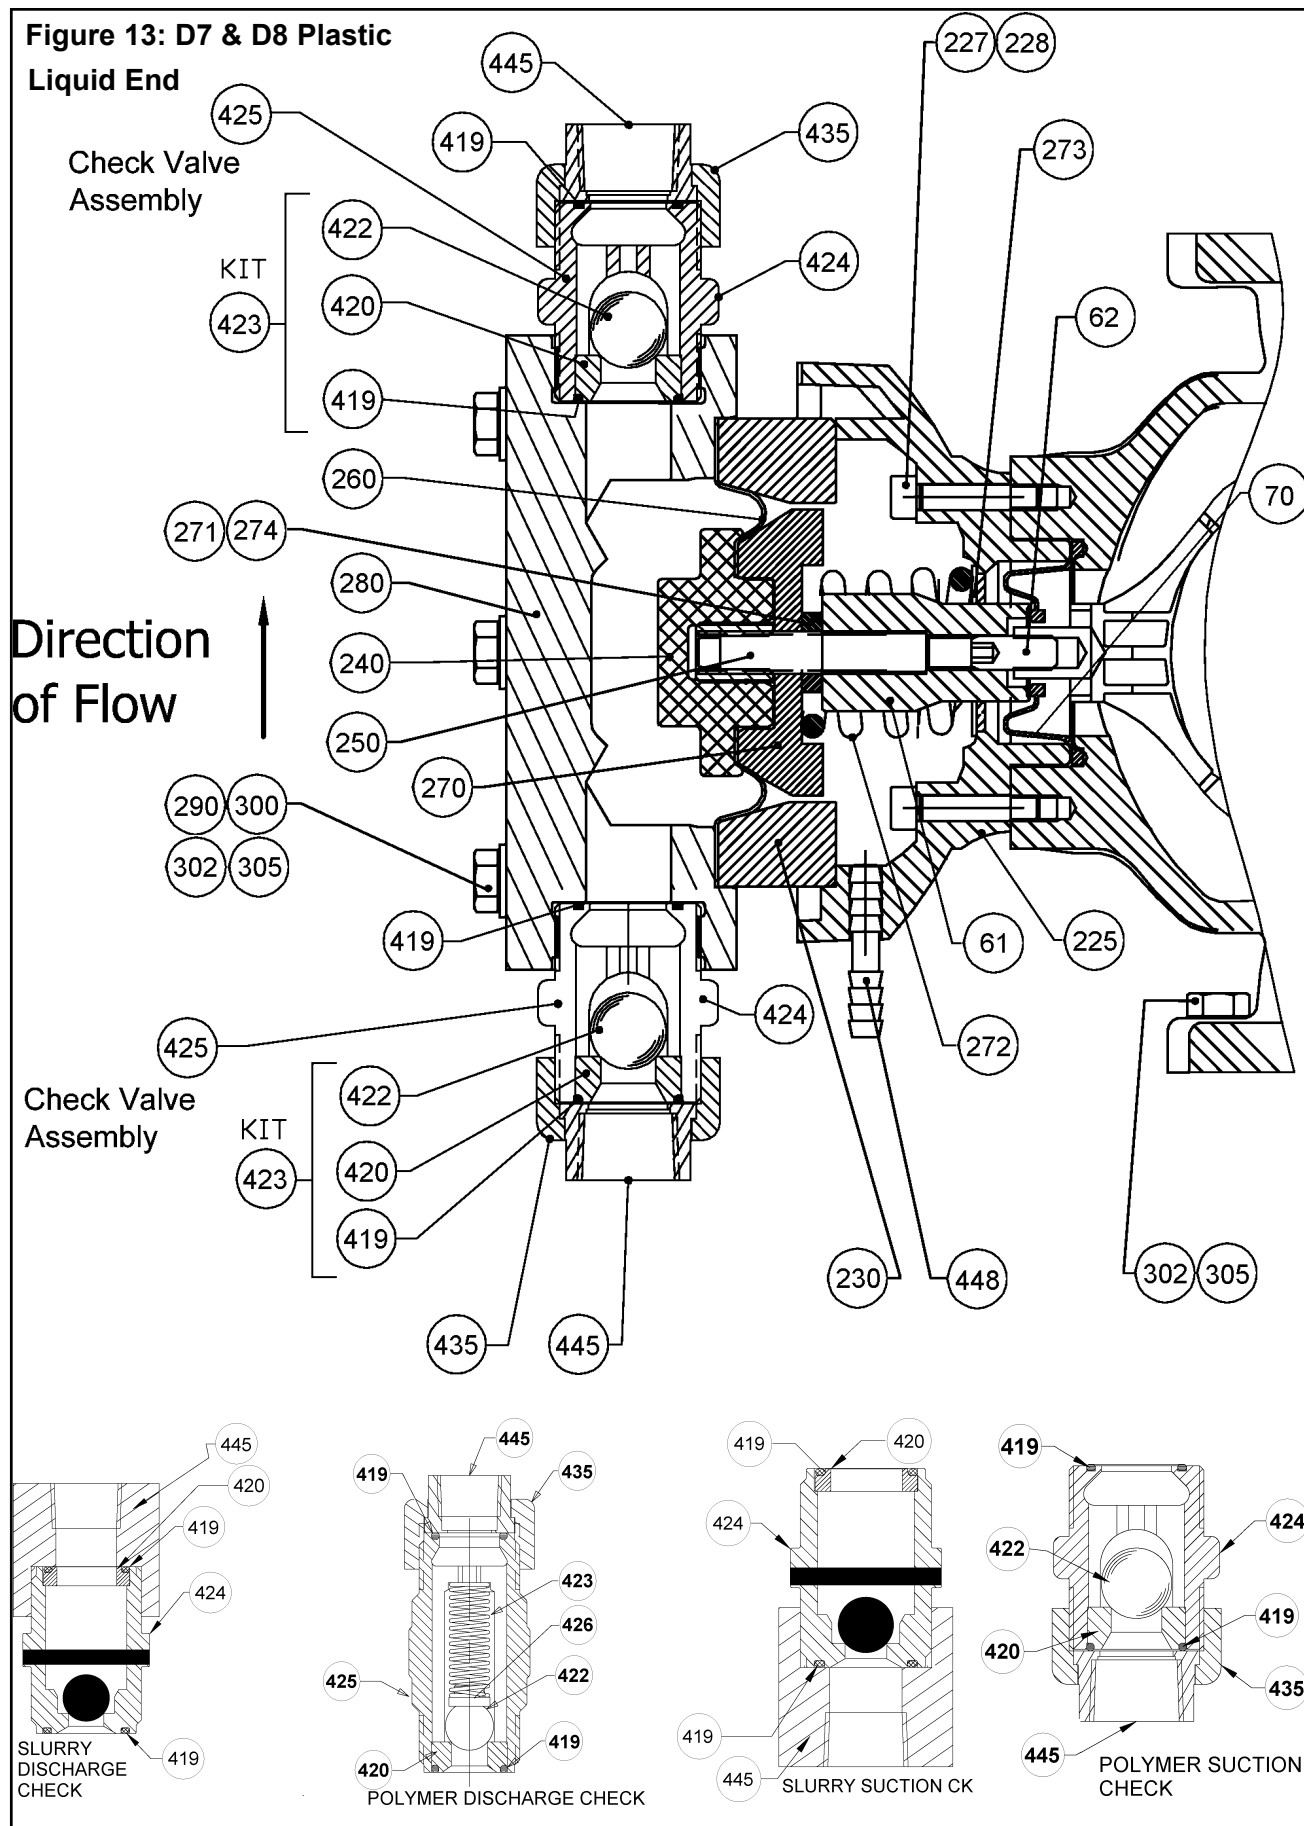

5.6 PARTS LIST FOR D7 AND D8 PLASTIC LIQUID END PVC-NPT/TUBING, PVDF-NPT, POLYMER-NPT, SLURRY-NPT, & H₂SO₄-NPT.

| | | | |
|-----------------|--|-----------------|--|
| Model: | Reference Code: | Model: | Reference Code: |
| D7/D8__ 8P ____ | A (PVC NPT) | D7/D8__ NP ____ | D (H ₂ SO ₄ NPT) |
| D7/D8__ 2P ____ | B (PVDF NPT) | D7/D8__ PP ____ | E (POLYMER NPT) |
| D7/D8__ LP ____ | C (SLURRY NPT) | D7/D8__ 8T ____ | F (PVC TUBE) |
| D7/D8__ NP ____ | D (H ₂ SO ₄ NPT) | | |

| FIG NO. | ITEM NO. | DESCRIPTION | D7 PART NO. | D8 PART NO. | QTY. PUMP | REF. CODE |
|---------|----------|---------------------------------------|-------------|-------------|-----------|---------------|
| 13 | 61 | Adapter | 61155 | 61155 | 1 | |
| | 62 | Socket Head Set Screw, M8 X 20 | 4350016075N | 4350016075N | 1 | |
| | 70 | Oil Seal Bellows | 60048 | 60048 | 1 | |
| | - | PTFE Seal Ring | 61154 | 61154 | 1 | |
| | 225 | Spacer | 61156 | 61156 | 2 | |
| | 227 | Socket Head Set Screw, M6 X 16, 304SS | 4350003375N | 4350003375N | 2 | |
| | 228 | Socket Head Set Screw, M6 X 30, 304SS | 4350047395N | 4350047395N | 1 | |
| | 230 | Diaphragm Support Ring | 60035 | 60070 | 1 | |
| | 240 | Diaphragm Cap - PVC | 60628 | 60633 | | A, C, D, E, |
| | 240 | Diaphragm Cap - PVDF | 60630 | 60635 | 1 | F |
| | 250 | Socket Set Screw, Dog PT M10 X 45 | 4350071284 | 4350071284 | 1 | B |
| | 260 | Diaphragm, PTFE | 60618 | 60624 | 1 | |
| | 270 | Support Nut | 61065 | 61146 | 1 | |
| | 271 | Hex Nut, M10 Thin, 316SS | 61068 | 61068 | 1 | |
| | 272 | Spring | 70081 | 70081 | 1 | |
| | 273 | Spring Cup | 61153 | 61153 | 1 | |
| | 280 | Head PVC | 60033 | 61148 | 1 | A, C, D, E, |
| | 280 | Head PVDF | 60031 | 61147 | 1 | F |
| | 281 | Decal, Tighten MacRoy Plastic | 60534 | 60534 | 1 | B |
| | 282 | Decal, EAC Logo | 2530118099 | 2530118099 | 6 | |
| | 290 | Hex Head Screw, M8 X 110mm, LG 304SS | 4350001655 | 4350001655 | 6 | |
| | 300 | Flat Washer, M8, Regular 304SS | 4340005085 | 4340005085 | 1 | A, B, C, D, |
| | 302 | Split Washer M8, 304SS | 4340009005 | 4340009005 | 6 | E, F |
| | -304 | Nut Spacer | 61152 | 61152 | 6 | |
| | 305 | Hex Nut, M8, 304SS | 4350000045 | 4350000045 | 4 | |
| | 419* | O-Ring, Viton, 2-117 | 4080068075 | 4080068075 | 4 | A, C, D, E, F |
| | 419* | O-Ring, PTFE, TEFLEX 2-117 | 40348 | 40348 | 2 | B |
| | 420* | Seat, PVDF | 2240173078 | 2240173078 | 2 | A, B, F |
| | 420* | Slurry Seal Ring, 316SS | 60819 | 60819 | 2 | C |
| | 420 | Seat, 5/8" Ball 316SS | 240173016 | 240173016 | 2 | E |
| | 420 | Seat, 5/8" Ball CA20 | 60855 | 60855 | 2 | D |
| | 422 | Ball, 14MM 316SS | 60709 | 60709 | 2 | C |
| | 422* | Ball, 5/8 Ceramic | 4070015171 | 4070015171 | 2 | A, B, F |
| | 422 | Ball, 5/8 CA20 | 4070014173 | 4070014173 | 2 | D |

- Items not shown.

* Items included as part of item number 425.

5.6 PARTS LIST FOR D7 AND D8 PLASTIC LIQUID END PVC-NPT/TUBING, PVDF-NPT, POLYMER-NPT, SLURRY-NPT, & H₂SO₄-NPT.


| | | | |
|-----------------|--|-----------------|--|
| Model: | Reference Code: | Model: | Reference Code: |
| D7/D8__ 8P ____ | A (PVC NPT) | D7/D8__ NP ____ | D (H ₂ SO ₄ NPT) |
| D7/D8__ 2P ____ | B (PVDF NPT) | D7/D8__ PP ____ | E (POLYMER NPT) |
| D7/D8__ LP ____ | C (SLURRY NPT) | D7/D8__ 8T ____ | F (PVC TUBE) |
| D7/D8__ NP ____ | D (H ₂ SO ₄ NPT) | | |

| FIG NO. | ITEM NO. | DESCRIPTION | D7 PART NO. | D8 PART NO. | QTY. PUMP | REF. CODE |
|---------|----------|---|-------------|-------------|-----------|---------------|
| 13 | 422 | Ball, 5/8 316SS | 4070014172 | 4070014172 | 2 | E |
| | 423 | Spring, Hastelloy, (Discharge Only) | 800123026 | 800123026 | 1 | E |
| | 423 | Kit - Ball, Seat & O-Rings, PVC, Includes items 419, 420, and 422 | 3050879500 | 3050879500 | 2 | A |
| | 423 | Kit - Ball, Seat & O-Rings, Includes items 419, 420, and 422 | 3050879700 | 3050879700 | 2 | B |
| | 423 | Kit-Ball, Body, & Dowel Pin, Includes Items 422, 424, & 426 | 61238 | 61238 | 2 | C |
| | 424* | Cartridge Body, PVDF | 60024 | 60024 | 2 | A, B, D, E, F |
| | 424 | Slurry Valve Body | 030156071 | 030156071 | 1 | E |
| | 424 | Ball Guide, PVC, Spring Loaded | 60818 | 60818 | 2 | C |
| | 425 | Check Valve Assembly, PVC, Includes Items 423 and 424 | 3050870007 | 3050870007 | 2 | A |
| | 425 | Check Valve Assembly, PVDF Includes Items 423 and 424 | 3050870008 | 3050870008 | 2 | B |
| | 425 | Check Valve Assembly, Slurry, Includes Items 419, 420, & 423 | 60827 | 60827 | 2 | C |
| | - | Dowel Pin, 3/16 X 1.5, 416SS | 60820 | 60820 | 2 | C |
| | 426 | Poppet, PVDF | 440090078 | 440090078 | 1 | E |
| | 435 | Union Nut, 1/2" PVC | 4320236038 | 4320236038 | 2 | |
| | 445 | Union End, 1/2" NPT PVC | 60117 | 60117 | 2 | A, C, D, E, F |
| | 445 | Union End, 1/2" NPT PVDF | 60119 | 60119 | 2 | B |
| | - | Elbow 1" MPT X 1" BARB PVDF | 61396 | 61395 | 2 | F |
| | - | Elbow 1/2" MPT X 1/2" BARB PVDF | 61396 | 61395 | 2 | F |
| | 448 | Blow-Off Nozzle | 470096073N | 470096073N | 1 | |
| | - | Liquid End Kit, PVCNPT/TUBE | RPM 135 | RPM 105 | 1 | A, F |
| | - | Liquid End Kit, PVDF NPT | RPM 136 | RPM 106 | 1 | B |
| | - | Liquid End Kit, Slurry NPT | RPM 215 | | 1 | C |
| | - | Liquid End Kit, Polymer NPT | RPM 211 | RPM 210 | 1 | E |
| | - | Liquid End Kit, H ₂ SO ₄ NPT | RPM 175 | RPM 183 | | D |
| | - | | | | | |

- Items not shown.

* Items included as part of item number 425.

Figure 14: D7 & D8 316SS
Liquid End

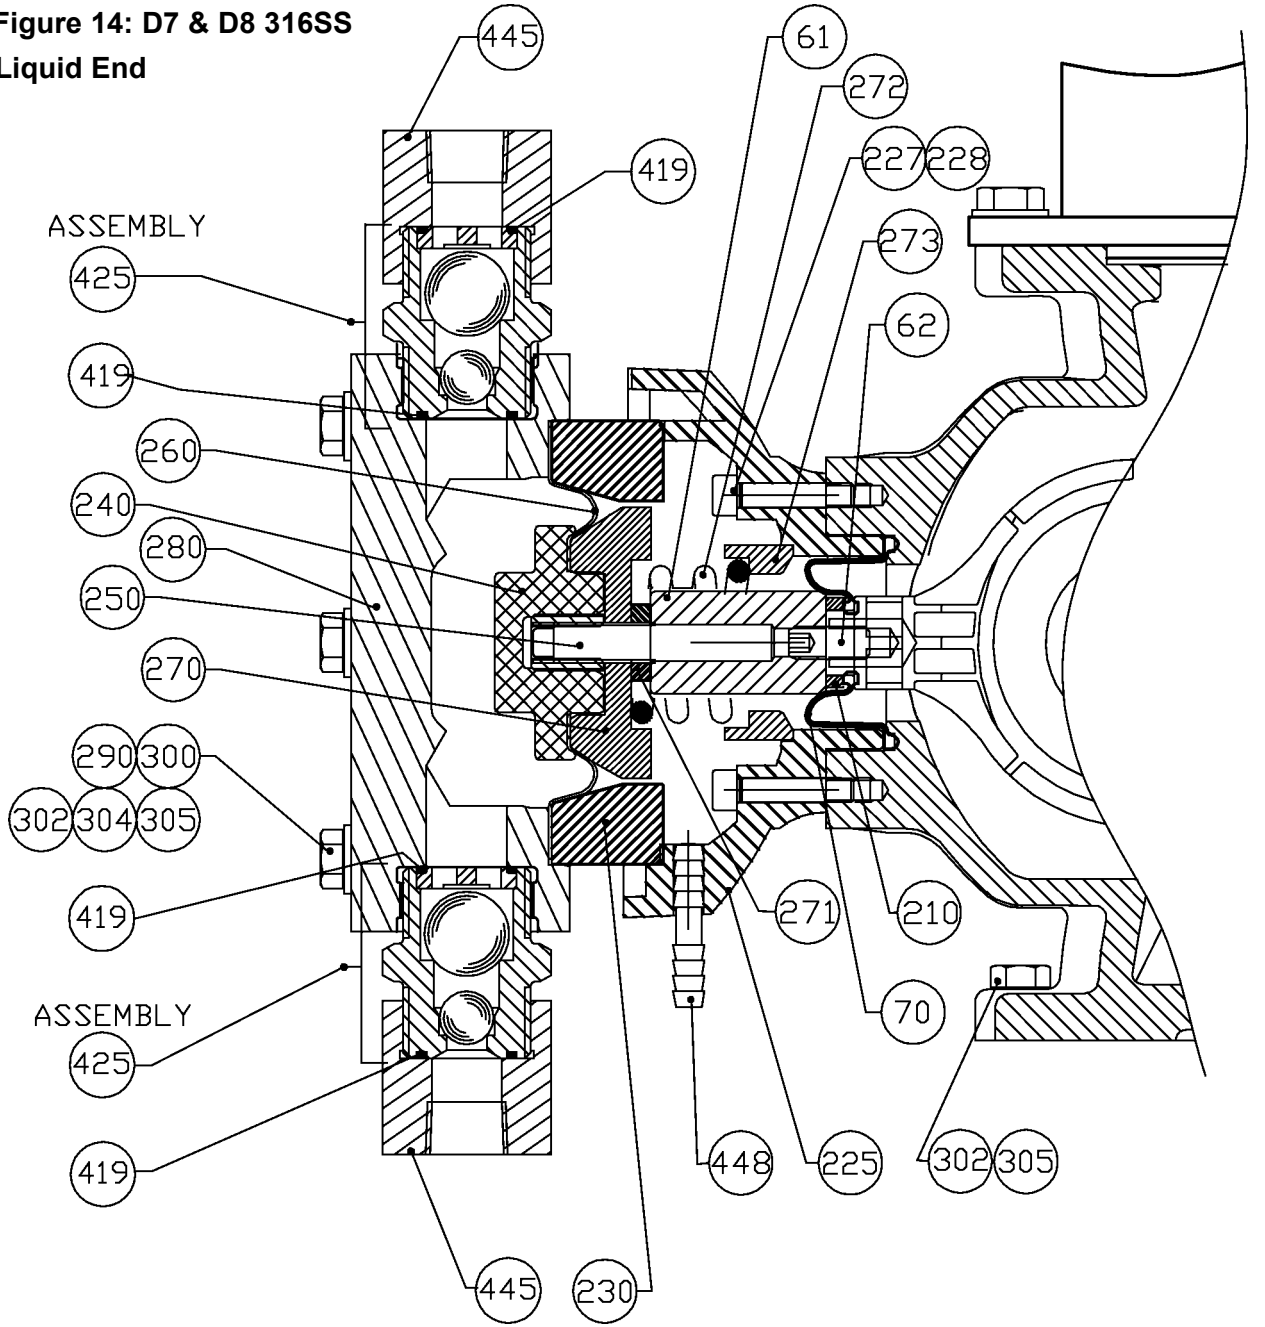

5.7 PARTS LIST FOR SD7 AND SD8 316SS-NPT LIQUID END

Model: SD6 __ 7P or SD8 __ 7P

| FIG NO. | ITEM NO. | DESCRIPTION | SD7 PART NO. | SD8 PART NO. | QTY. PUMP | REF. CODE |
|---------|----------|---------------------------------------|--------------|--------------|-----------|-----------|
| 14 | 61 | Adapter | 61155 | 61155 | 1 | |
| | 62 | Socket Head Set Screw, M8 X 20 | 4350016075N | 4350016075N | 1 | |
| | 70 | Oil Seal Bellows | 60048 | 60048 | 1 | |
| | 210 | PTFE Seal Ring | 61154 | 61154 | 1 | |
| | 225 | Spacer | 61156 | 61156 | 1 | |
| | 227 | Socket Head Set Screw, M6 X 16, 304SS | 4350003375N | 4350003375N | 2 | |
| | 228 | Socket Head Set Screw, M6 X 30, 304SS | 4350047395N | 4350047395N | 2 | |
| | 230 | Support Ring | 61066 | 61066 | 1 | |
| | 240 | Diaphragm Cap - 316SS | 60631 | 60631 | 1 | |
| | 250 | Socket Set Screw, Dog PT M10 X 45 | 4350071284 | 4350071284 | 1 | |
| | 260 | Diaphragm | 60618 | 60624 | 1 | |
| | 270 | Support Nut | 61065 | 61146 | 1 | |
| | 271 | Hex Nut, M10 Thin, 316SS | 61068 | 61068 | 1 | |
| | 272 | Spring | 70081 | 70081 | 1 | |
| | 273 | Spring Cup | 61153 | 61153 | 1 | |
| | 280 | Head, 316SS | 210760016 | 210760016 | 1 | |
| | 290 | Hex Head Screw, M8 X 110mm, LG 304SS | 4350001655 | 4350001655 | 6 | |
| | 300 | Flat Washer, M8, Regular 304SS | 4340005085 | 4340005085 | 6 | |
| | 302 | Split Washer M8, 304SS | 4340009005 | 4340009005 | 6 | |
| | 304 | Nut Spacer | 61152 | 61152 | 6 | |
| | 305 | Hex Nut, M8, 304SS | 4350000045 | 4350000045 | 6 | |
| | 419 | O-Ring, Viton | 4080068075 | 4080068075 | 4 | |
| | 425 | Check Valve Assembly | 3050876602 | 3050876602 | 2 | |
| | 445 | Coupling, 1/2" NPT | 60135 | 60135 | 2 | |
| | 448 | Blow-Off Nozzle | 470096073N | 470096073N | 1 | |
| | - | RPM Kit, 316SS | RPM137 | RPM107 | 1 | |

- Items not shown.

SECTION 6 TROUBLESHOOTING

| SYMPTOMS | POSSIBLE CAUSE | REMEDY |
|--------------------------------|--|--|
| 1. Pump motor won't operate. | <ul style="list-style-type: none"> a) Low process liquid level in the tank. b) Worn or dirty check valves. c) Blocked discharge line. d) Frozen liquid. e) Blown fuse. f) Open thermal overload device in motor starter. g) Broken wire. h) Low voltage. i) Pump not primed. j) Capacity adjustment set at zero. | <ul style="list-style-type: none"> a) Add liquid. b) Clean or replace. c) Clear line. d) Thaw liquid throughout pumping system. e) Replace fuse. f) Reset device. g) Locate and repair. h) Investigate and correct (wiring may be too tight). i) Allow suction line and pump head to fill with liquid before pumping against pressure. j) Readjust capacity. |
| 2. Insufficient pump delivery. | <ul style="list-style-type: none"> a) Incorrect capacity adjustment. b) Incorrect pump speed. c) Starved suction. d) Leaky suction piping. e) High suction lift. f) Liquid near boiling. g) Leaky safety valve in discharge line. h) High liquid viscosity. i) Worn or dirty check valve seats. | <ul style="list-style-type: none"> a) Readjust capacity setting. b) Match line voltage and frequency to pump motor data plate. c) Increase piping size or suction head. d) Repair piping. e) Rearrange equipment to decrease lift and/or install foot valve in suction line. f) Cool liquid or increase suction head. g) Repair or replace valve. h) Reduce viscosity (e.g., heat or dilute liquid), or consult the factory for special check valve options. i) Clean or replace. |

| SYMPTOMS | POSSIBLE CAUSE | REMEDY |
|--|---|---|
| 3. Erratic pump delivery. | a) Leaky suction piping. b) Leaky safety valve. c) Insufficient suction head. d) Liquid near boiling. e) Worn or dirty check valves. f) Clogged or dirty line strainer. | a) Repair piping. b) Repair or replace valve. c) Raise suction tank level and/or install foot valve in suction line. d) Cool liquid or increase suction head. e) Clean or replace. f) Clean strainer. |
| 4. Motor and pump body hot. | a) Normal operating temperature of both motor and pump body is frequently uncomfortable to the touch. However, neither should exceed 200°F (93°C). b) Power supply does not match electrical requirement of motor. c) Pump is being operated at greater than rated performance. d) Pump improperly lubricated. | a) N/A b) Insure proper matching of power supply and motor. c) Reduce pressure or stroke speed. If this is not practical, contact service facility. d) Drain oil and refill with proper amount of recommended lubricant. |
| 5. Pump still pumps even at zero capacity setting. | a) Misadjusted capacity knob. b) Insufficient discharge pressure. | a) Readjust capacity setting. b) Correct condition (e.g., install a back pressure valve). |
| 6. Gear noise. | a) Excessive backlash. b) Worn bearings. c) Wrong or insufficient lubricant. | a) Consult service facility. b) Consult service facility. c) Replace or replenish lubricant. |
| 7. Loud knock with each stroke. | a) Excessive gear set wear. b) Worn bearings. | a) Consult service facility. b) Consult service facility. |
| 8. Noisy operation in liquid end. | a) Noise in check valves. | a) Ball checks move up and down with some force. A distinct "clicking" noise is normal, especially in metal piping systems. |

THIS PAGE INTENTIONALLY BLANK

